


ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[RHD]

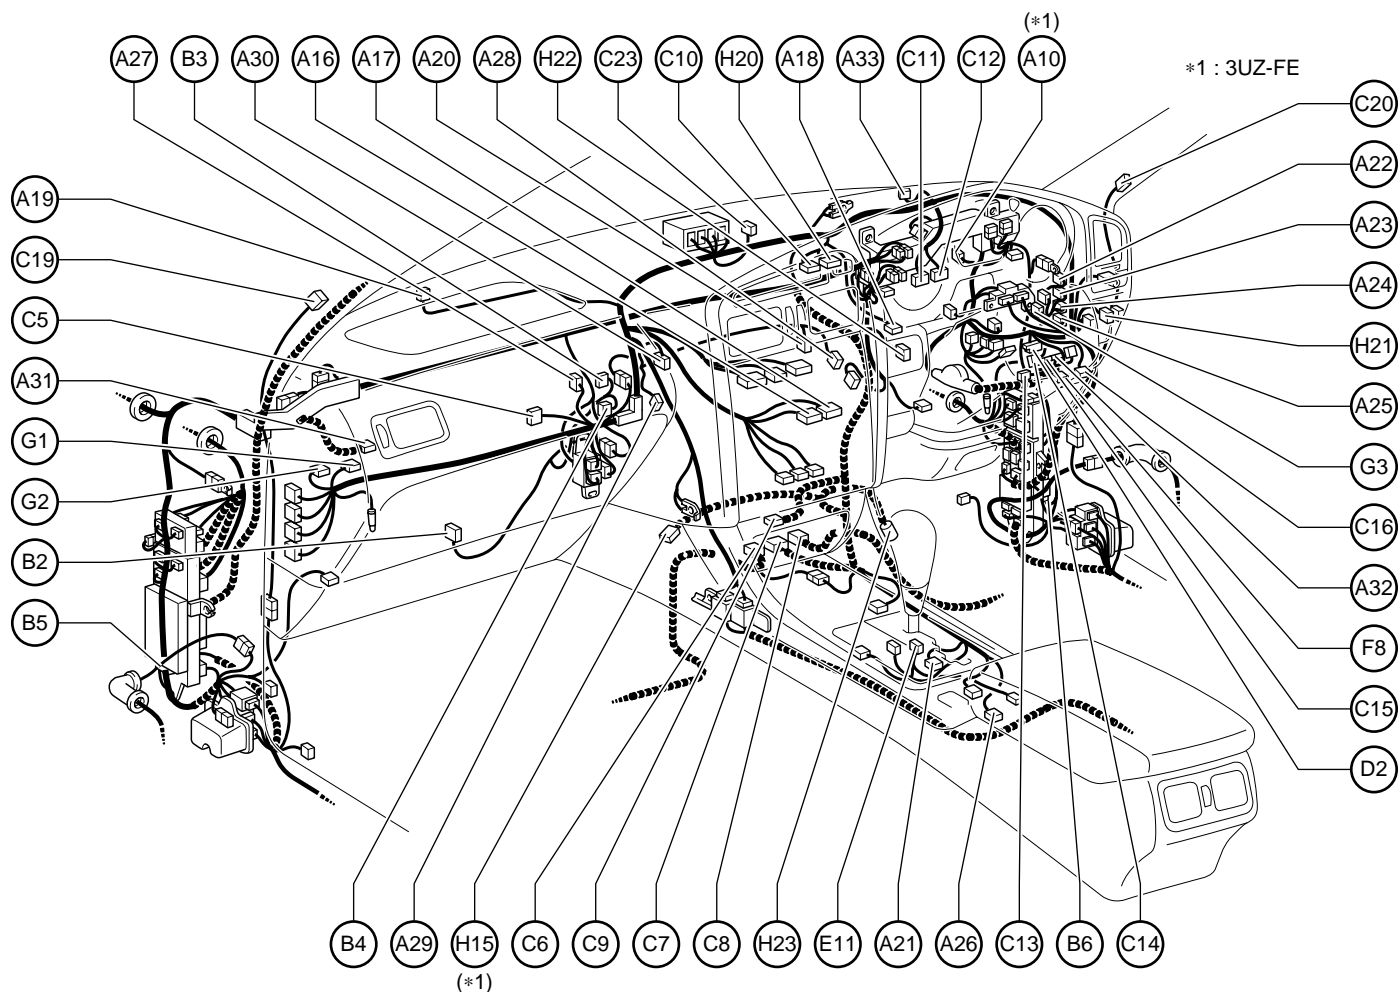

- A10 Accel Position Sensor
- A16 A/C Control Assembly
- A17 A/C Control Assembly
- A18 A/C Room Temp. Sensor
- A19 A/C Solar Sensor
- A20 A/C Thermistor
- A21 A/T Shift Position Illumination
- A22 ABS & TRC & VSC ECU
- A23 ABS & TRC & VSC ECU
- A24 ABS & TRC & VSC ECU
- A25 ABS & TRC & VSC ECU
- A26 ABS Deceleration Sensor
- A27 Air Inlet Control Servo Motor
- A28 Air Mix Control Servo Motor (Driver Side)
- A29 Air Mix Control Servo Motor (Front Passenger Side)
- A30 Air Vent Mode Control Servo Motor
- A31 Airbag Squib (Front Passenger Airbag Assembly)
- A32 Airbag Squib (Steering Wheel Pad)
- A33 Automatic Light Control Sensor
- B 2 Blower Motor
- B 3 Blower Motor Controller
- B 4 Blower Motor Controller
- B 5 Body ECU No.1
- B 6 Body ECU No.2
- C 5 CD Automatic Changer
- C 6 Center Airbag Sensor Assembly
- C 7 Center Airbag Sensor Assembly

- C 8 Center Airbag Sensor Assembly
- C 9 Cigarette Lighter
- C10 Clock
- C11 Combination Meter
- C12 Combination Meter
- C13 Combination SW
- C14 Combination SW
- C15 Combination SW
- C16 Combination SW
- C19 Curtain Shield Airbag Squib LH
- C20 Curtain Shield Airbag Squib RH
- C23 Center Speaker
- D 2 DLC3
- E 11 ECT Pattern Select SW
- F 8 Fuel Lid Opener SW
- G 1 Glove Box Light
- G 2 Glove Box Light SW
- G 3 Gateway ECU
- H15 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H20 Hazard SW
- H21 Headlight Beam Level Control SW
- H22 Headlight Cleaner SW
- H23 Heated Oxygen Sensor (Bank 2 Sensor 2)