


STARTER RELAY INSPECTION

ST056-02

1. REMOVE RELAY BOX COVER
2. REMOVE STARTER RELAY

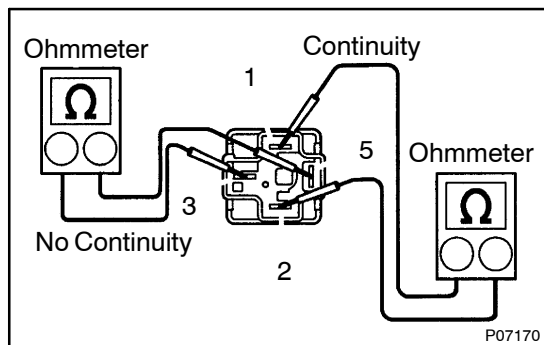


3. INSPECT STARTER RELAY

- (a) Inspect the relay continuity.
 - (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

 - (2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

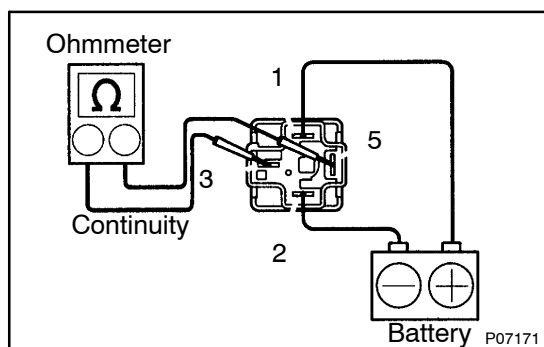

- (b) Inspect the relay operation.
 - (1) Apply battery positive voltage across terminals 1 and 2.
 - (2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.
4. REINSTALL STARTER RELAY
 5. REINSTALL RELAY BOX COVER