


Connector Joining Wire Harness and Wire Harness

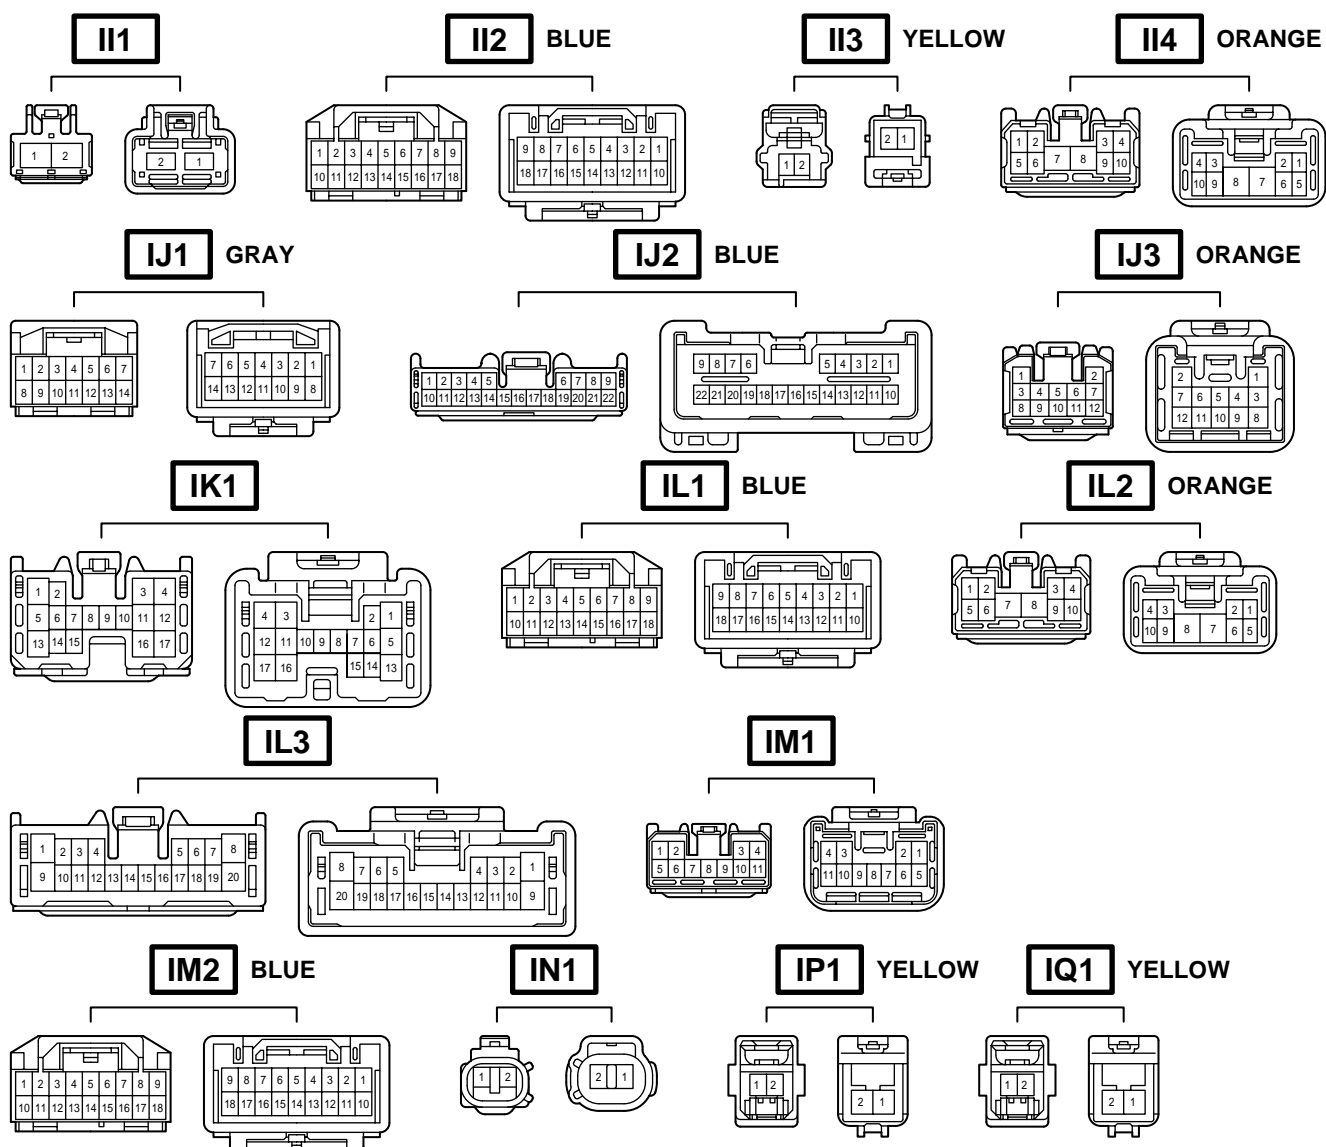

| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|------|--|
| II1 | Engine Room Main Wire and Cowl Wire (Near the Passenger Side J/B) |
| II2 | |
| II3 | |
| II4 | |
| IJ1 | Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit) |
| IJ2 | |
| IJ3 | |
| IK1 | Front Door RH Wire and Cowl Wire (Right Kick Panel) |
| IL1 | Floor No.1 Wire and Cowl Wire (Right Kick Panel) |
| IL2 | |
| IL3 | |
| IM1 | Instrument Panel Wire and Floor No.1 Wire (Front RH Side of the Shift Lever) |
| IM2 | |
| IN1 | Floor No.1 Wire and Cowl Wire (Front LH Side of the Shift Lever) |
| IP1 | Floor No.2 Wire and Curtain Shield Airbag No.1 Wire (Left Side of Instrument Panel) |
| IQ1 | Floor No.1 Wire and Curtain Shield Airbag No.2 Wire (Right Side of Instrument Panel) |