

SERVICE HINTS

I13 INNER MIRROR

1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

4-GROUND : Always continuity

: PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
I13		78 (LHD)		J16	A	74 (LHD)		J42		88 (RHD)	
		90 (RHD)		J31	B	88 (RHD)		R17		78 (LHD)	
J7	A	74 (LHD)		J32		88 (RHD)					
J8		74 (LHD)		J37		88 (RHD)		R18		78 (LHD)	
J10		74 (LHD)		J41	B	88 (RHD)				92 (RHD)	

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	59 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	59 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)
2D	60 (LHD)	Roof Wire and Passenger Side J/B (Right Kick Panel)
	60 (RHD)	Roof Wire and Passenger Side J/B (Left Kick Panel)
2F	60 (LHD)	Cowl Wire and Passenger Side J/B (Right Kick Panel)
	60 (RHD)	Cowl Wire and Passenger Side J/B (Left Kick Panel)
2G	61 (LHD)	Cowl Wire and Passenger Side J/B (Right Kick Panel)
	61 (RHD)	Cowl Wire and Passenger Side J/B (Left Kick Panel)
2H	61 (LHD)	Cowl Wire and Passenger Side J/B (Right Kick Panel)
	61 (RHD)	Cowl Wire and Passenger Side J/B (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	98 (LHD)	Front Door LH Wire and Cowl Wire (Left Kick Panel)
	108 (RHD)	
IK1	100 (LHD)	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL1	110 (RHD)	

: GROUND POINTS


Code	See Page	Ground Points Location
EB	96 (LHD)	Left Fender
IF	98 (LHD)	Left Kick Panel
	108 (RHD)	
II	98 (LHD)	Right Side of the Cowl Panel
	108 (RHD)	Cowl Side Panel RH

: SPLICE POINTS


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	110 (RHD)	Cowl Wire	I6	100 (LHD)	Cowl Wire

AUTOMATIC GLARE-RESISTANT EC MIRROR

I13 ORANGE




J7 (A) GRAY

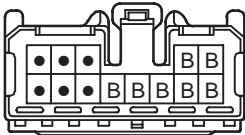


(Hint : See Page 7, 23, 39)

J8

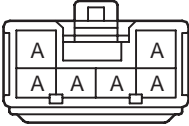


(Hint : See Page 7, 23, 39)

J10 ORANGE

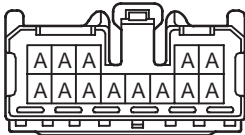


(Hint : See Page 7, 23, 39)

J16 (A)

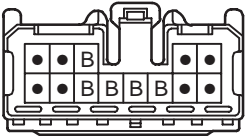


(Hint : See Page 7, 23, 39)

J31 (B)

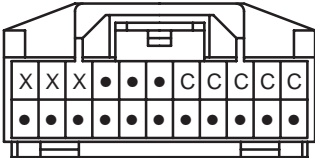

(Hint : See Page 7, 23, 39)

J32

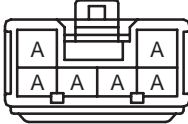


(Hint : See Page 7, 23, 39)

J37




(Hint : See Page 7, 23, 39)

J41 (B)

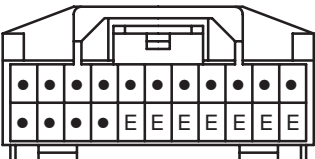


(Hint : See Page 7, 23, 39)

J42

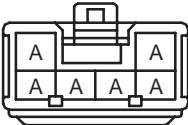

(Hint : See Page 7, 23, 39)

R17

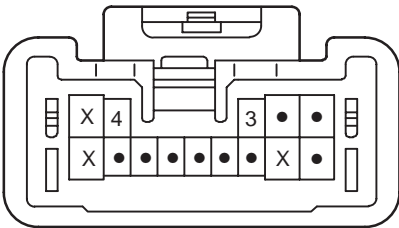

R18

