

REAR CONSOLE BOX REMOVAL


PROCEDURE

1. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY

a. Disengage the claw and 2 clips as shown in the illustration.


Note

- As the claw may be damaged, make sure to disengage it carefully.
- If the claw is damaged, replace the No. 1 upper box plate with a new one.

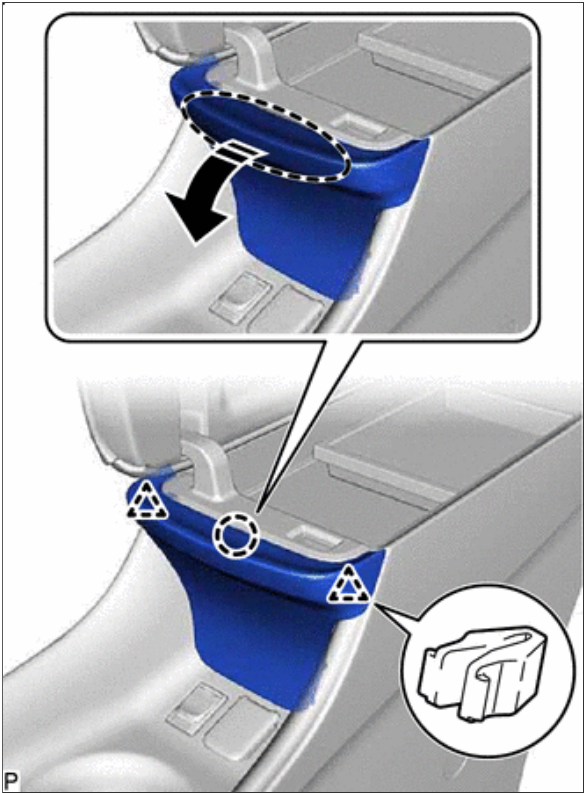

	Place Hand Here
	Remove in this Direction

b. Using a moulding remover, disengage the 12 clips and 2 guides as shown in the illustration.

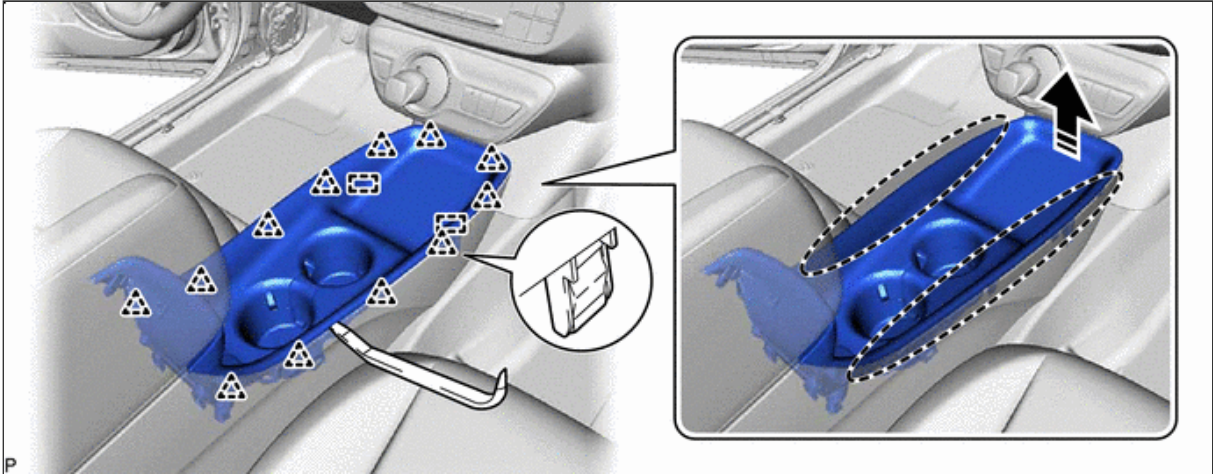

	Insert Moulding Remover Here		Remove in this Direction
--	------------------------------	--	--------------------------

c. Disconnect each connector.

d. Disengage each clamp to remove the upper console panel sub-assembly and No. 1 upper box plate.


2. REMOVE NO. 1 UPPER BOX PLATE

a. Disengage the 2 claws to remove the No. 1 upper box plate.




3. REMOVE CONSOLE CUP HOLDER BOX SUB-ASSEMBLY

a. Remove the 6 screws and console cup holder box sub-assembly.

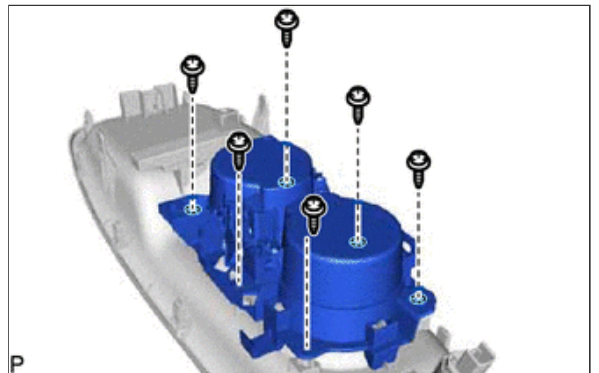


4. REMOVE CONSOLE REAR END PANEL SUB-ASSEMBLY


a. Using a moulding remover, disengage the clip as shown in the illustration.

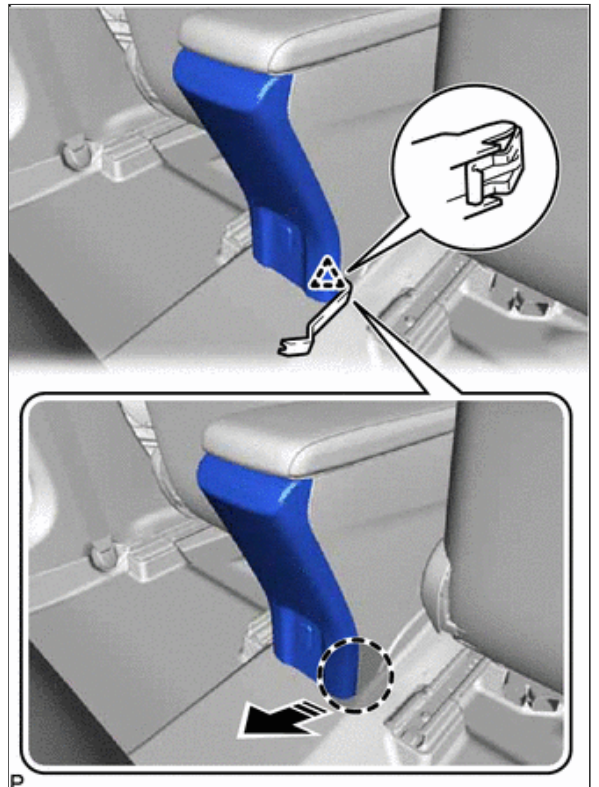

Insert Moulding Remover Here


	Remove in this Direction
--	--------------------------

b. Using a moulding remover, disengage the clip as shown in the illustration.

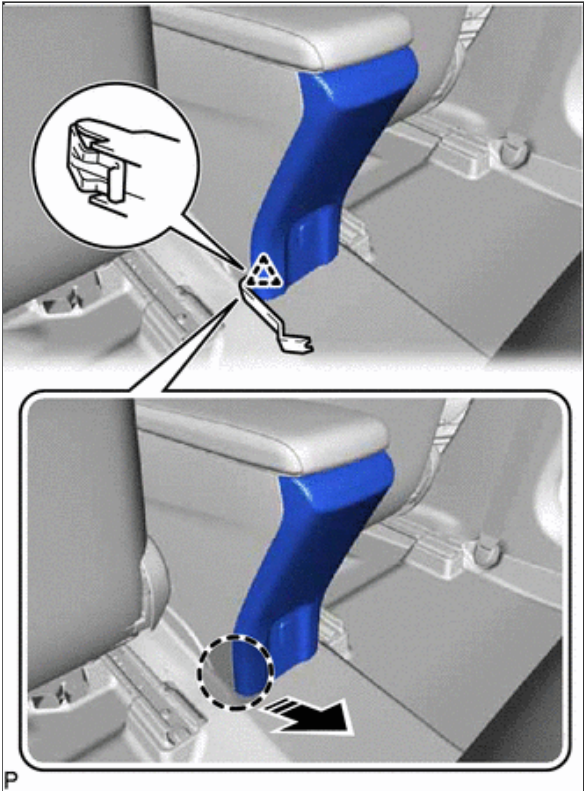

	Insert Moulding Remover Here
	Remove in this Direction

- c. Disengage the 6 clips as shown in the illustration.
- d. Disconnect the connector to remove the console rear end panel sub-assembly.

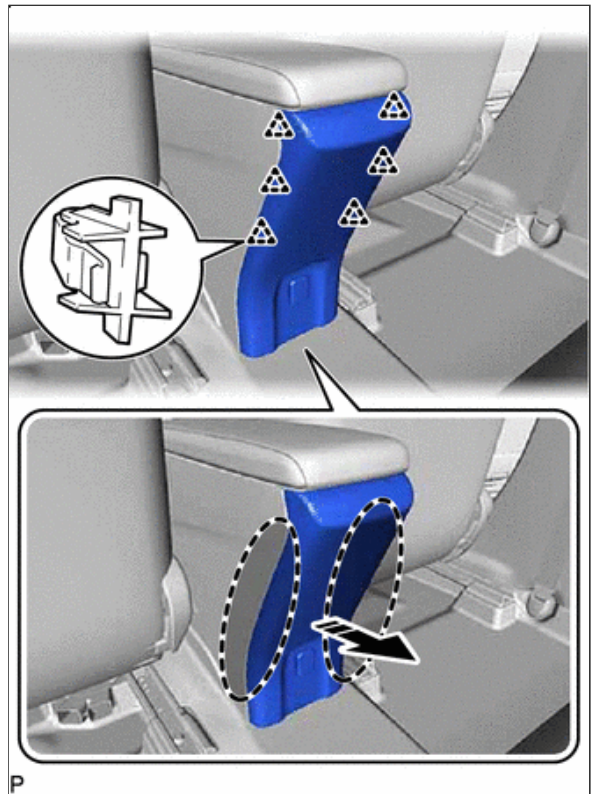


P

	Place Hand Here
	Remove in this Direction

5. REMOVE REAR CONSOLE BOX ASSEMBLY

- Remove the 6 bolts and rear console box assembly.

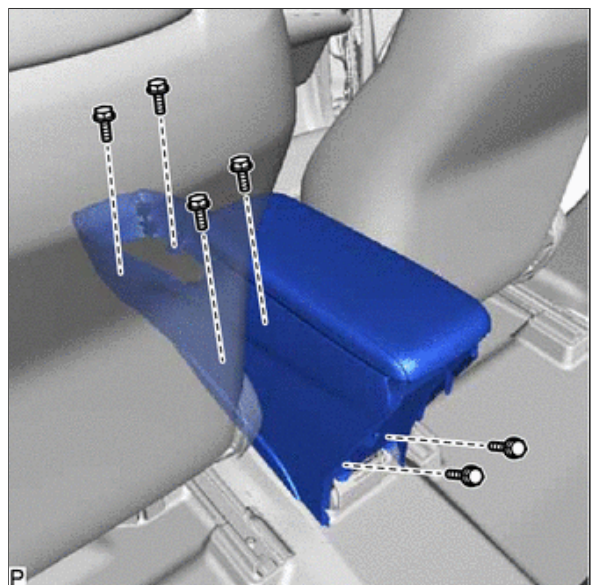

P