


# ELECTRICAL WIRING ROUTING

## Position of Parts in Instrument Panel

[LHD]

\*1 : 3UZ-FE

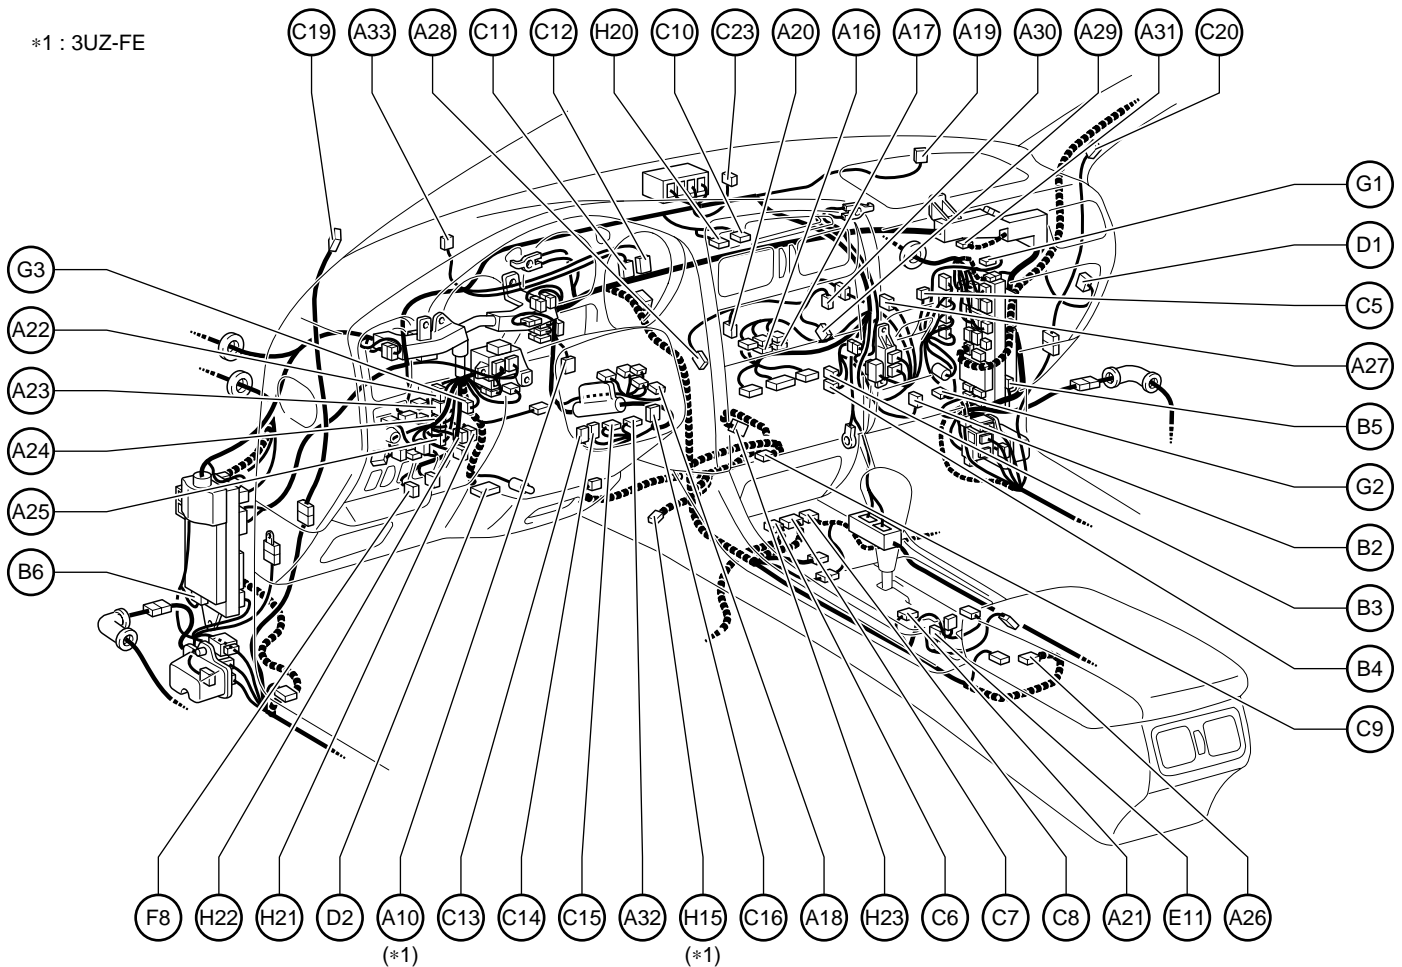

A10 Accel Position Sensor  
 A16 A/C Control Assembly  
 A17 A/C Control Assembly  
 A18 A/C Room Temp. Sensor  
 A19 A/C Solar Sensor  
 A20 A/C Thermistor  
 A21 A/T Shift Position Illumination  
 A22 ABS & TRC & VSC ECU  
 A23 ABS & TRC & VSC ECU  
 A24 ABS & TRC & VSC ECU  
 A25 ABS & TRC & VSC ECU  
 A26 ABS Deceleration Sensor  
 A27 Air Inlet Control Servo Motor  
 A28 Air Mix Control Servo Motor (Driver Side)  
 A29 Air Mix Control Servo Motor (Front Passenger Side)  
 A30 Air Vent Mode Control Servo Motor  
 A31 Airbag Squib (Front Passenger Airbag Assembly)  
 A32 Airbag Squib (Steering Wheel Pad)  
 A33 Automatic Light Control Sensor

B 2 Blower Motor  
 B 3 Blower Motor Controller  
 B 4 Blower Motor Controller  
 B 5 Body ECU No.1  
 B 6 Body ECU No.2

C 5 CD Automatic Changer  
 C 6 Center Airbag Sensor Assembly  
 C 7 Center Airbag Sensor Assembly

C 8 Center Airbag Sensor Assembly  
 C 9 Cigarette Lighter  
 C10 Clock  
 C11 Combination Meter  
 C12 Combination Meter  
 C13 Combination SW  
 C14 Combination SW  
 C15 Combination SW  
 C16 Combination SW  
 C19 Curtain Shield Airbag Squib LH  
 C20 Curtain Shield Airbag Squib RH  
 C23 Center Speaker

D 1 Daytime Running Light Relay  
 D 2 DLC3

E 11 ECT Pattern Select SW

F 8 Fuel Lid Opener SW

G 1 Glove Box Light  
 G 2 Glove Box Light SW  
 G 3 Gateway ECU

H15 Heated Oxygen Sensor (Bank 1 Sensor 2)  
 H20 Hazard SW  
 H21 Headlight Beam Level Control SW  
 H22 Headlight Cleaner SW  
 H23 Heated Oxygen Sensor (Bank 2 Sensor 2)