


INSTALLATION

1. INSTALL ELECTRIC COOLING FAN

- (a) Install the electric cooling fan with the 6 bolts.
Torque: 5.0 N·m (50 kgf·cm, 44 in·lbf)
- (b) Connect the wire for the electric cooling fan to the clamps on the electric cooling fan.
- (c) Connect the 2 electric cooling fan connectors.
- (d) Connect the engine ECU outlet duct to the fan shroud.
- (e) Connect the upper radiator hose to the radiator.

2. INSTALL RESERVOIR TANK

- (a) Attach the lower reservoir tank support.
- (b) Install the reservoir tank with the 2 bolts.
Torque: 5.0 N·m (50 kgf·cm, 44 in·lbf)
- (c) Connect the upper reservoir tank hose to the radiator.
- (d) Connect the lower reservoir tank hose to the reservoir tank.

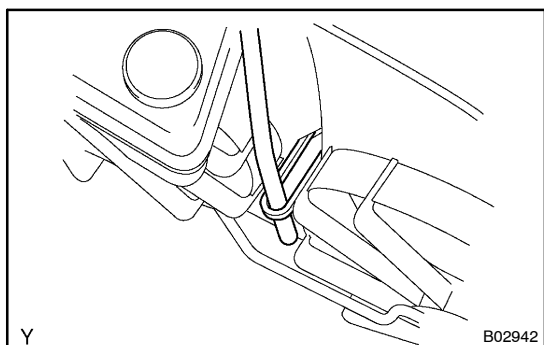

- (e) Insert the reservoir hose to the fan shroud.

3. INSTALL AIR CLEANER INLET

4. FILL WITH ENGINE COOLANT

5. INSTALL NO.1 ENGINE UNDER COVER

6. START ENGINE AND CHECK FOR COOLANT LEAK