


Rear fog light switch circuit (Europe)

WIRING DIAGRAM

*1: LHD Models
*2: RHD Models

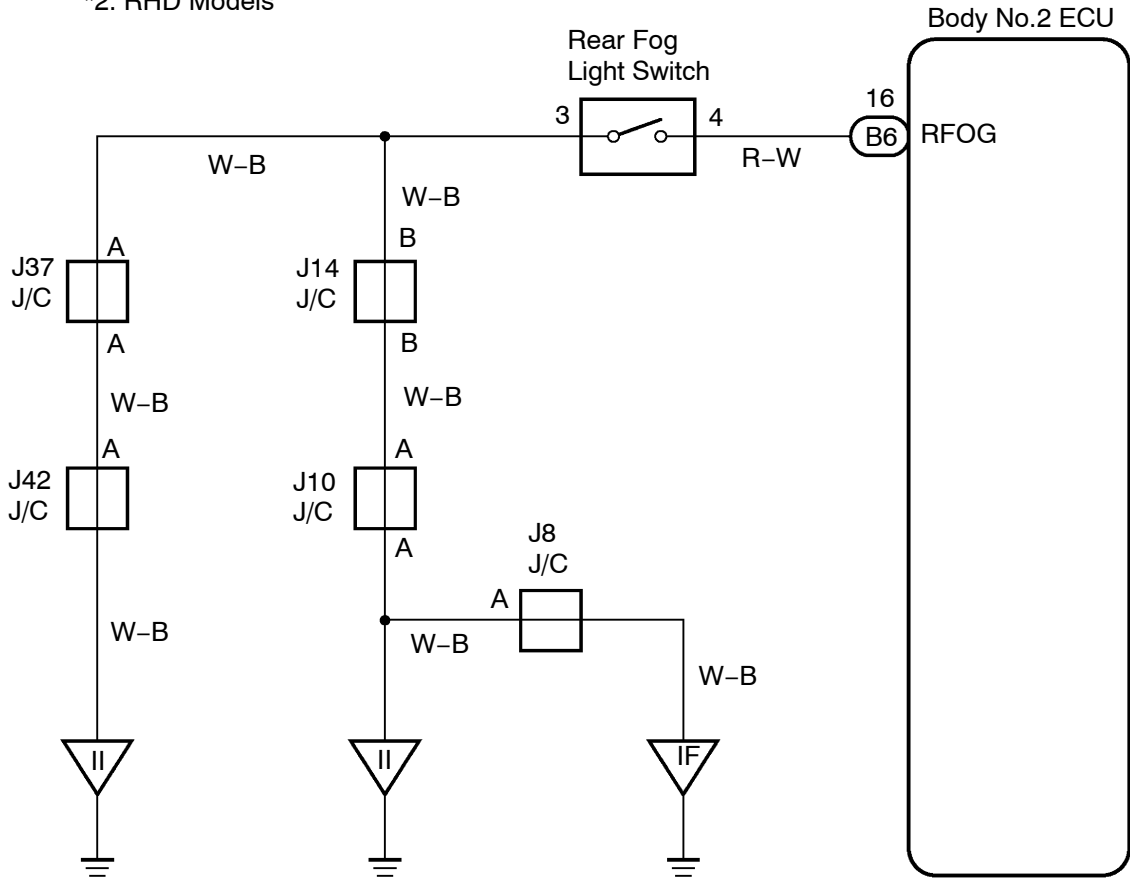

I05624

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1 Check rear fog light operating using hand-held tester.

PREPARATION:

Connect the hand-held tester to the DLC3.

CHECK:

Check that the rear fog light can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-660)

NG

2 Check rear fog light switch. (See page BE-61)

NG

Replace the rear fog light switch.

OK

3 Check wire harness and connector between rear fog light switch and Body ECU.

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-660)