


F01640

## DISASSEMBLY

### 1. REMOVE CYLINDER BOOT SET RINGS AND BOOTS


Using a screwdriver, remove the 2 cylinder boot set rings and 2 boots.

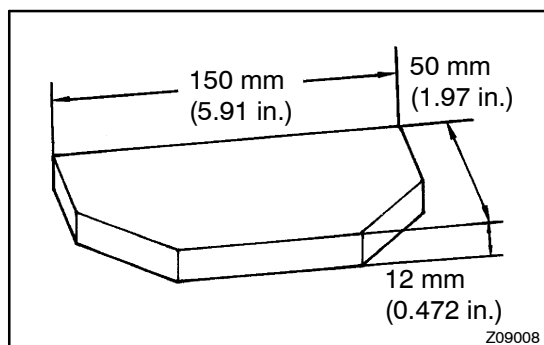

Z09008

### 2. REMOVE PISTONS FROM CYLINDER

(a) Prepare a wooden plate to hold the pistons.

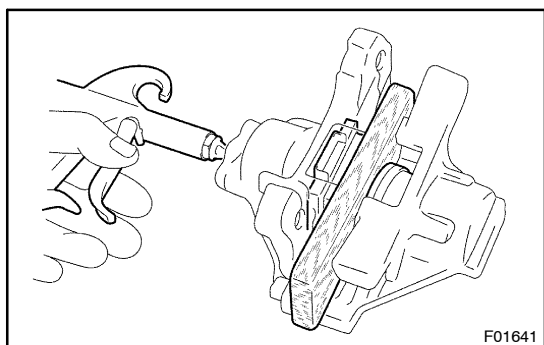


F01641

(b) Place the plate between the pistons and insert a pad on one side.

(c) Use compressed air to remove the pistons alternately from the caliper.

#### CAUTION:

**Do not place your fingers in front of the piston when using compressed air.**

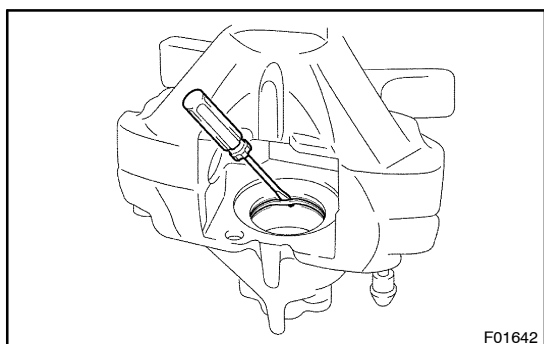

F01642

### 3. REMOVE PISTON SEALS

Using a screwdriver, remove the 2 piston seals from the caliper.