


## Theft deterrent horn circuit

### CIRCUIT DESCRIPTION

During warning of the theft deterrent system, the body No.1 ECU activates the theft deterrent horn.

### WIRING DIAGRAM

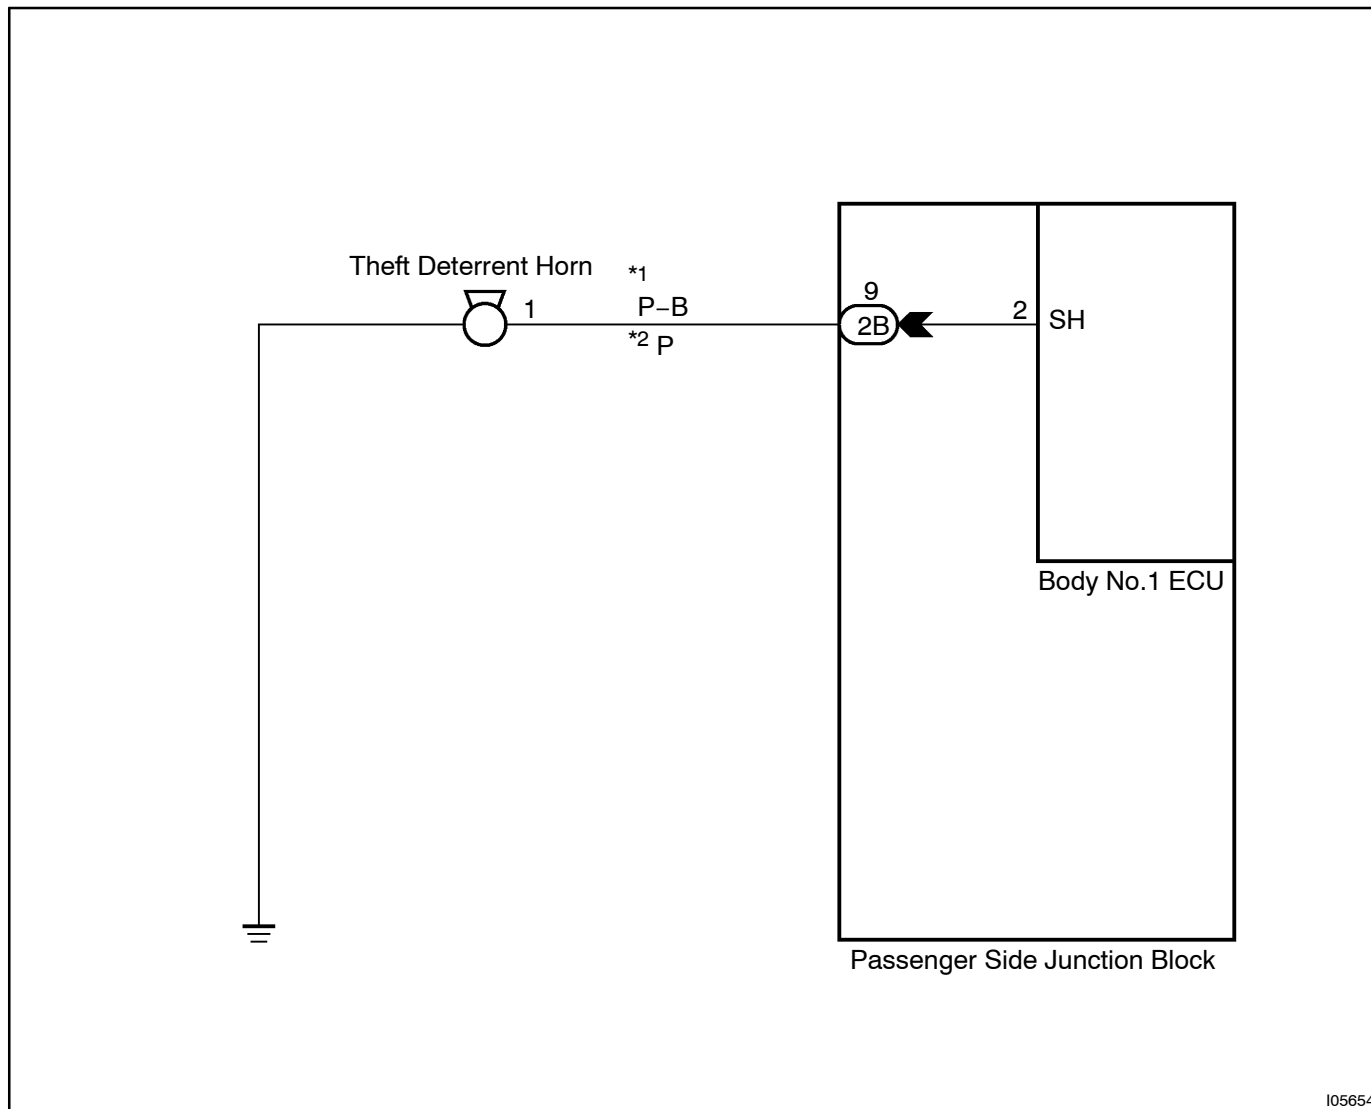

## INSPECTION PROCEDURE

### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

**1** Check theft deterrent horn using LEXUS hand-held tester.

### PREPARATION:

- (a) Connect the LEXUS hand-held tester to the DLC3.
- (b) Connect terminals Tc and E1 of DLC1.

### CHECK:

Check that the theft deterrent horn sounds using ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)

NG

**2** Check theft deterrent horn. (See page BE-154)

NG

Replace the theft deterrent horn.

OK

**3** Check wireharness and connector between theft deterrent horn and body No.1 ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)