

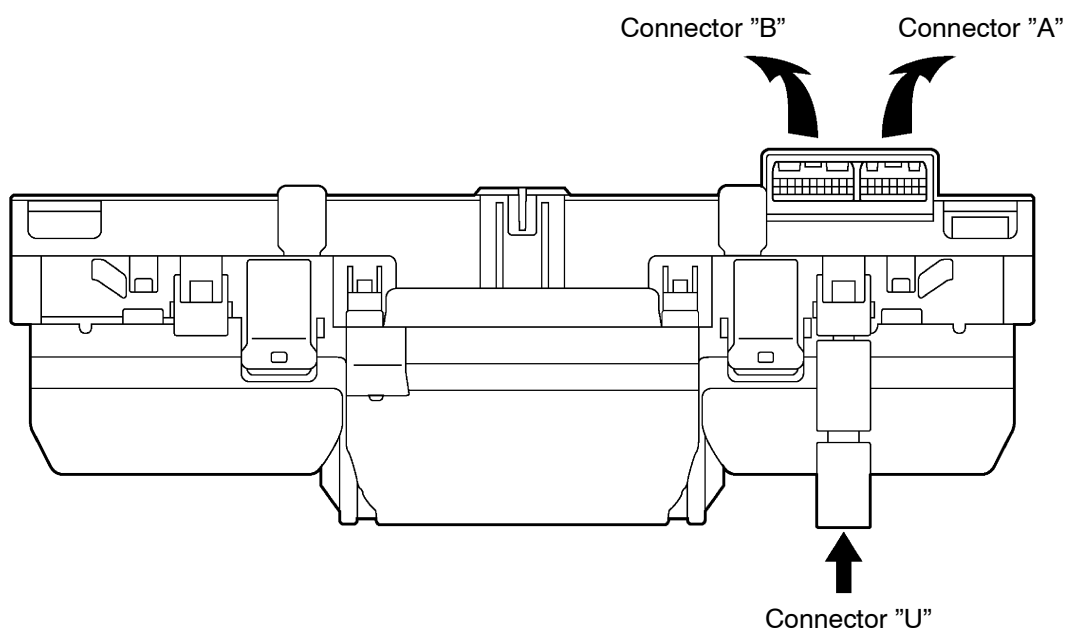


CIRCUIT


LHD Models

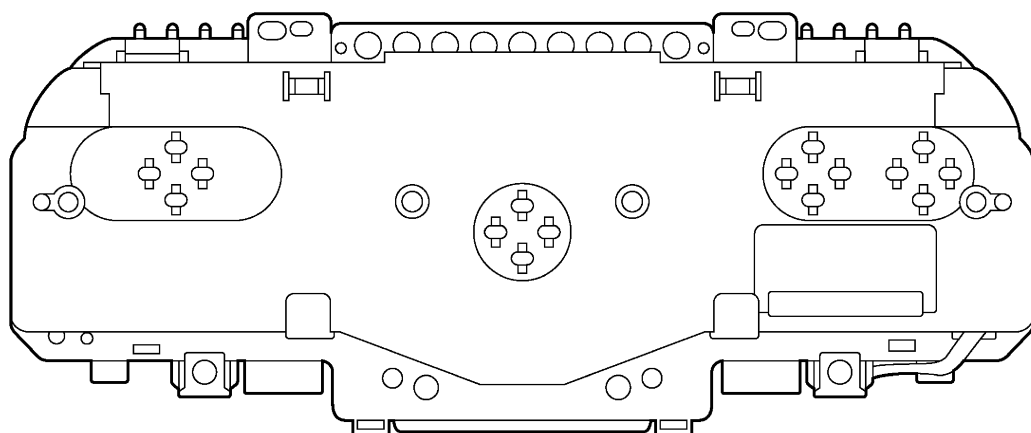

Combination Meter Wiring Circuit Connectors

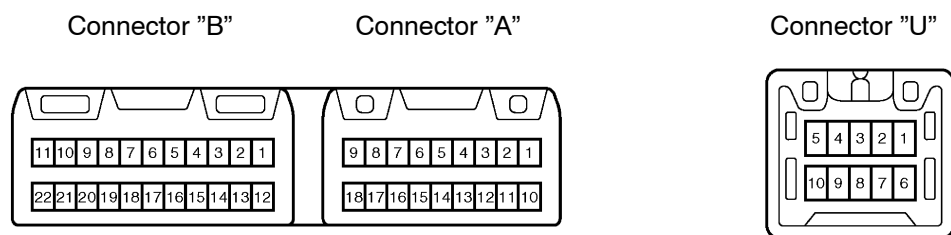


RHD Models

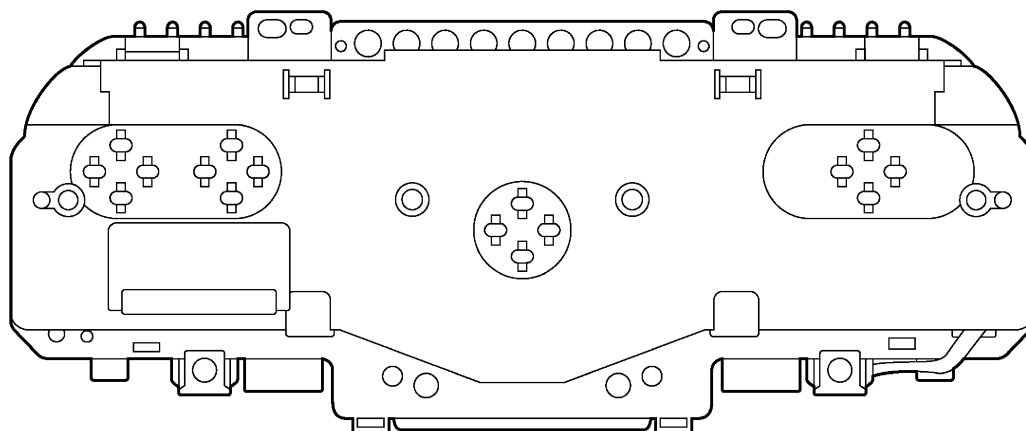

Connector "A"

Connector "B"


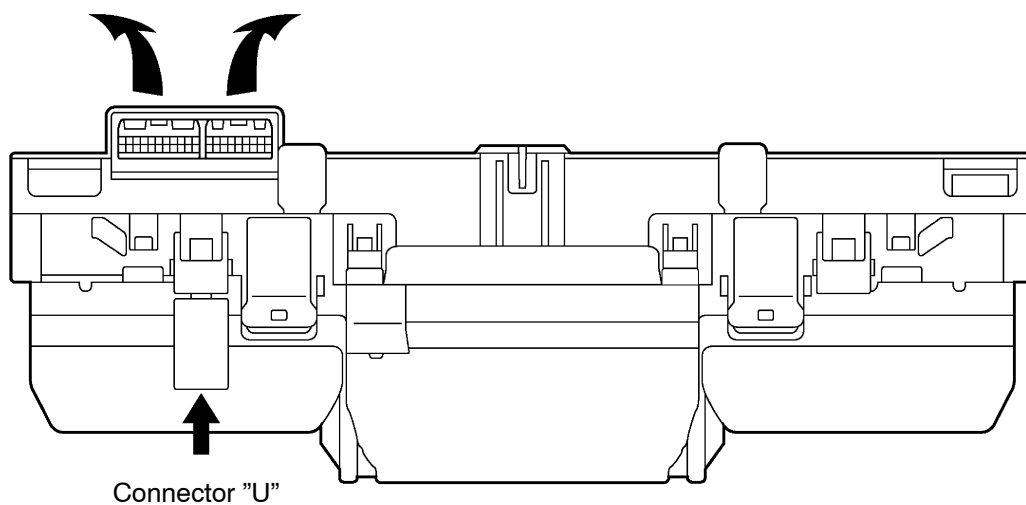


Combination Meter Wiring Circuit Connectors


Connector "B"

Connector "A"

Connector "U"

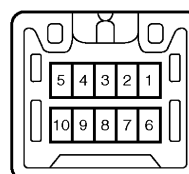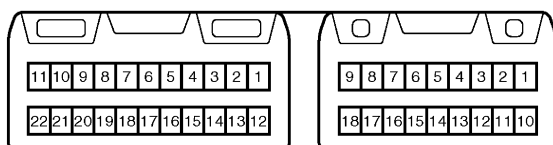


• Combination Meter Wiring Circuit - 1

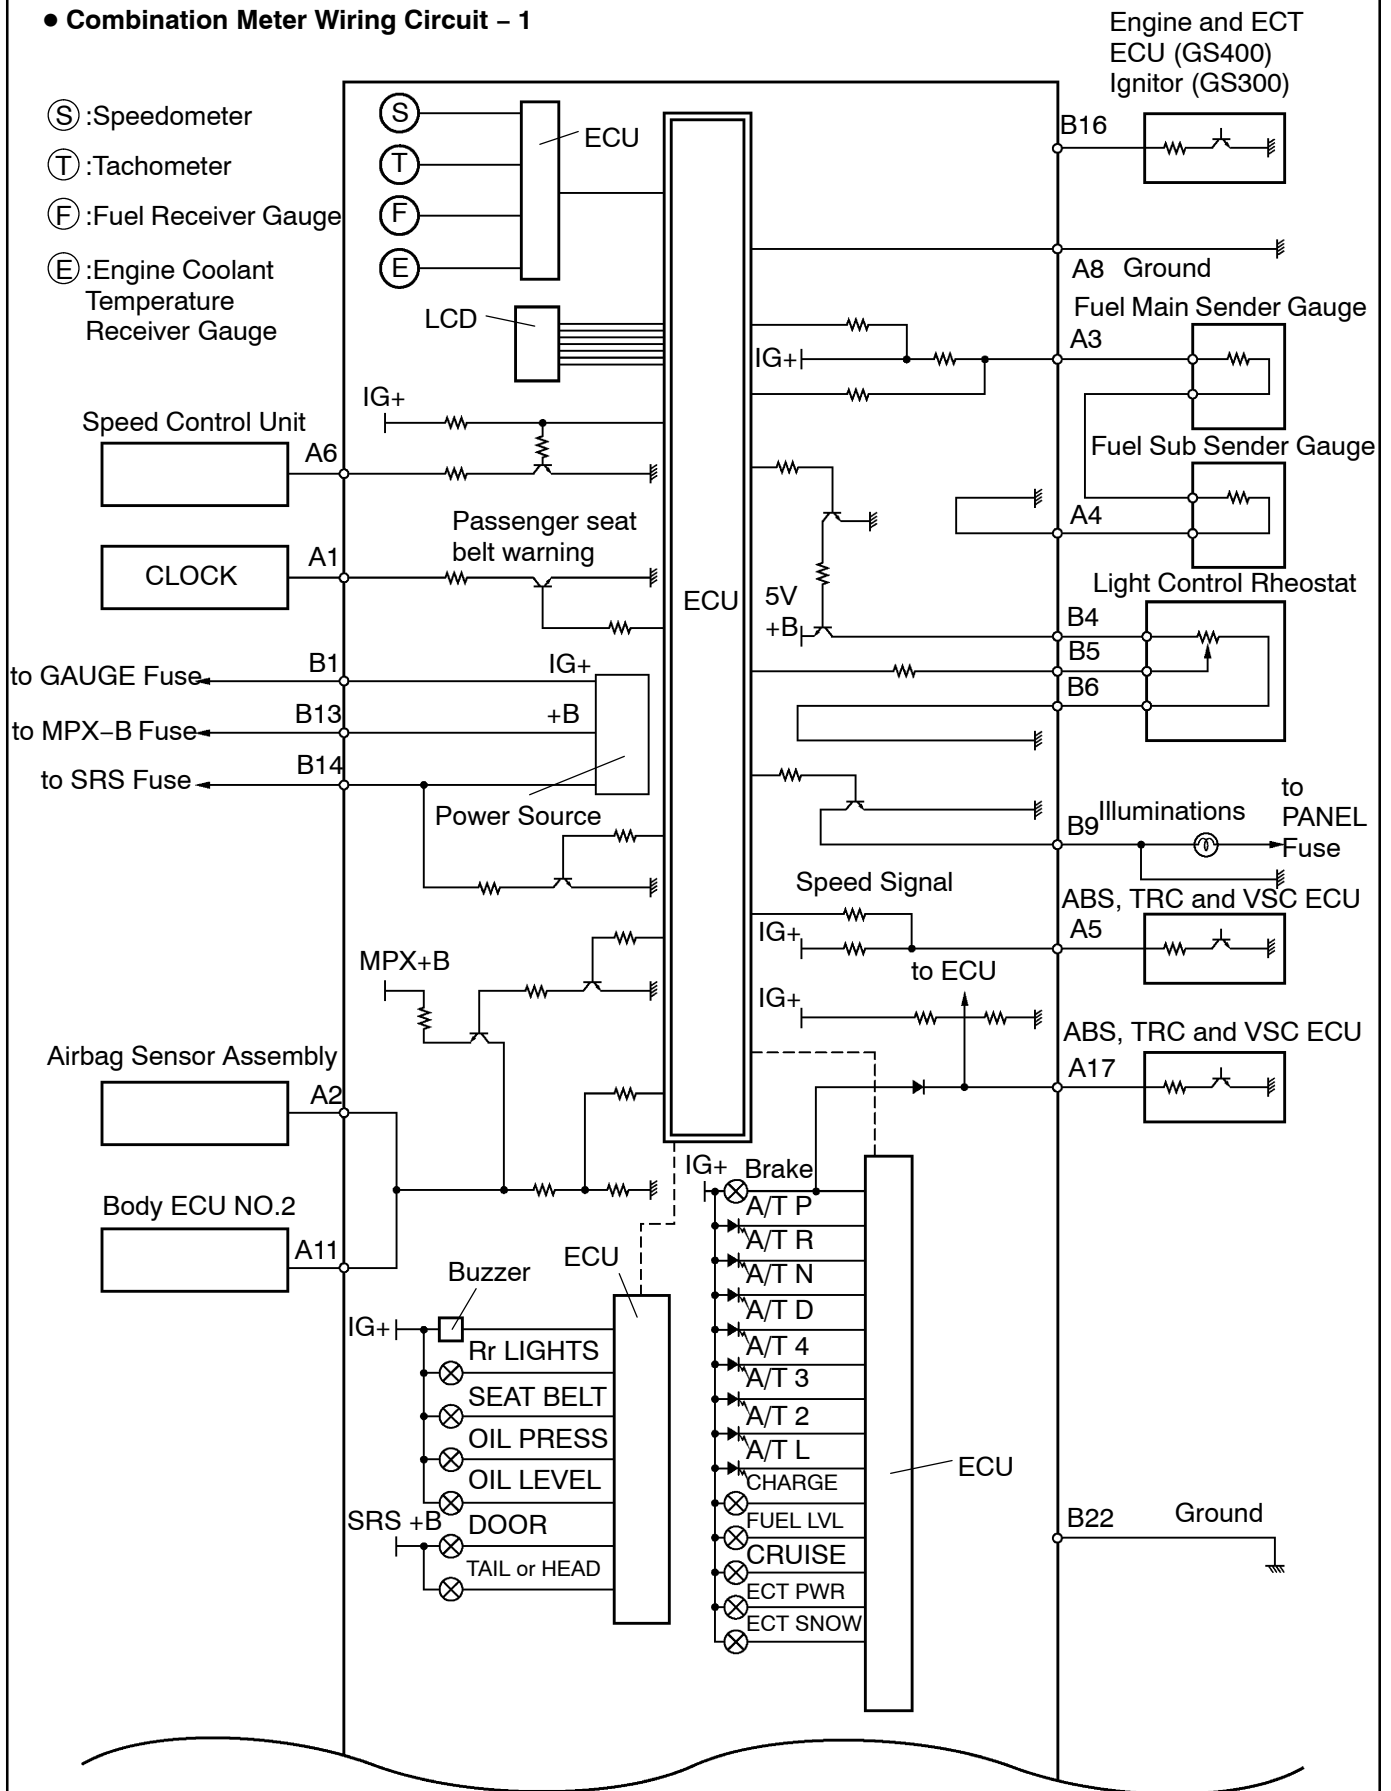

I04250

• Combination Meter Wiring Circuit - 2

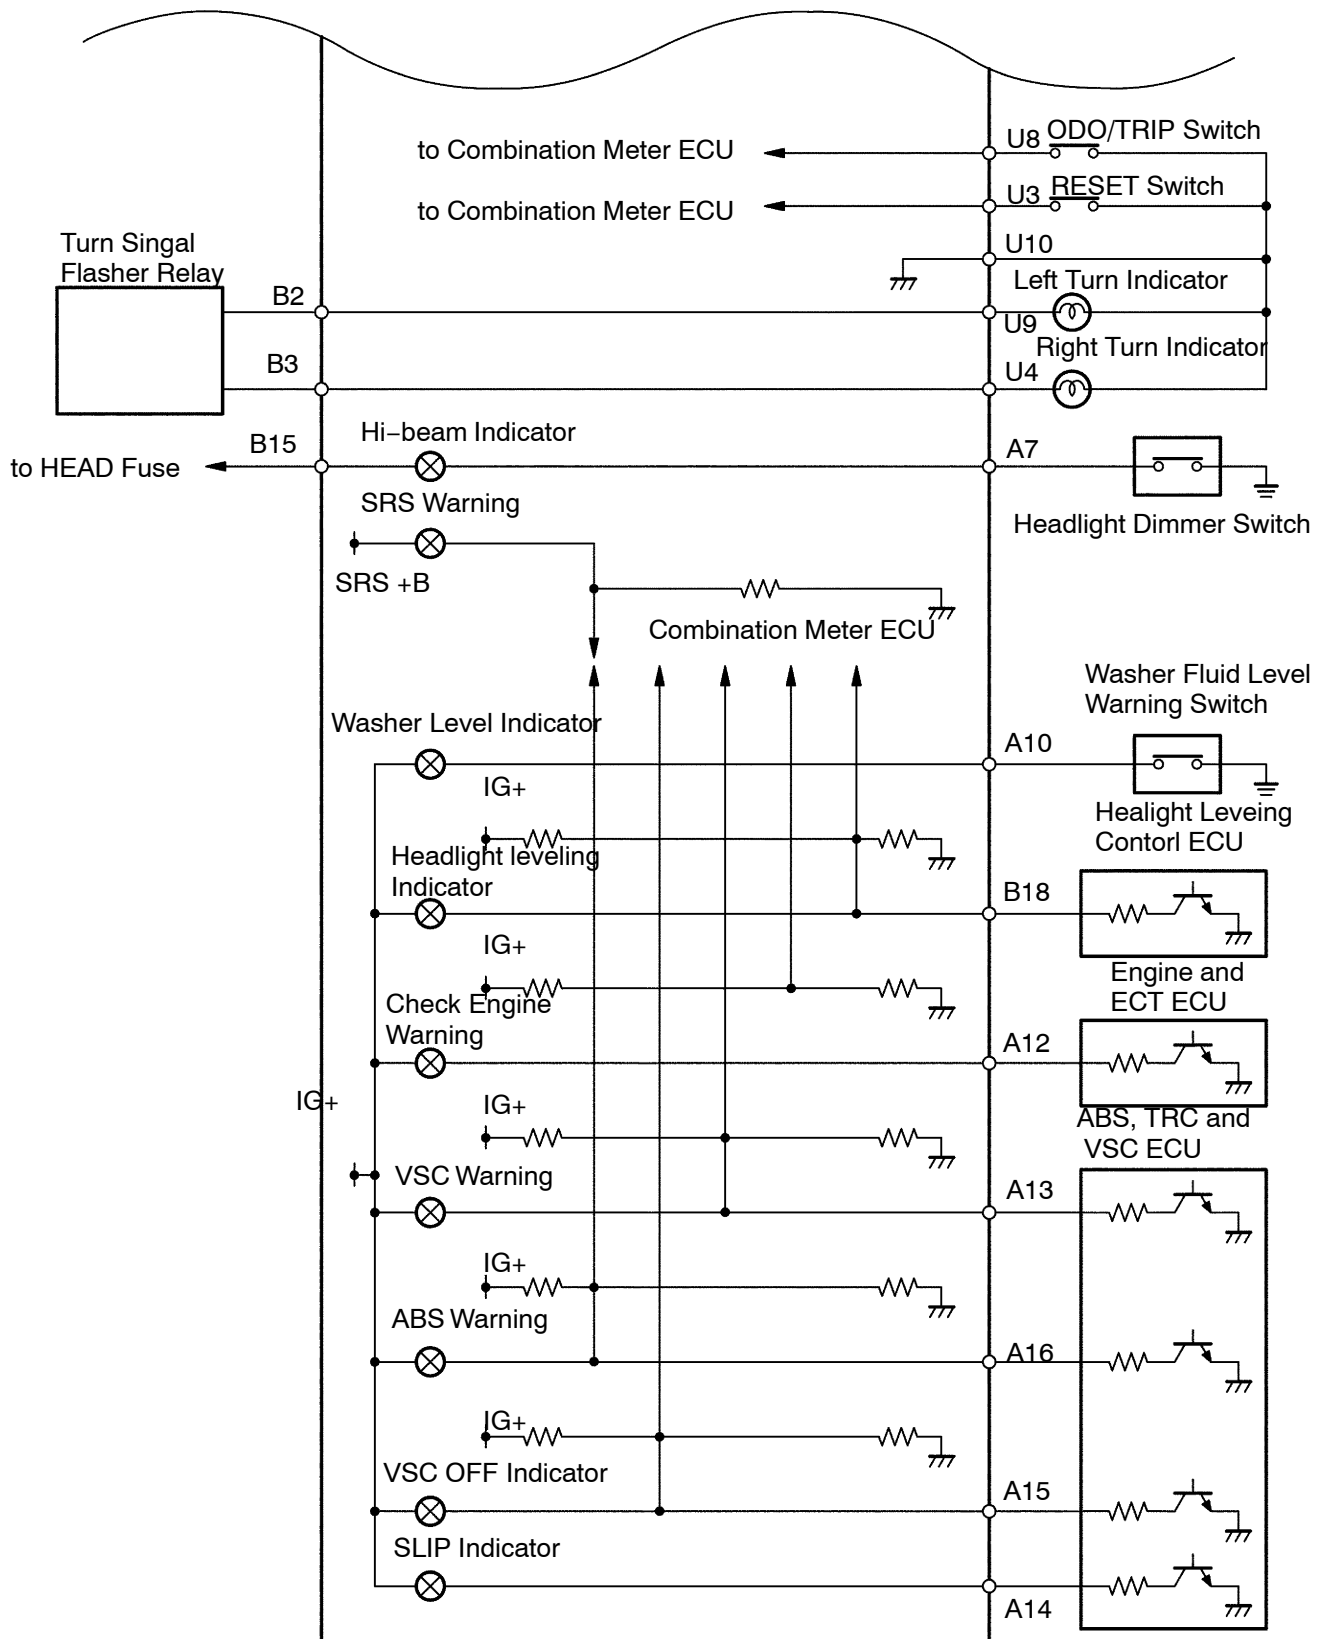

No.		Wiring connector side
A	1	Clock (Passenger seat belt warning light)
	2	Airbag sensor assembly
	3	Fuel main sender gauge
	4	Fuel sub sender gauge
	5	ABS, TRC and VSC ECU (Speed signal)
	6	Speed control unit
	7	Headlight dimmer switch
	8	Ground
	10	Window washer level warning switch
	11	Body control No.2 ECU
	12	Engine and ECT ECU
	13	ABS, TRC and VSC ECU (VSC warning light)
	14	ABS, TRC and VSC ECU (SLIP warning light)
	15	ABS, TRC and VSC ECU (VSC OFF warning light)
	16	ABS, TRC and VSC ECU (ABS warning light)
	17	ABS, TRC and VSC ECU (Brake warning light)
B	1	GAUGE fuse
	2	Turn signal flasher (Left turn side)
	3	Turn signal flasher (Right turn side)
	4	Light control rheostat (+B)
	5	Light control rheostat (Signal)
	6	Light control rheostat (Ground)
	9	Illuminations
	13	MPX+B fuse
	14	DOME+B fuse
	15	HEAD-RH fuse
	16	Igniter
	18	Headlight beam leveling control ECU
	22	Ground
U	1	Telltale light assembly (IG+)
	3	Telltale light assembly (ODO/TRIP switch)
	4	Telltale light assembly (Right turn signal)
	8	Telltale light assembly (RESET switch)
	9	Telltale light assembly (Left turn signal)
	10	Ground