



REMOVAL

1. REMOVE FRONT SEAT
(See page BO-108)
2. REMOVE REAR SEAT
(See page BO-117)
3. REMOVE FRONT AND REAR DOOR SCUFF PLATE
4. REMOVE CENTER PILLAR LOWER GARNISH

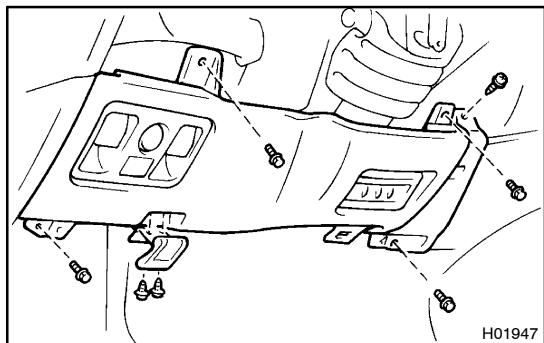

5. REMOVE THESE PARTS:

- (a) End pad
- (b) No.1 under cover
- (c) No.1 safety pad

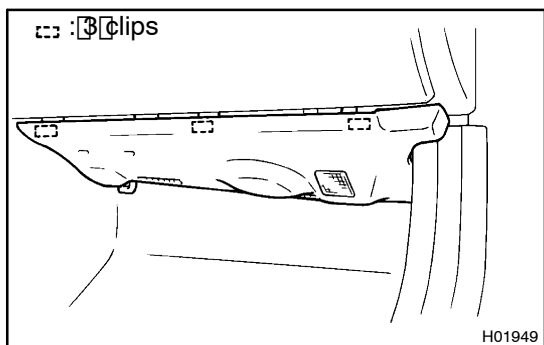

6. REMOVE No.2 UNDER COVER

Using a screwdriver, remove the pad.

HINT:



Tape the screwdriver tip before use.

7. REMOVE THESE PARTS:

- (a) Glove compartment panel assembly
- (b) Front ash receptacle
- (c) Cluster finish panel
- (d) Lower Rear console box
- (e) Rear console armrest

8. REMOVE CONSOLE BOX

- (a) Remove the 2 screws.
- (b) Remove the 2 bolts.
- (c) Remove the console box.

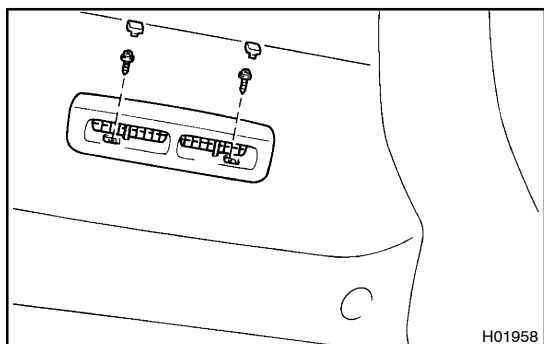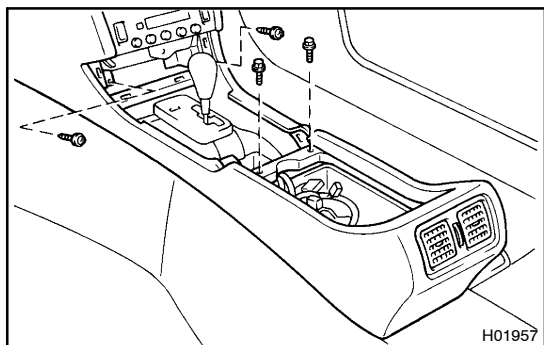

9. REMOVE AIR DUCT

- (a) Remove the 2 covers.
- (b) Remove the 2 screws.
- (c) Remove the air duct.

10. REMOVE FLOOR CARPET

- (a) Remove the clips.
- (b) Remove the floor carpet.