

## DISASSEMBLY


### 1. REMOVE WIND DEFLECTOR PANEL

- (a) Using a screwdriver, slide the drive cable rearward.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 screws and wind deflector panel.

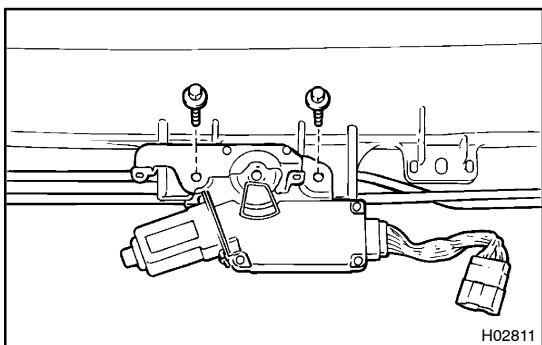

### 2. REMOVE DRIVE GEAR ASSEMBLY


- (a) Remove the 2 bolts and drive gear assembly.  
 (b) Remove the 2 screws and map lamp bracket from the gear.  
 (c) Disconnect the connector.

### 3. REMOVE CABLE GUIDE CASING

- (a) Remove the 10 screws.  
 (b) Slide the drive cables forward.  
 (c) Remove the cable guide casing.


### 4. REMOVE ROOF DRIP CHANNEL

Remove the roof drip channel from the drive cables.

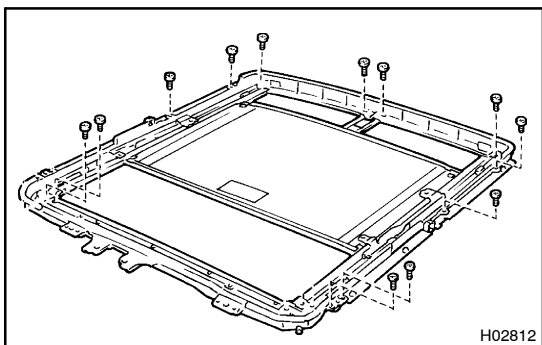

### 5. REMOVE SLIDING ROOF CASING

Remove the 12 screws and sliding roof casing.

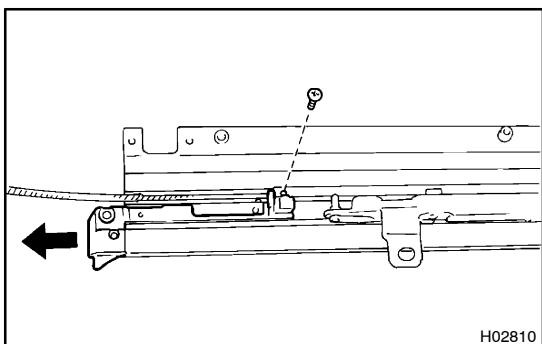

### 6. REMOVE SLIDING ROOF GUIDE BLOCKS

HINT:

Do the same for LH and RH.

- (a) Remove a screw.  
 (b) Slide the sliding roof guide block forward to remove it.

### 7. REMOVE DRIVE CABLE STOPPERS

Remove the 2 screws and 2 stoppers from the drive rails.

### 8. REMOVE SUNSHADE TRIM

Slide the sunshade trim rearward to remove it.

**9. REMOVE DRIVE CABLES**

Slide the drive cables forward to remove them from the drive rails.

**10. REMOVE REAR HOUSING FRAME**

Remove the 2 screws and rear housing frame from the center housing frame.

**11. REMOVE CENTER HOUSING FRAME**

Remove the 4 screws and center housing frame from the drive rails.

**12. REMOVE BRACKETS**

Remove the 4 screws and brackets from the drive rails.