


## TERMINALS OF ECU

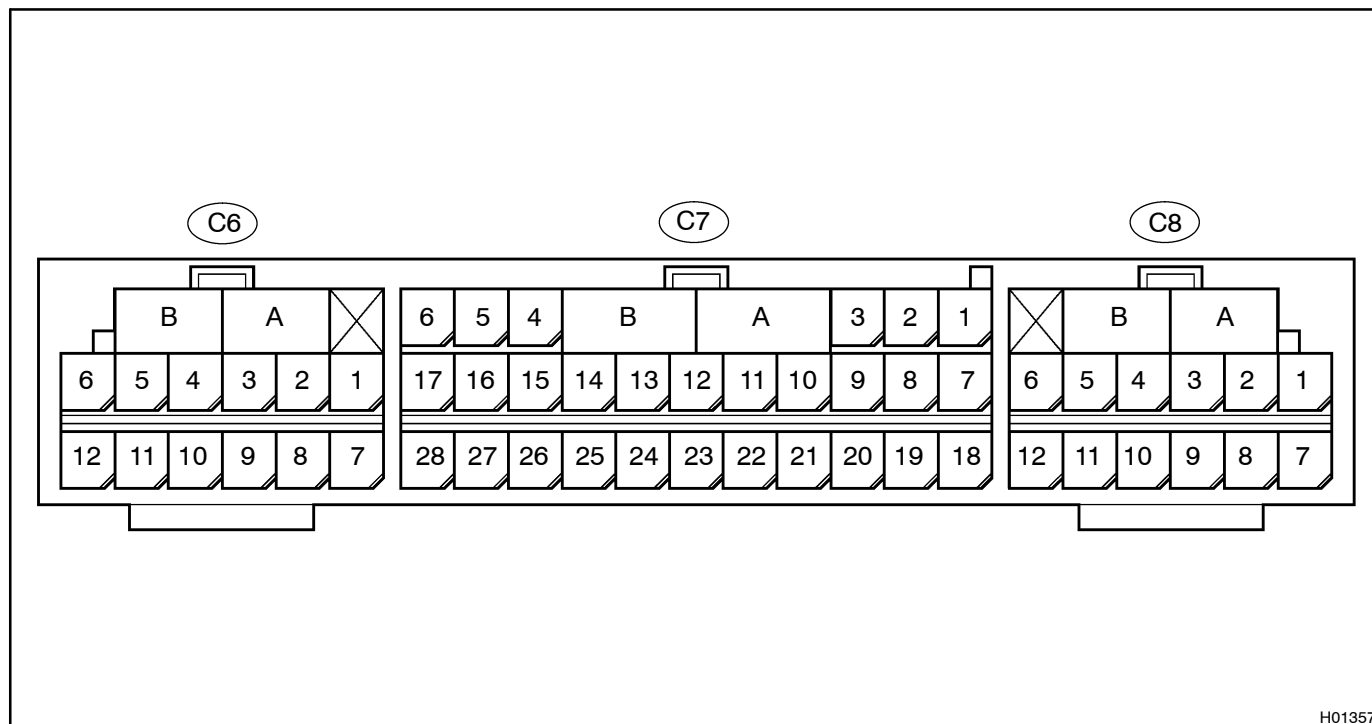

H01357

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
C7 – 3	LA	SRS Warning Light
C7 – 5	IG2	Power Source (IGN Fuse)
C7 – 6	ACC	Power Source (SRS-ACC Fuse)
C7 – 9	SR+	Front Airbag Sensor (RH)
C7 – 10	P+	Squib (Passenger)
C7 – 11	P–	Squib (Passenger)
C7 – 12	SIL	Diagnosis
C7 – 13	D–	Squib (Driver)
C7 – 14	D+	Squib (Driver)
C7 – 15	SL+	Front Airbag Sensor (LH)
C7 – 19	Tc	Diagnosis
C7 – 20	SR–	Front Airbag Sensor (RH)
C7 – 26	SL–	Front Airbag Sensor (LH)
C7 – 27	E1	Ground
C7 – 28	E2	Ground
C6 – 1	PL–	Squib (Seat Belt Pretensioner, LH)
C6 – 2	PL+	Squib (Seat Belt Pretensioner, LH)
C6 – 5	SFL+	Squib (Side, LH)
C6 – 6	SFL–	Squib (Side, LH)
C6 – 7	VUPL	Side Airbag Sensor (LH)
C6 – 9	SSL+	Side Airbag Sensor (LH)
C6 – 10	FSL	Side Airbag Sensor (LH)
C6 – 12	ESL	Side Airbag Sensor (LH)

No.	Symbol	Terminal Name
C8 - 1	SFR-	Squib (Side, RH)
C8 - 2	SFR+	Squib (Side, RH)
C8 - 5	PR+	Squib (Pretensioner, RH)
C8 - 6	PR-	Squib (Pretensioner, RH)
C8 - 7	ESR	Side Airbag Sensor (RH)
C8 - 9	FSR	Side Airbag Sensor (RH)
C8 - 10	SSR+	Side Airbag Sensor (RH)
C8 - 12	VUPR	Side Airbag Sensor (RH)