


FUEL CUT RPM INSPECTION

FI0XO-01


1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

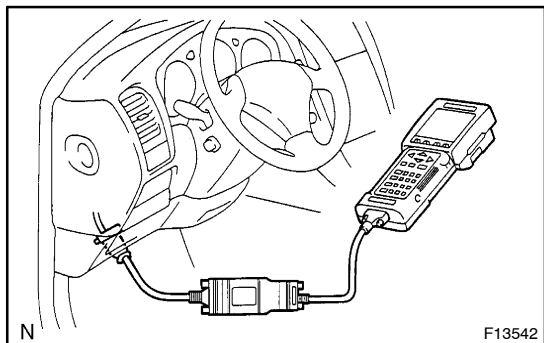

2. CONNECT HAND-HELD TESTER

- Remove the fuse cover on the instrument panel.
- Connect a hand-held tester to the DLC3.
- Please refer to the hand-held tester operator's manual for further details.

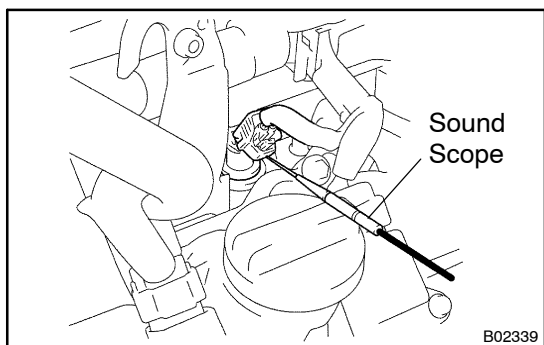

3. INSPECT FUEL CUT RPM OPERATION

- Increase the engine speed to at least 2,500 rpm.
- Check for injector operating noise.
- Check that when the throttle lever is released, injector operation noise stops momentarily and then resumes.

HINT:

- The vehicle should be stopped.
- Measure with the A/C OFF.

Fuel return speed: 1,400 rpm

4. DISCONNECT HAND-HELD TESTER