


Double lock motor circuit (Europe)

WIRING DIAGRAM

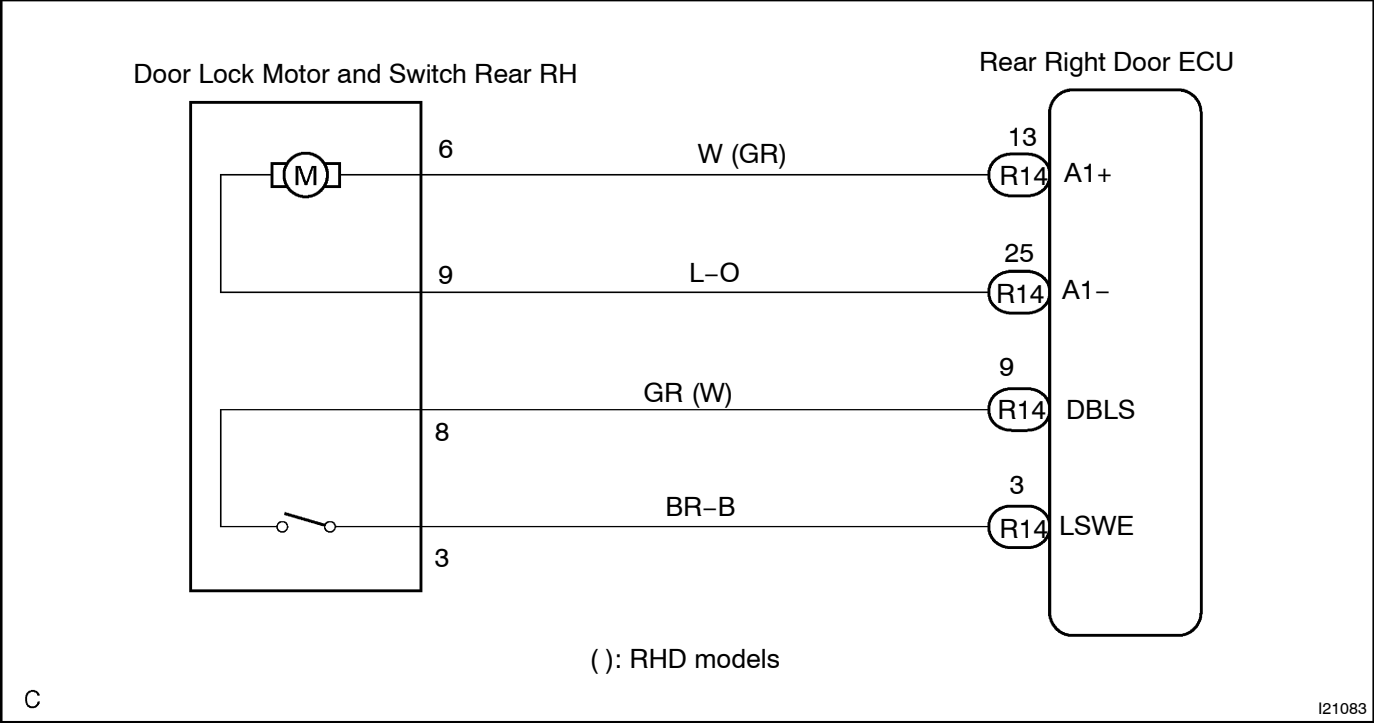

INSPECTION PROCEDURE

1	Check double lock motor (See page BE-18).
---	---

NG	Replace the double lock motor.
----	--------------------------------

OK

2	Check wireharness and connector between double lock motor and body ECU.
---	---

NG	Repair or replace wireharness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-717).
