

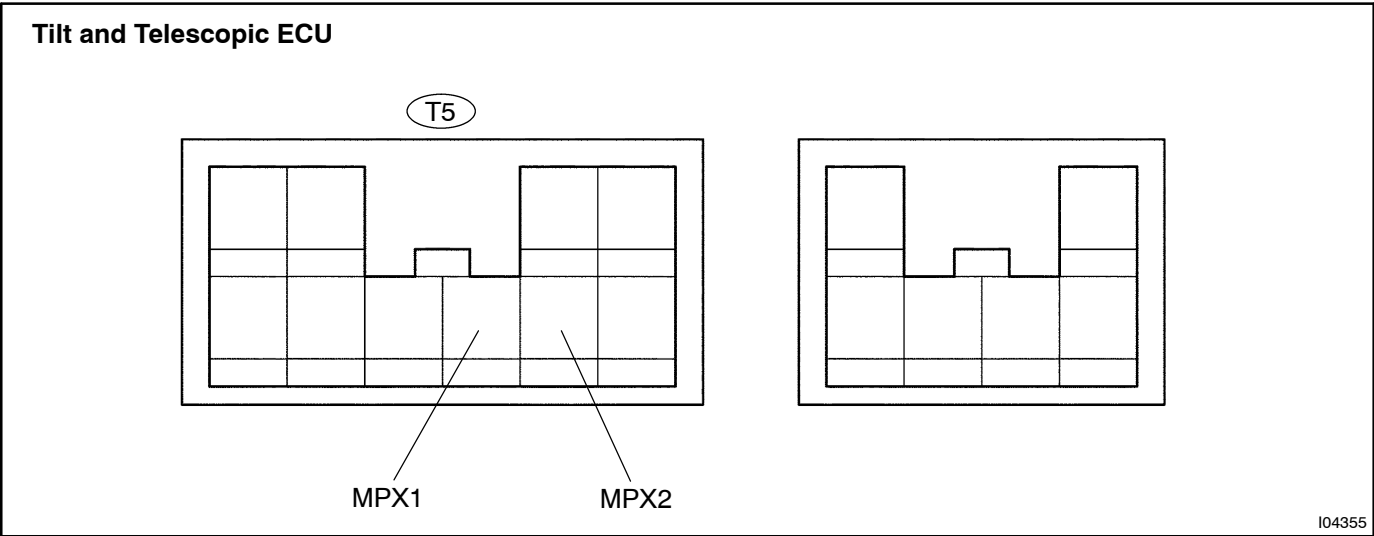
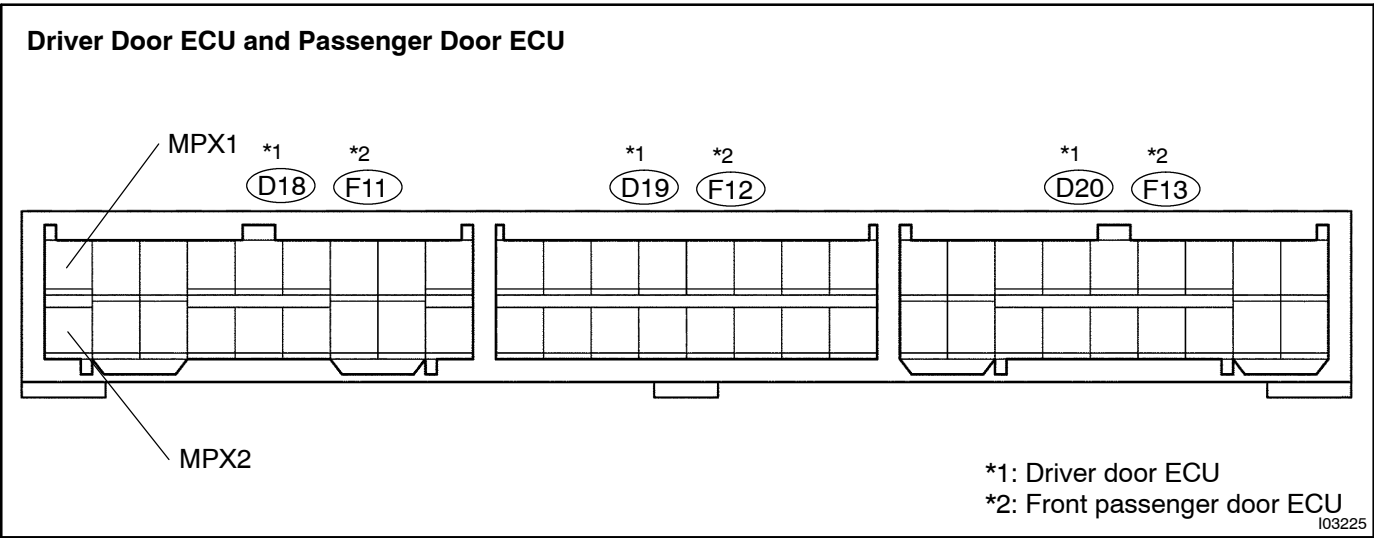


TERMINALS OF ECU

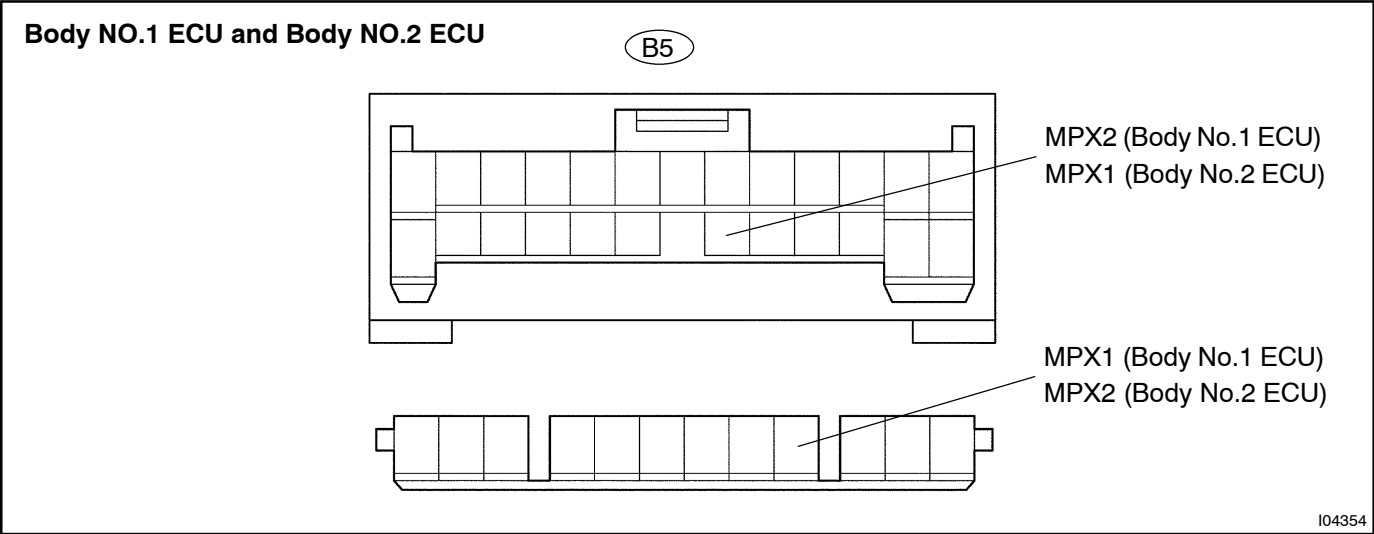


Rear Right Door ECU and Rear Left Door ECU

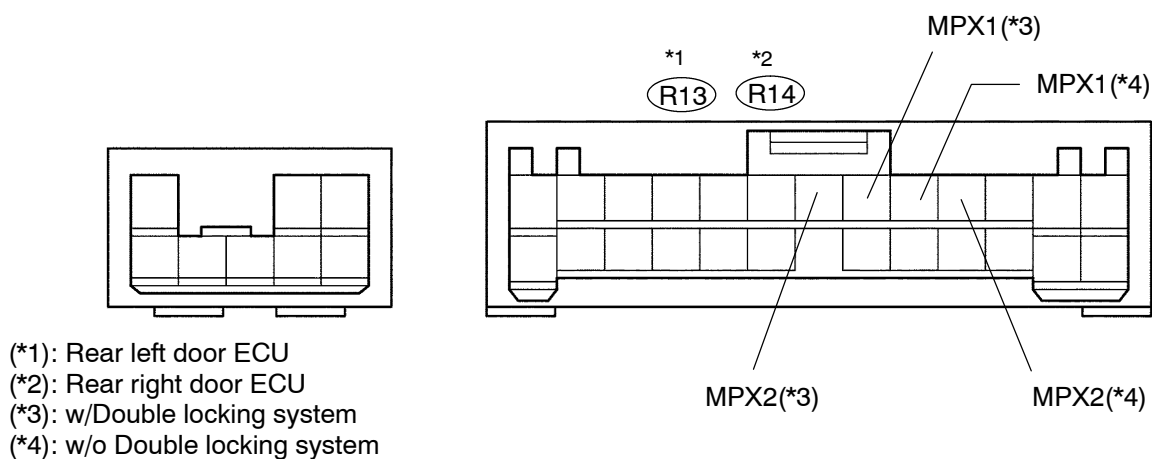

I03226

Engine and ECT ECU

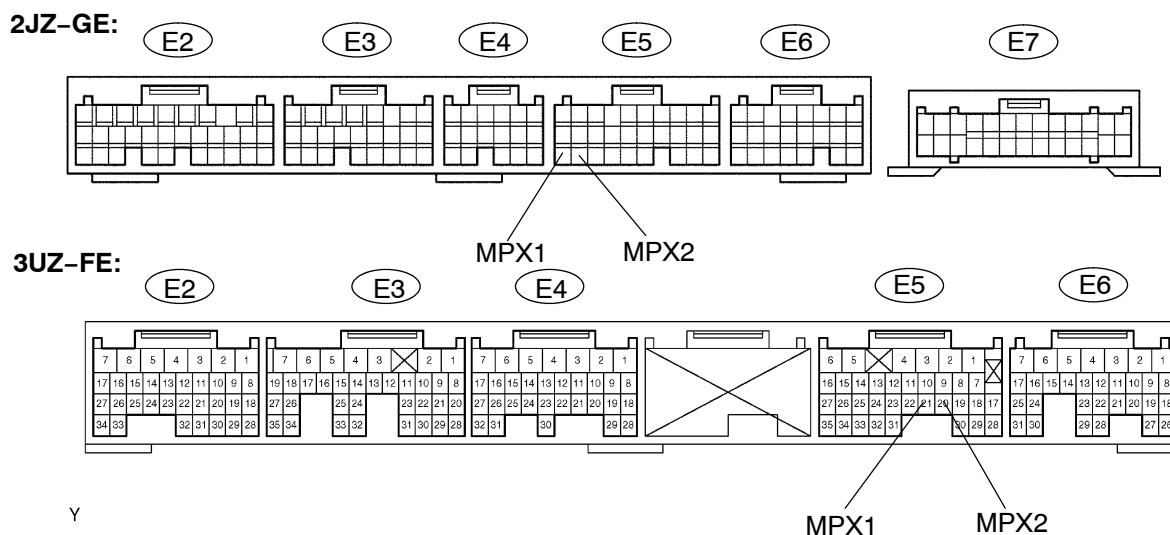


Y

I04347
A14471


I21072

A/C Amplifier

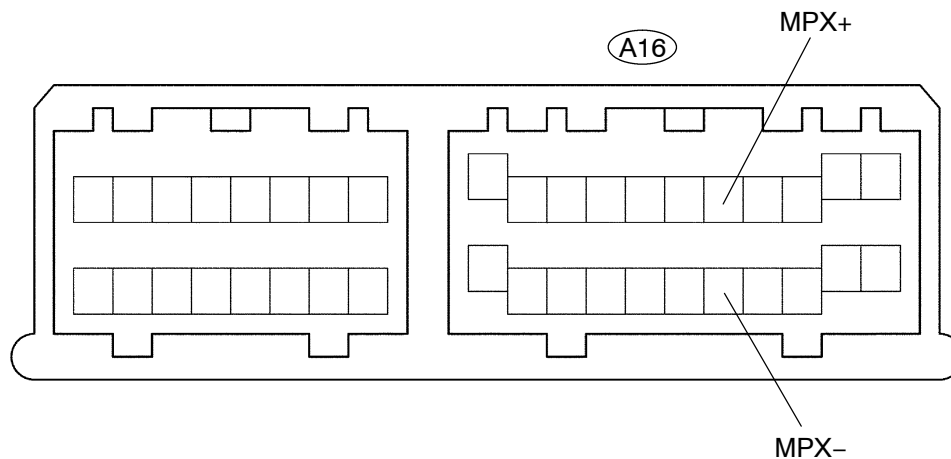


I04359

Combination Meter ECU

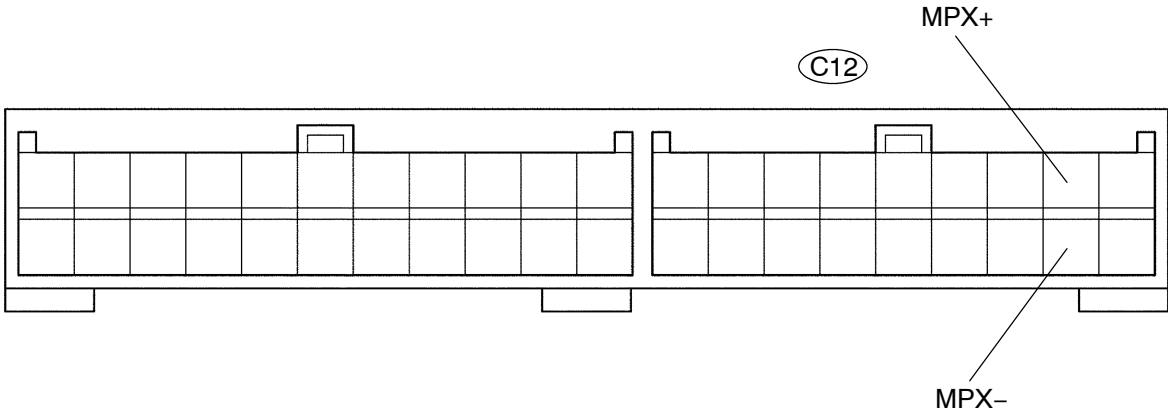


I04357

Power Seat ECU

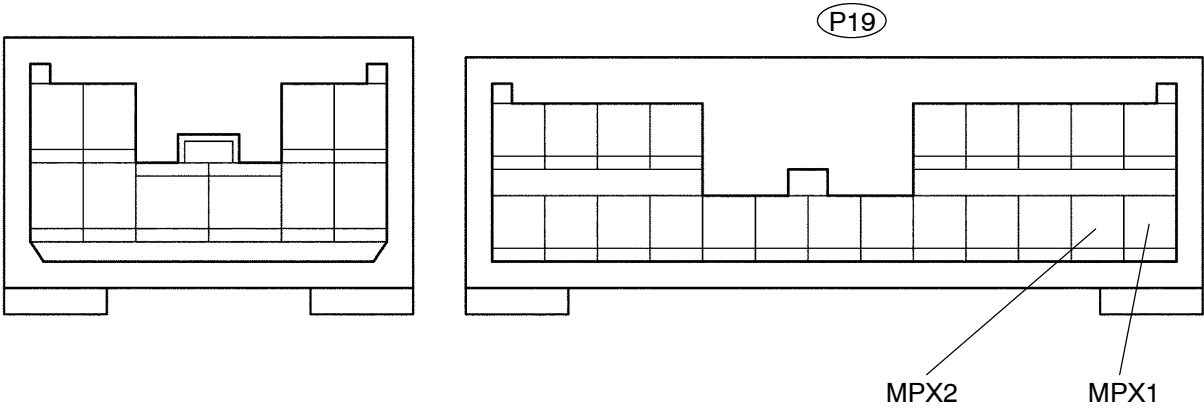


I04356

Sliding Roof ECU

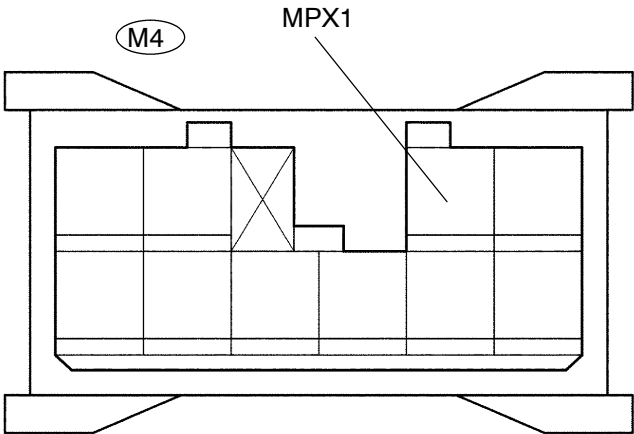

I04348


Gateway ECU

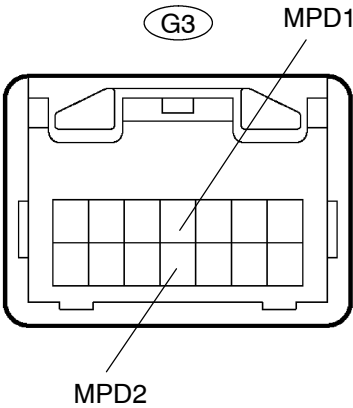

N

I13684


Steering Pad Switch

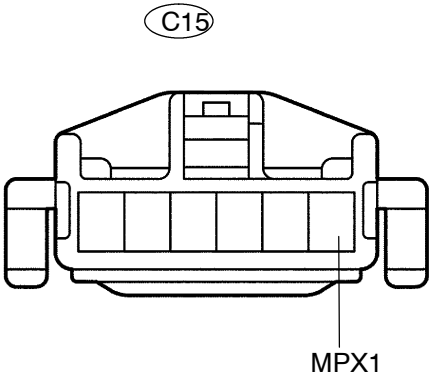

P

I21108

Airbag Sensor Assembly

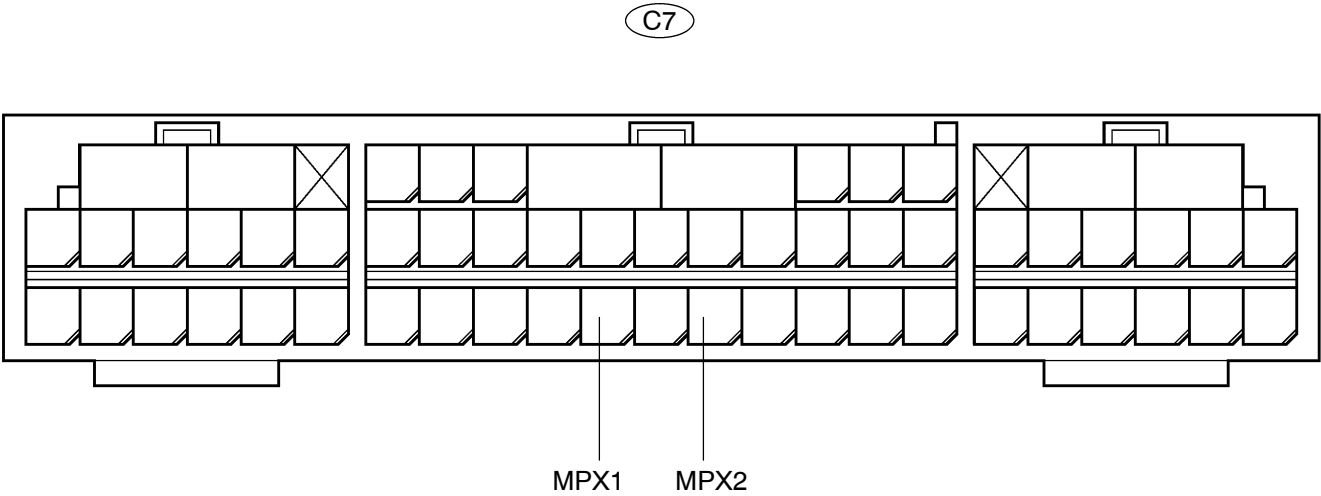

H01357