


Position of Parts in Instrument Panel

[RHD]

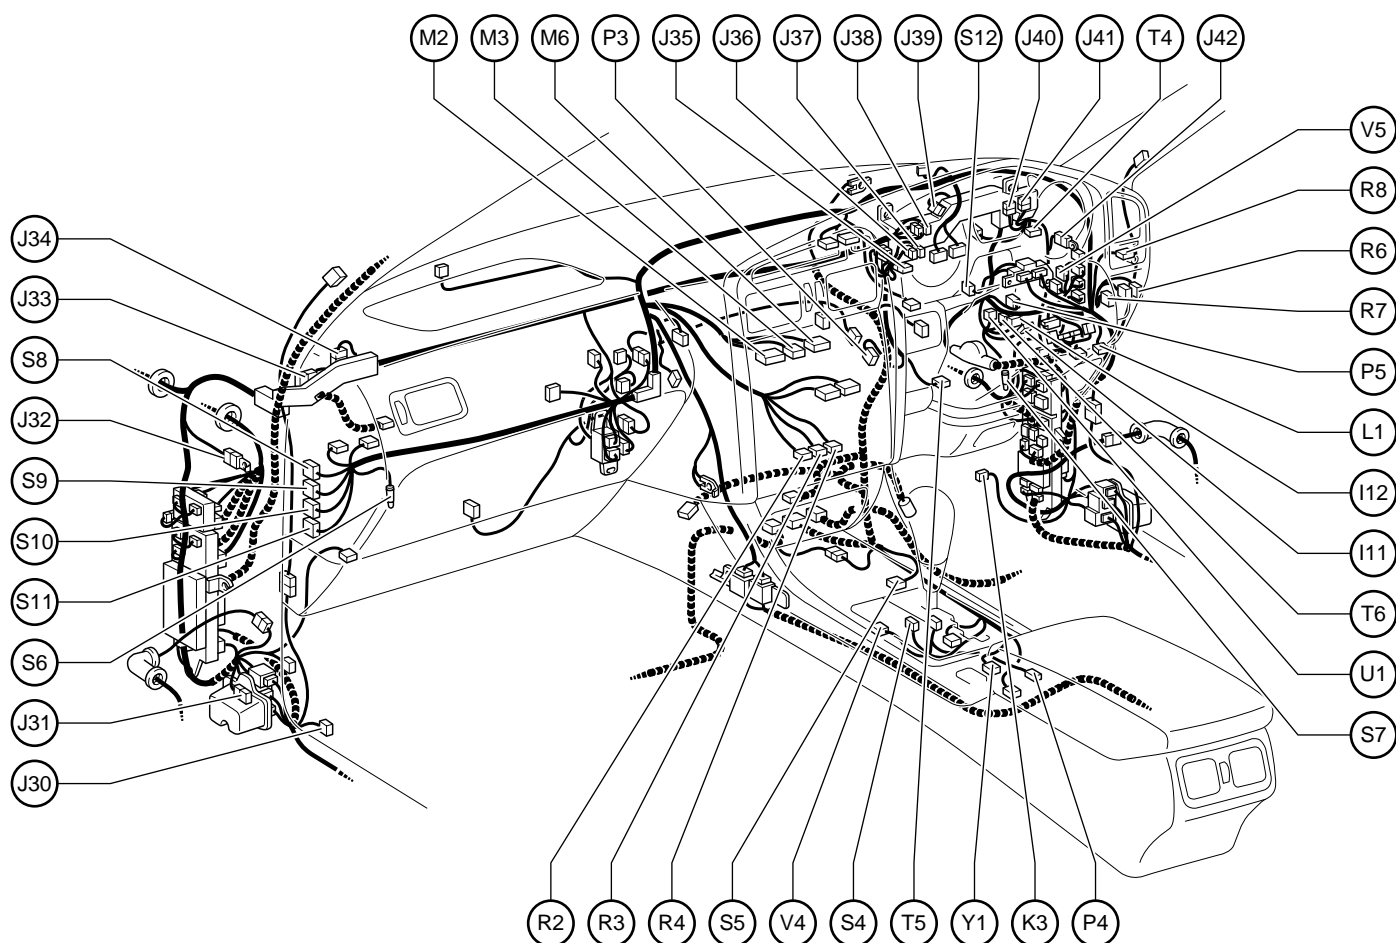

I 11 Ignition Key Cylinder Light
I 12 Ignition SW

J 30 Junction Connector
J 31 Junction Connector
J 32 Junction Connector
J 33 Junction Connector
J 34 Junction Connector
J 35 Junction Connector
J 36 Junction Connector
J 37 Junction Connector
J 38 Junction Connector
J 39 Junction Connector
J 40 Junction Connector
J 41 Junction Connector
J 42 Junction Connector

K 3 Kick Down SW

L 1 Luggage Compartment Door Opener SW

M 2 Multi-Display
M 3 Multi-Display
M 6 Multi-Display

P 3 Parking Brake SW
P 4 Power Outlet
P 5 PPS ECU

R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 6 Rear Fog Light SW
R 7 Remote Control Mirror SW
R 8 Rheostat

S 4 Seat Heater SW
S 5 Shift Lock Control ECU
S 6 Step Light LH
S 7 Step Light RH
S 8 Stereo Component Amplifier
S 9 Stereo Component Amplifier
S 10 Stereo Component Amplifier
S 11 Stereo Component Amplifier
S 12 Stop Light SW

T 4 Telephone Microphone
T 5 Tilt and Telescopic ECU
T 6 Transponder Key Amplifier

U 1 Unlock Warning SW and Key Interlock Solenoid

V 4 VSC Off SW
V 5 VSC Warning Buzzer

Y 1 Yaw Rate Sensor