


## E ELECTRICAL WIRING ROUTING

### Position of Parts in Engine Compartment

[LHD : 3UZ-FE]

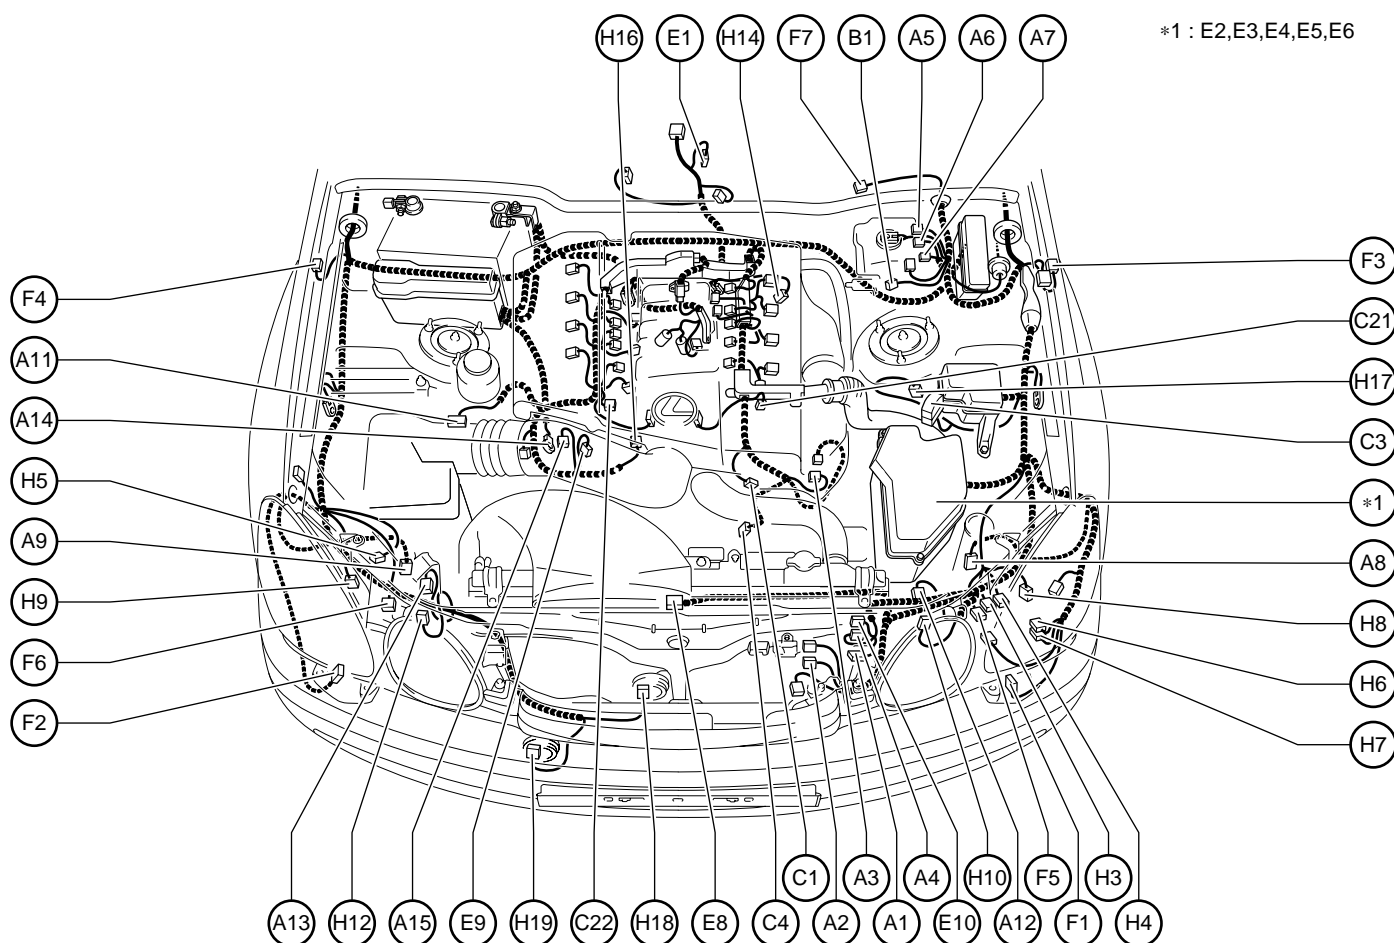

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Magnetic Clutch and Lock Sensor
- A 4 A/C Triple Pressure SW  
(A/C Dual and Single Pressure SW)
- A 5 ABS & TRC & VSC Actuator
- A 6 ABS & TRC & VSC Actuator
- A 7 ABS & TRC & VSC Actuator
- A 8 ABS Speed Sensor Front LH
- A 9 ABS Speed Sensor Front RH
- A 11 Air Flow Meter
- A 12 Airbag Sensor Front LH
- A 13 Airbag Sensor Front RH
- A 14 Alternator
- A 15 Alternator

- B 1 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 3 Check Connector
- C 4 Crankshaft Position Sensor
- C21 Camshaft Timing Oil Control Valve LH
- C22 Camshaft Timing Oil Control Valve RH

- E 1 ECT Solenoid
- E 2 Engine and ECT ECU
- E 3 Engine and ECT ECU
- E 4 Engine and ECT ECU

- E 5 Engine and ECT ECU
- E 6 Engine and ECT ECU
- E 8 Engine Hood Courtesy SW
- E 9 Engine Oil Level Sensor
- E 10 Exhaust Gas Sensor

- F 1 Front Fog Light LH
- F 2 Front Fog Light RH
- F 3 Front Side Turn Signal Light LH
- F 4 Front Side Turn Signal Light RH
- F 5 Front Turn Signal and Clearance Light LH
- F 6 Front Turn Signal and Clearance Light RH
- F 7 Front Wiper Motor

- H 3 Headlight Beam Level Control ECU
- H 4 Headlight Beam Level Control ECU
- H 5 Headlight Beam Level Control Motor
- H 6 Headlight Cleaner Control Relay
- H 7 Headlight Cleaner Motor
- H 8 Headlight Control ECU LH
- H 9 Headlight Control ECU RH
- H 10 Headlight LH (High)
- H 12 Headlight RH (High)
- H 14 Heated Oxygen Sensor (Bank 1 Sensor 1)
- H 16 Heated Oxygen Sensor (Bank 2 Sensor 1)
- H 17 Height Control Sensor (Front)
- H 18 Horn LH
- H 19 Horn RH