


## REMOVAL

### 1. DISCONNECT SPEED SENSOR CONNECTOR

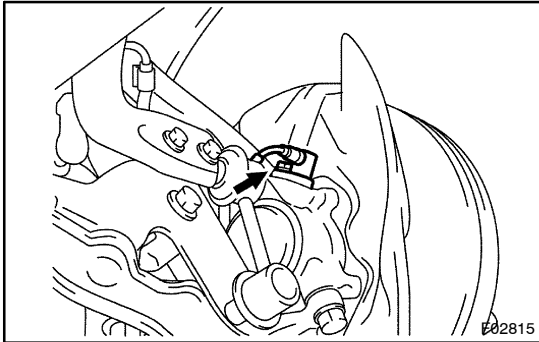

### 2. REMOVE SPEED SENSOR

- (a) Remove the resin clip and 2 clamp bolts holding the sensor harness to the body.

**Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**

- (b) Remove the bolt and speed sensor from the steering knuckle.

**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**