



QUARTER WHEEL HOUSING OUTER PANEL (ASSY): Left Side

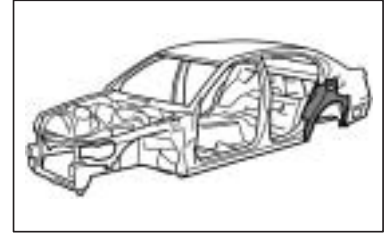


REMOVAL (With the quarter panel removed.)

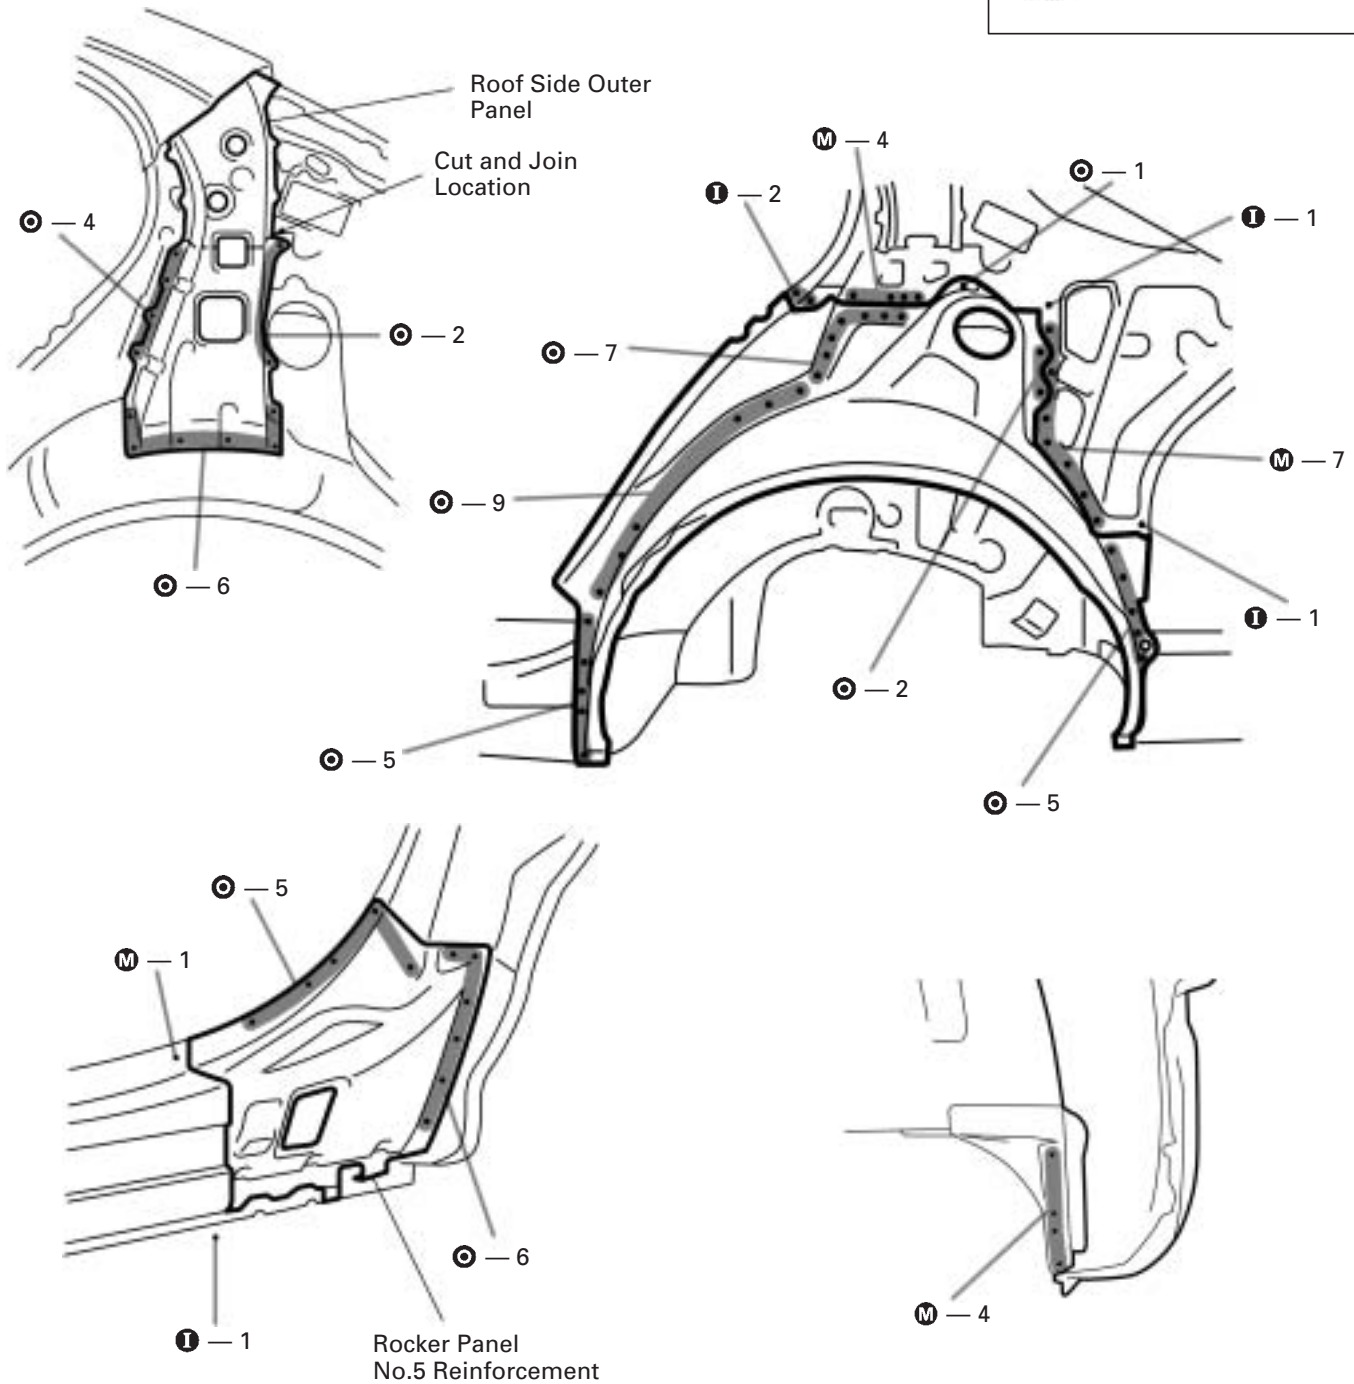

1. Cut the roof side outer panel at the location shown above.
2. After removing the rocker panel No.5 reinforcement, remove the quarter wheel housing outer panel.

INSTALLATION

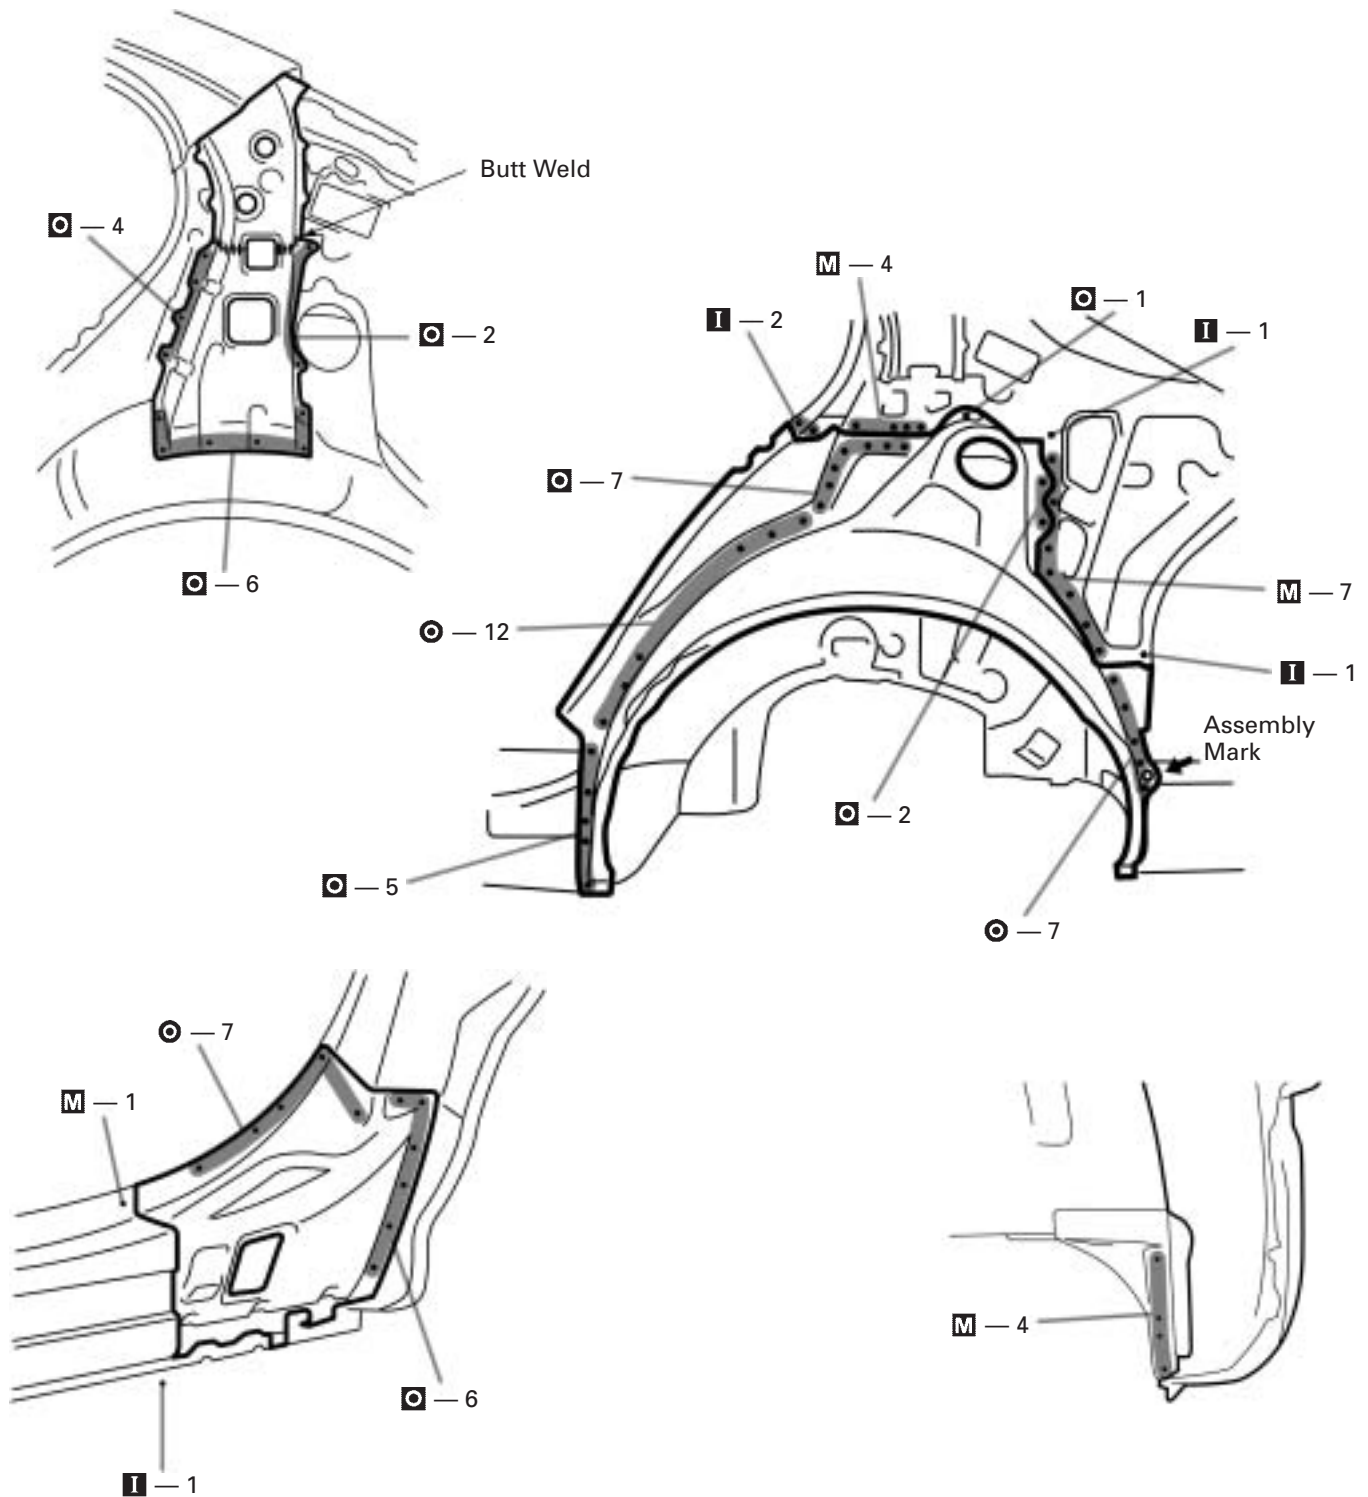

1. Determine the position of the new parts by the assembly marks of the inner and outer panels.
2. Before welding the new parts, temporarily install the quarter panel and check the fit.