


Mirror switch circuit

CIRCUIT DESCRIPTION

This circuit detects the conditions of the mirror selection switch and the mirror position switch.

WIRING DIAGRAM

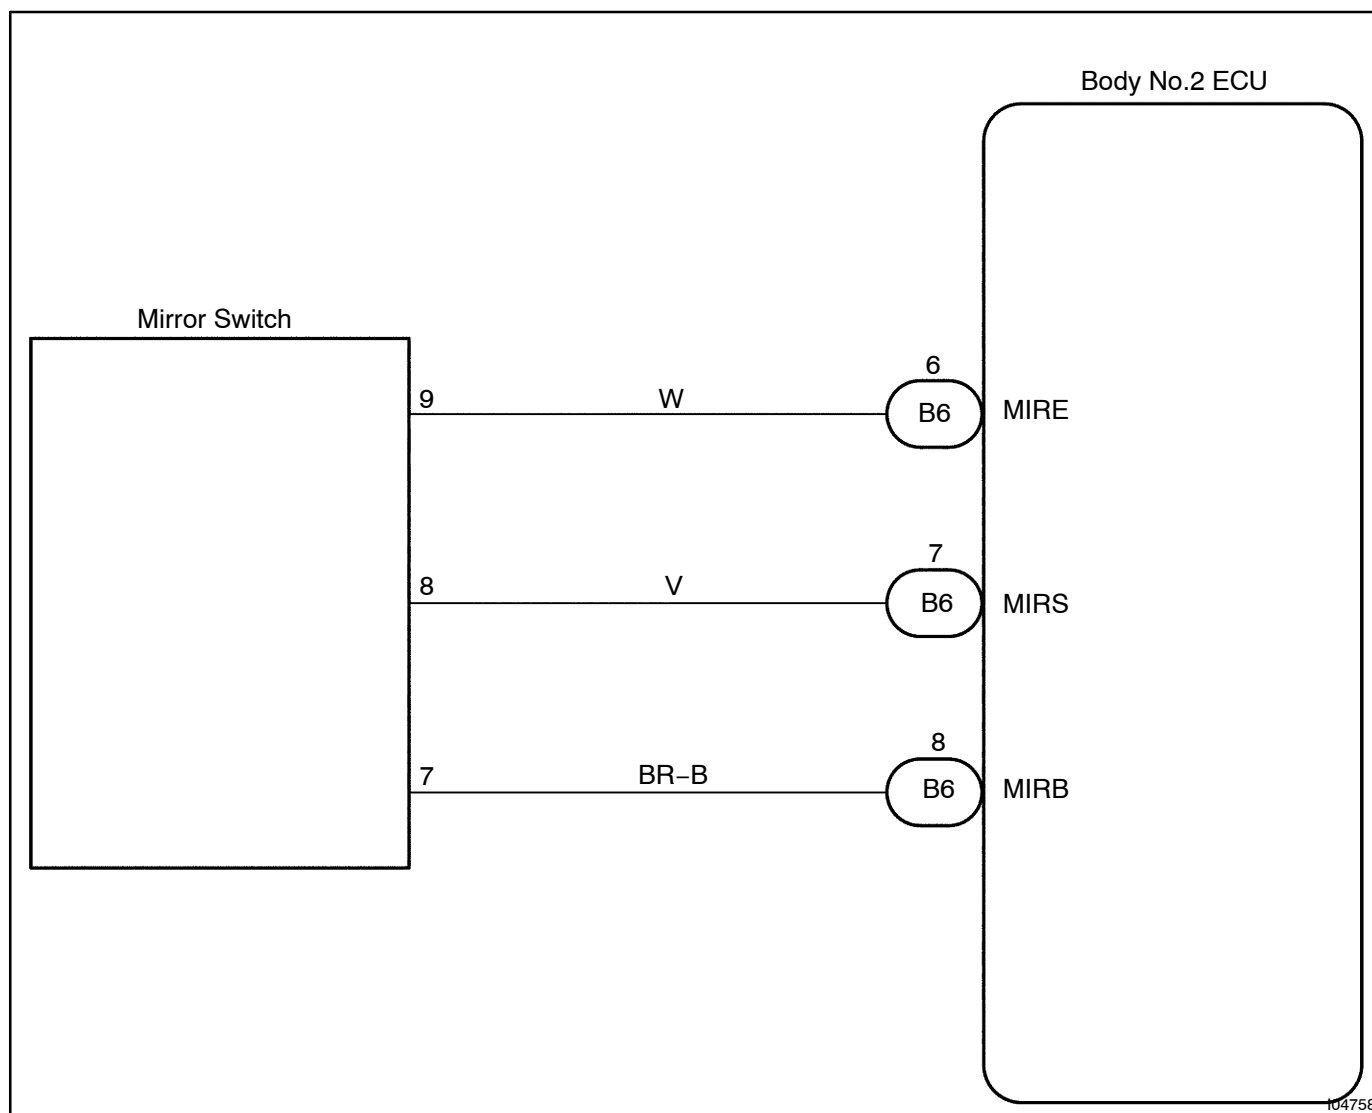

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check mirror switch using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the mirror switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page DI-706, DI-738)

NG

2 Check mirror switch (See page BE-192)

NG

Replace the mirror switch.

OK

3 Check wireharness and connector between mirror switch and body No.2 ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page DI-706, DI-738)