


## Position of Parts in Engine Compartment

[RHD : 3UZ-FE]

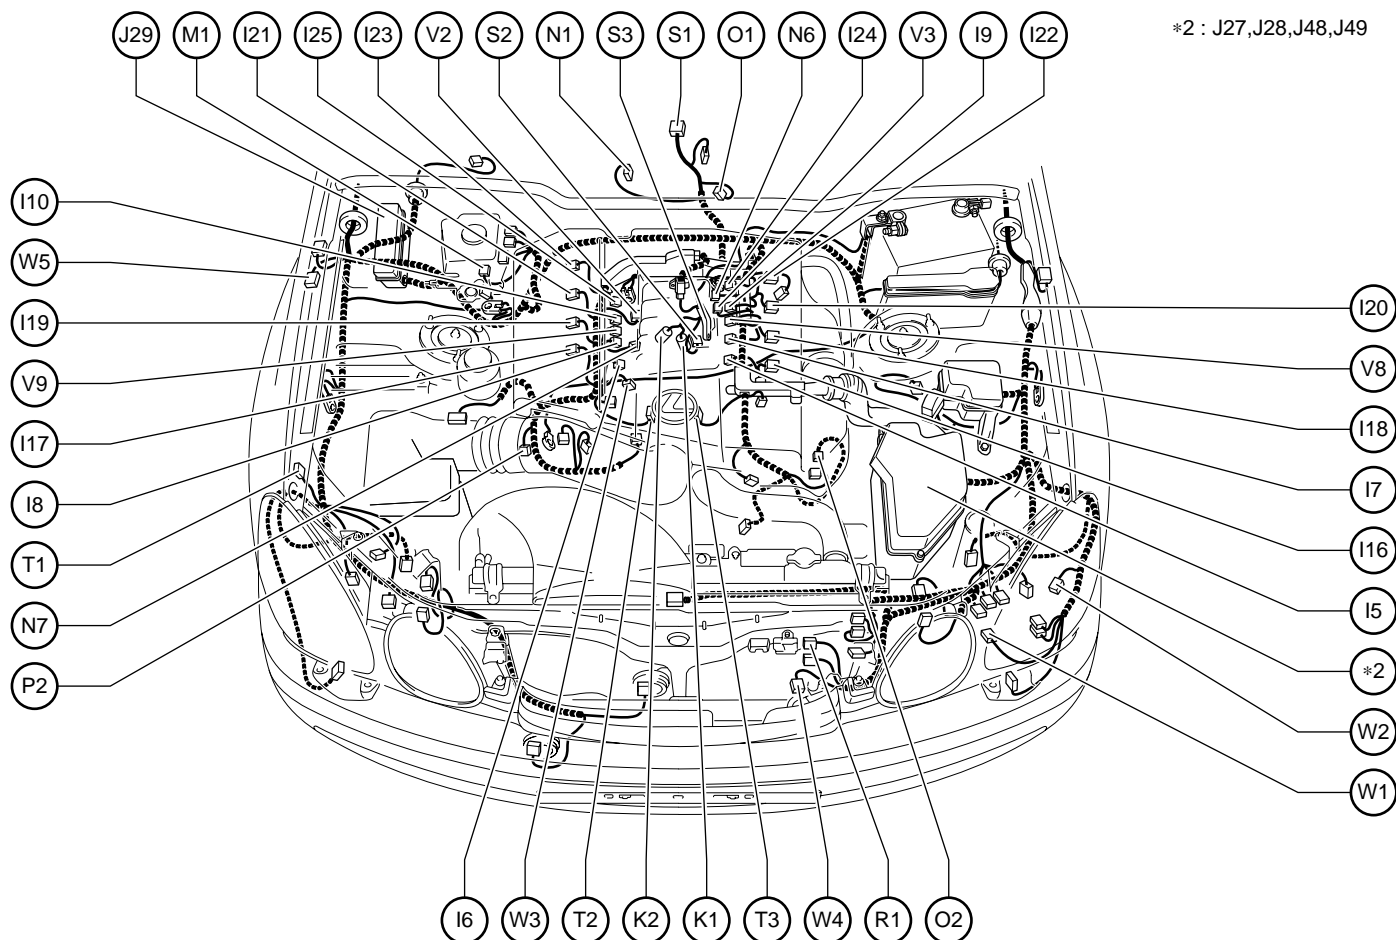

I 5 Injector No.1  
 I 6 Injector No.2  
 I 7 Injector No.3  
 I 8 Injector No.4  
 I 9 Injector No.5  
 I 10 Injector No.6  
 I 16 Ignition Coil and Igniter No.1  
 I 17 Ignition Coil and Igniter No.2  
 I 18 Ignition Coil and Igniter No.3  
 I 19 Ignition Coil and Igniter No.4  
 I 20 Ignition Coil and Igniter No.5  
 I 21 Ignition Coil and Igniter No.6  
 I 22 Ignition Coil and Igniter No.7  
 I 23 Ignition Coil and Igniter No.8  
 I 24 Injector No.7  
 I 25 Injector No.8

J 27 Junction Connector  
 J 28 Junction Connector  
 J 29 Junction Connector  
 J 48 Junction Connector  
 J 49 Junction Connector

K 1 Knock Sensor 1  
 K 2 Knock Sensor 2

M 1 Master Cylinder Pressure Sensor

N 1 Neutral Start SW  
 N 6 Noise Filter (Ignition No.1)  
 N 7 Noise Filter (Ignition No.2)

O 1 O/D Direct Clutch Speed Sensor  
 O 2 Oil Pressure SW

P 2 PPS Solenoid

R 1 Radiator Fan Motor

S 1 Speed Sensor (ECT)  
 S 2 Starter  
 S 3 Starter

T 1 Theft Deterrent Horn  
 T 2 Throttle Control Motor  
 T 3 Throttle Position Sensor

V 2 VSV (ACIS)  
 V 3 VSV (EVAP)  
 V 8 VVT Sensor LH  
 V 9 VVT Sensor RH

W 1 Washer Level Warning SW  
 W 2 Washer Motor  
 W 3 Water Temp. Sensor  
 W 4 Water Temp. SW  
 W 5 Wireless Door Lock Buzzer