



FUEL TANK AND LINE COMPONENTS

FI026-01

CAUTION:

- Always use new gasket when replacing the fuel tank or component parts.
- Apply proper torque to all parts tightened.

Location of Fuel Tank Cushion

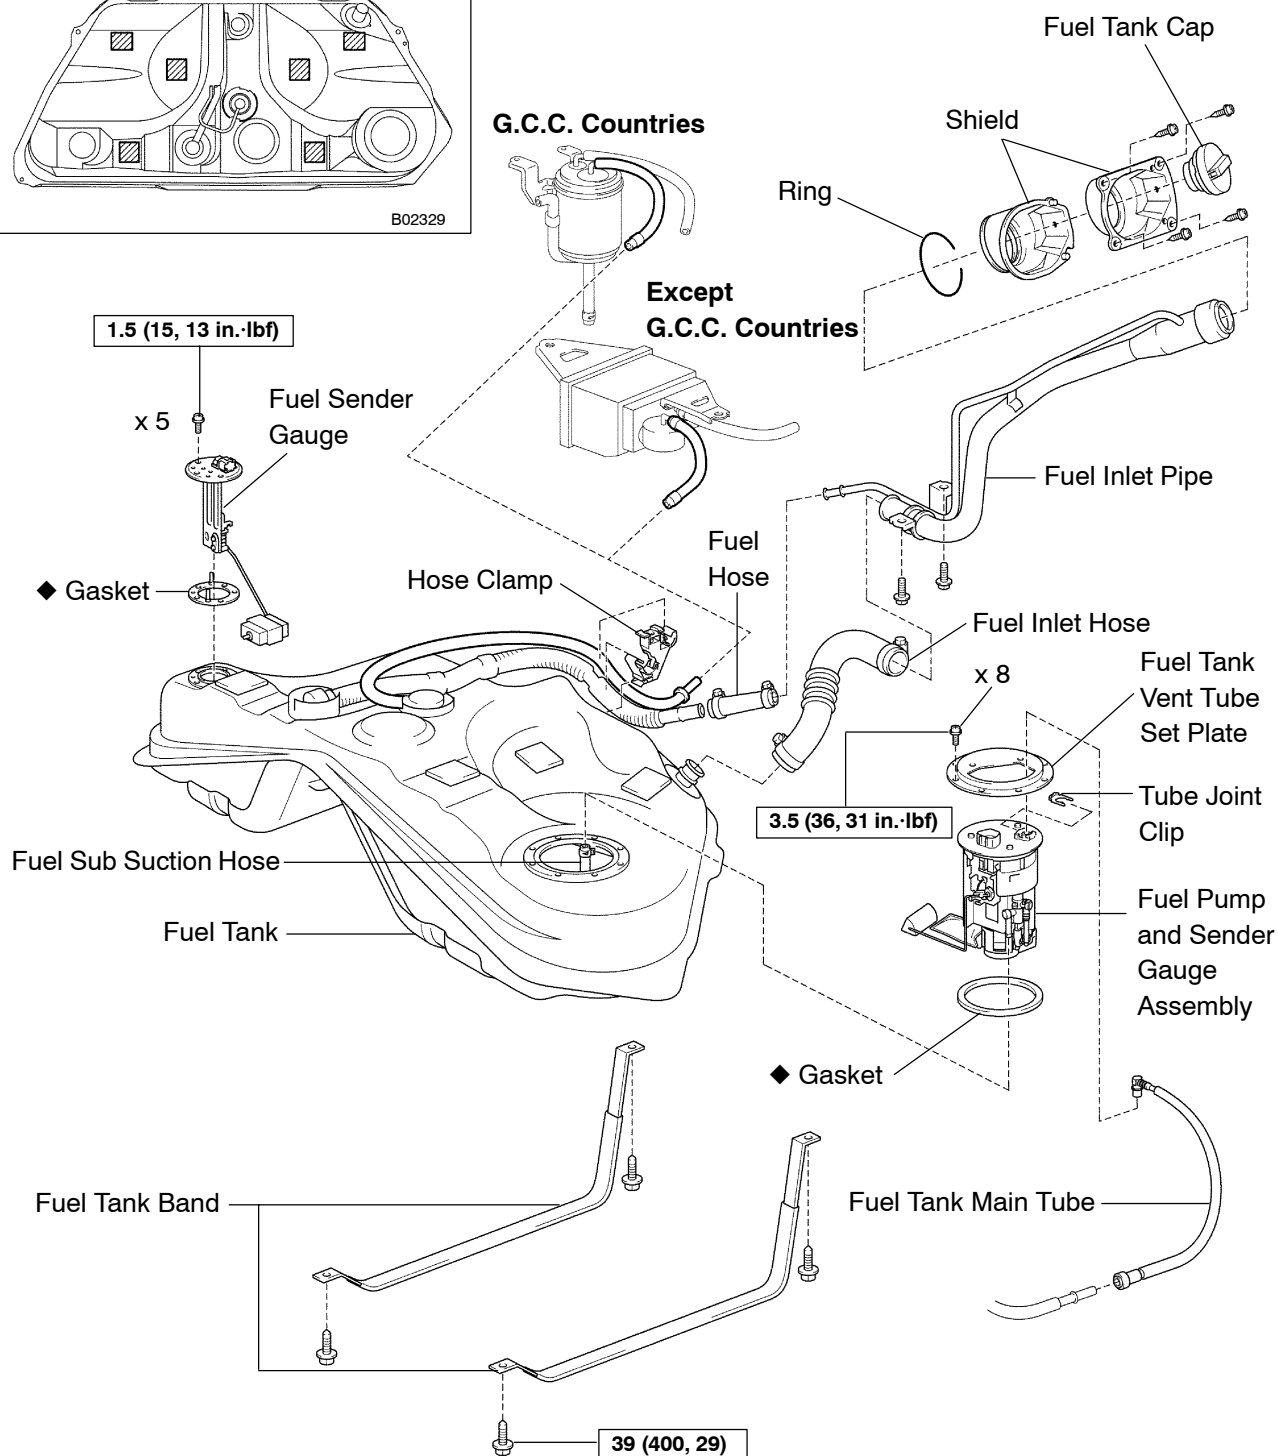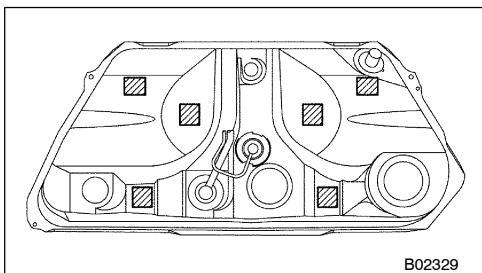

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

B02813

LEXUS GS300 (RM588E)

B03463