


WIRING DIAGRAM

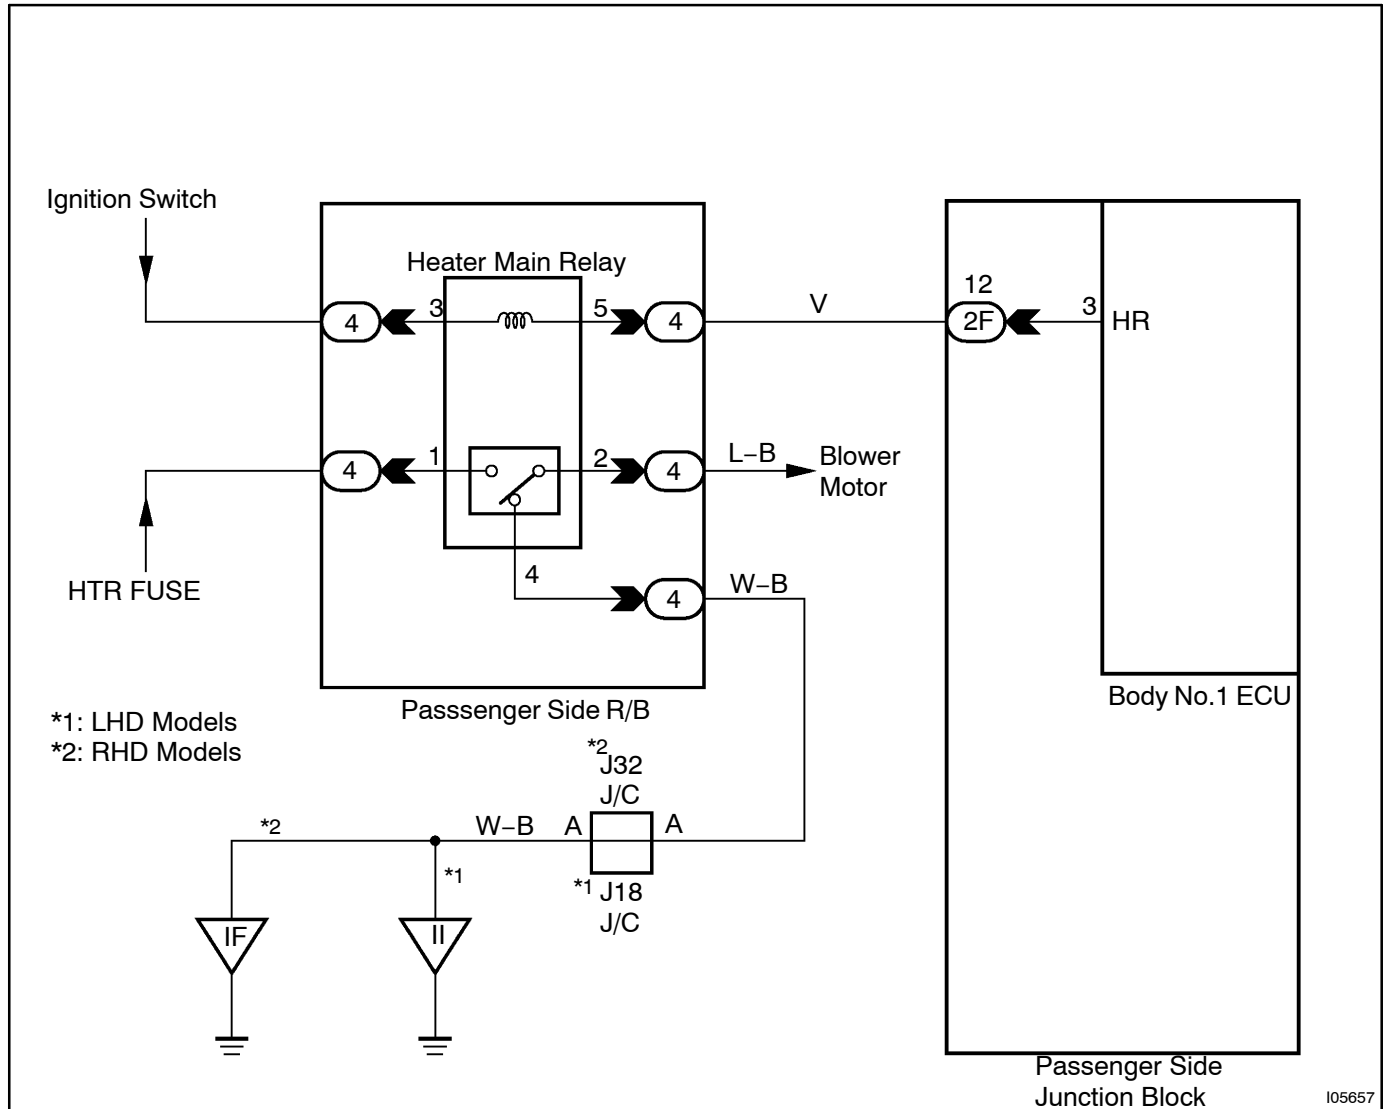

INSPECTION PROCEDURE

1

Check heater main relay (See page AC-85).

NG

Replace the heater main relay.

OK

2

Check wireharness and connector between heater main relay and body No.1 ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page DI-912)