

SERVICE HINTS

C9 CIGARETTE LIGHTER

1-GROUND : Approx. 12 volts with ignition SW at **ACC** or **ON** position

3-GROUND : Always continuity

P4 POWER OUTLET

2-GROUND : Approx. 12 volts with ignition SW at **ACC** or **ON** position

1-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C9	72 (LHD)	J18	74 (LHD)	P4	74 (LHD)
	86 (RHD)	J32	88 (RHD)		88 (RHD)
J12	A	74 (LHD)	J36	B	88 (RHD)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	58 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	58 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	108 (RHD)	Left Kick Panel
II	98 (LHD)	Right Side of the Cowl Panel


○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	110 (RHD)	Cowl Wire	I6	100 (LHD)	Cowl Wire

C9 BLACK

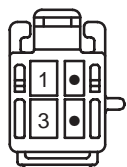

J12 (A) GRAY




(Hint : See Page 7, 23, 39)

J18




(Hint : See Page 7, 23, 39)

J32

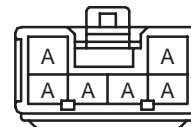

(Hint : See Page 7, 23, 39)

J36 (B)

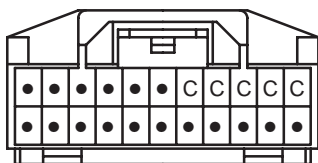

(Hint : See Page 7, 23, 39)

P4

