


Clock circuit

CIRCUIT DESCRIPTION

Body No.2 ECU will send the light deterioration signal to the clock and deteriorate the light.

WIRING DIAGRAM

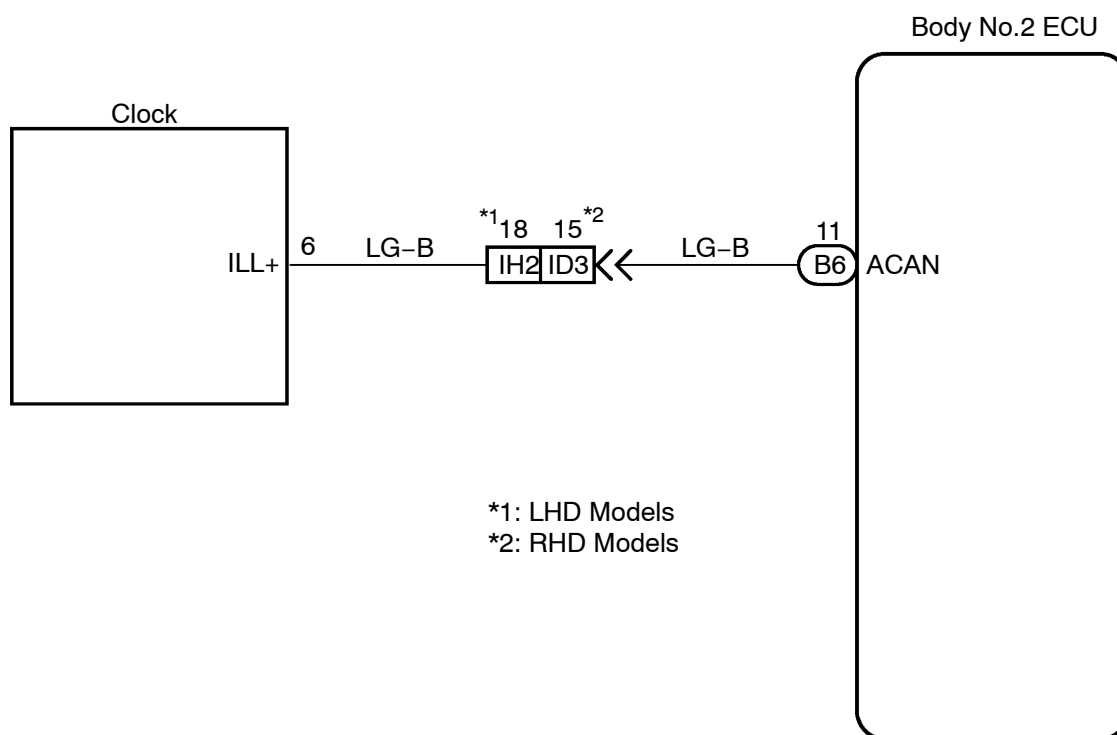

*1: LHD Models
*2: RHD Models

I05670

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check clock using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check that the clock will deteriorate its light in an ACTIVE TEST.

OK:

Clock must be deteriorate.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-660)

NG

2 Check the clock. (See page BE-240)

NG

Replace the clock.

OK

3 Check wireharness and connector between clock and body No.2 ECU, battery and clock.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page DI-660)