

## DISASSEMBLY

### 1. REMOVE THESE PARTS:

- (a) Headrest
- (b) Power seat switch knobs
- (c) Front seat inner belt
- (d) No.1 front seat cushion shield
- (e) Front seat cushion shield
- (f) Front seat inner cushion cover

### 2. REMOVE SEAT CUSHION ASSEMBLY

- (a) Remove the wire harness from the seat cushion assembly.
- (b) Remove the 4 bolts and seat cushion assembly from the seat adjuster.

### 3. REMOVE SEAT CUSHION COVER

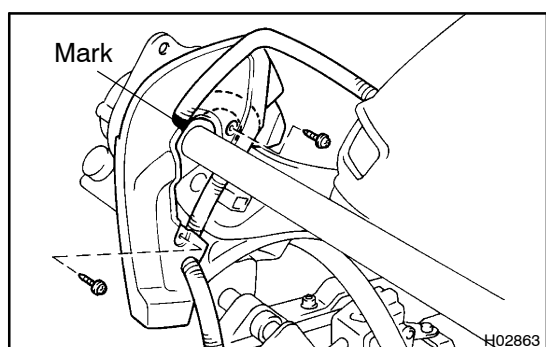
- (a) Remove the hook and hog rings.
- (b) Remove the seat cushion cover with pad from the seat cushion frame.
- (c) Remove the seat cushion cover from the seat cushion pad.

### 4. REMOVE SEATBACK ASSEMBLY

- (a) Remove the 2 screws and pull the seatback board downward to remove it.
- (b) Remove the hog rings.
- (c) Disconnect the connectors.
- (d) Remove the 4 bolts.

### NOTICE:

**Be careful not to damage the wire harness.**



- (e) Remove the 2 screws and seat cushion inside cover then disconnect the wire harness from the cover.

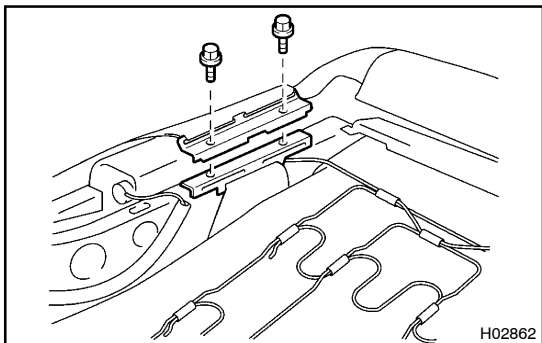
### HINT:

Do the same for LH and RH.

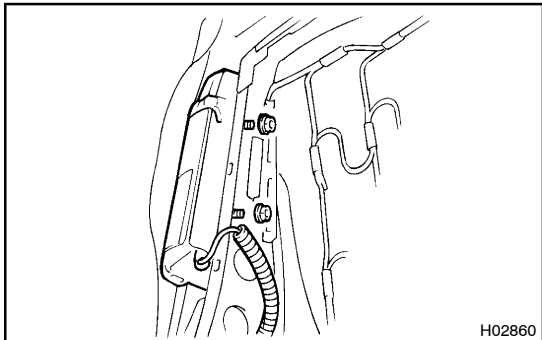
- (f) Remove the covers from the outer and inner seat tracks.

### 5. REMOVE SEATBACK COVER

- (a) Remove the hog rings.
- (b) Remove the headrest supports.
- (c) Remove the seatback cover with pad from the seatback frame.
- (d) Remove the 2 bolts and lumbar support assembly from the seatback frame.
- (e) Remove the hog rings and seatback cover from the seatback pad.

**6. REMOVE SIDE AIRBAG ASSEMBLY**

- (a) Remove the hog rings.
- (b) Release the clamp.
- (c) Remove the 2 bolts and release the seat cover hook and retainer from the seatback frame.



- (d) Remove the 2 nuts and side airbag assembly.

**CAUTION:**

- Do not store the side airbag assembly with the airbag deployment side facing down.
- Never disassemble the side airbag assembly.

**7. REMOVE WIRE HARNESS**

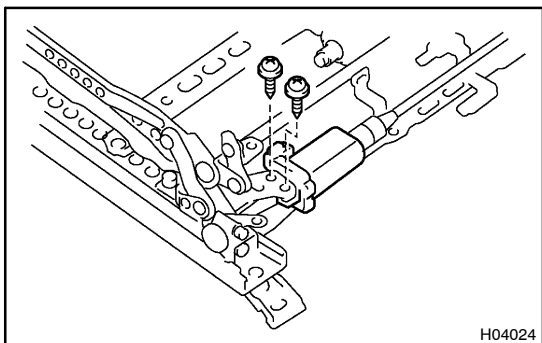
Disconnect the connectors, then remove the wire harness.

**8. Driver's Seat:****REMOVE SEAT POSITION CONTROL RELAY**

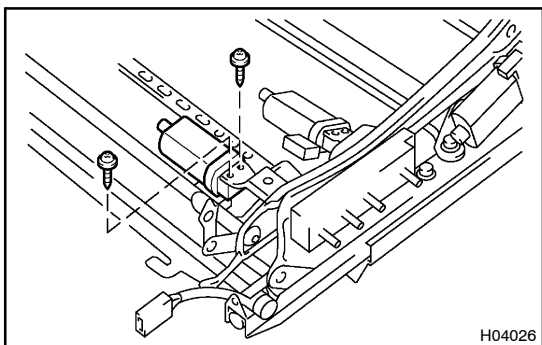
Remove the 2 nuts and seat position control relay.

**9. REMOVE SLIDE MOTOR**

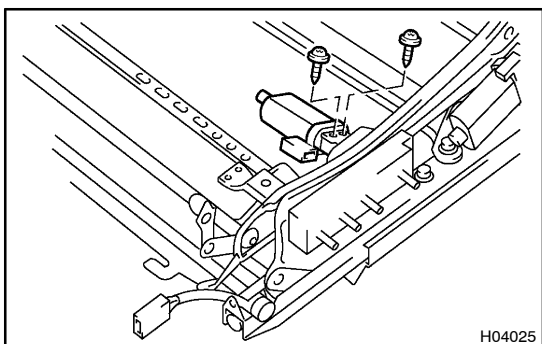
- (a) Remove the 2 screws.
- (b) Disconnect the seat adjuster drive cable, then remove the slide motor.

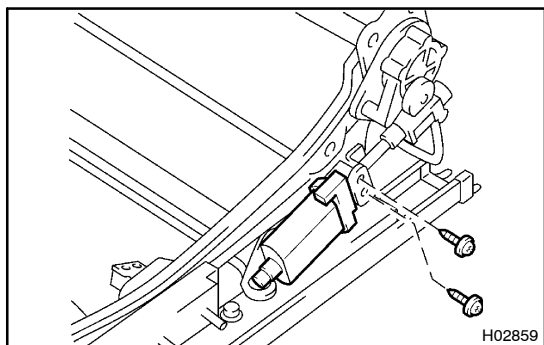
**10. REMOVE FRONT VERTICAL MOTOR**

Remove the 2 screws and front vertical motor.

**11. REMOVE LIFTER MOTOR**

Remove the 2 screws and lifter motor.



**12. REMOVE RECLINING MOTOR**

- (a) Remove the 2 screws.
- (b) Disconnect the shaft, then remove the reclining motor.

**13. REMOVE POWER SEAT SWITCH**

Remove the 3 screws and power seat switch.