


## Door courtesy light and courtesy switch circuit

### CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

### WIRING DIAGRAM

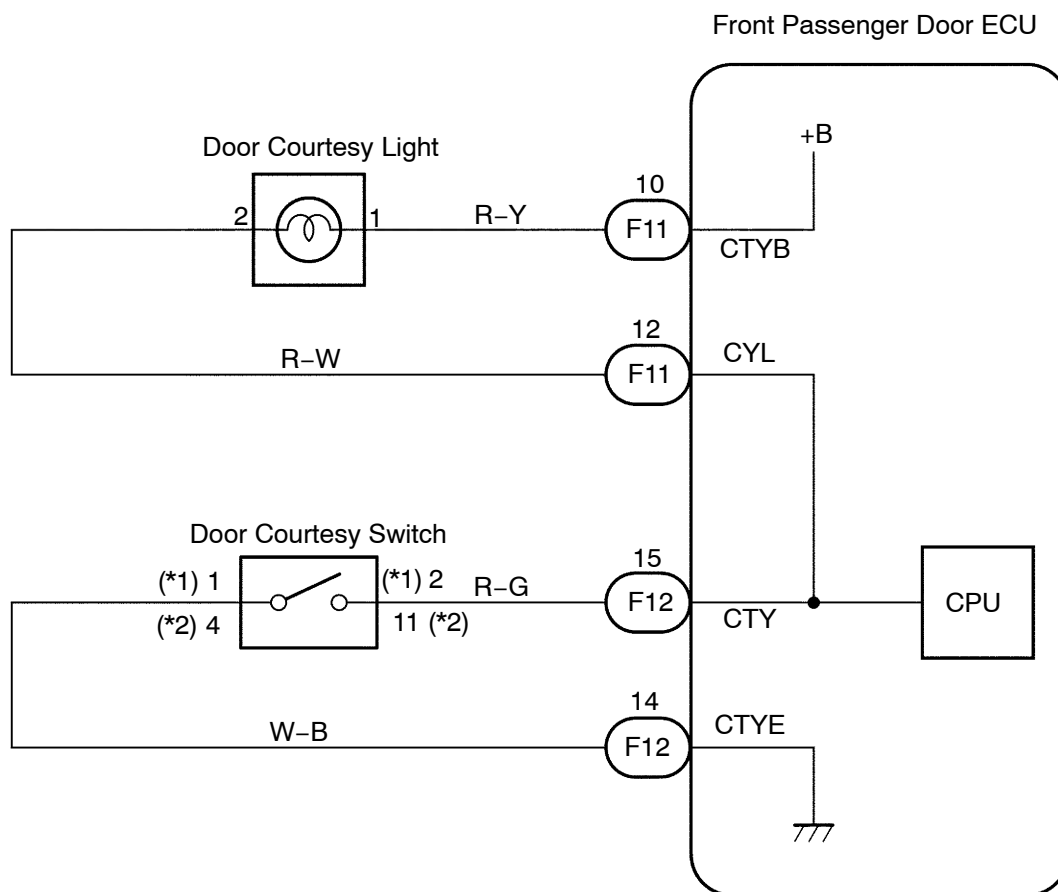

(\*1): w/o Double locking system

(\*2) w/ Double locking system

I03216

INSPECTION PROCEDURE

|   |   |
|---|---|
| 1 | Check operation of door courtesy light. |
|---|---|

CHECK:

Check that door courtesy light comes on when door opened, and goes off when door is closed.

OK:

Must be operated normally.

OK

Proceed to next circuit inspection shown on problem symptom table (See page Pub. No. RM588E on page DI-616).

NG

|   |   |
|---|---|
| 2 | Check courtesy light. (See Pub. No. RM588E on page BE-66) |
|---|---|

NG

Replace the courtesy light.

OK

|   |   |
|---|---|
| 3 | Check courtesy switch<br>(w/o Double locking system: See Pub, No. RM588E on page BE-66<br>w/Double locking system: See page BE-3) |
|---|---|

NG

Replace the courtesy switch.

OK

**4****Check wireharness and connector between courtesy light and front passenger door ECU, courtesy switch and front passenger door ECU.****NG****Repair or replace wireharness or connector.****OK****Proceed to next circuit inspection shown on  
problem symptoms table  
(See Pub. No. RM588E on page DI-616.)**