

OUTER REAR VIEW MIRROR REMOVAL

CAUTION / NOTICE / HINT

Tech Tips

- Use the same procedure for the RH side and LH side.
- The following procedure is for the LH side.

PROCEDURE

1. REMOVE FRONT DOOR INSIDE HANDLE BEZEL PLUG

[Click here](#)

2. REMOVE FRONT ARMREST ASSEMBLY

[Click here](#)

3. REMOVE MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY WITH FRONT DOOR UPPER ARMREST BASE PANEL (for Driver Side)

[Click here](#)

4. REMOVE POWER WINDOW REGULATOR SWITCH ASSEMBLY WITH FRONT DOOR UPPER ARMREST BASE PANEL (for Front Passenger Side)

[Click here](#)

5. REMOVE COURTESY LIGHT ASSEMBLY


[Click here](#)

6. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY

[Click here](#)

7. REMOVE FRONT DOOR PANEL PROTECTOR

- a. Remove the front door panel protector.

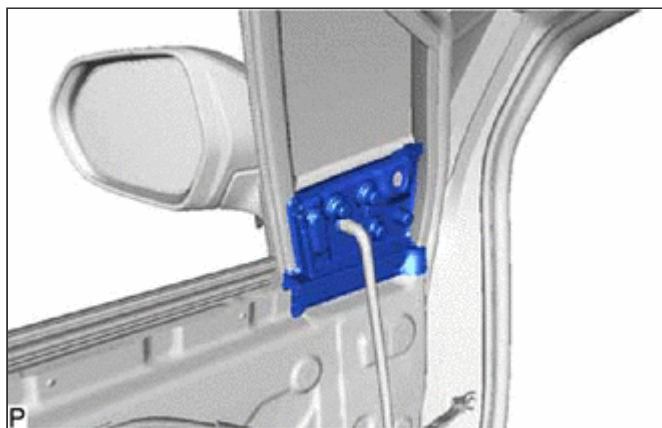

8. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY

- a. Disengage the clip.



b. Disconnect the connector.

c. Remove the 3 nuts.

d. Disengage the claw and guide and remove the outer rear view mirror assembly.

