


Hazard switch circuit

CIRCUIT DESCRIPTION

Body No.1 ECU activates the flasher relay during warning of the theft deterrent system and flashes the hazard.

WIRING DIAGRAM

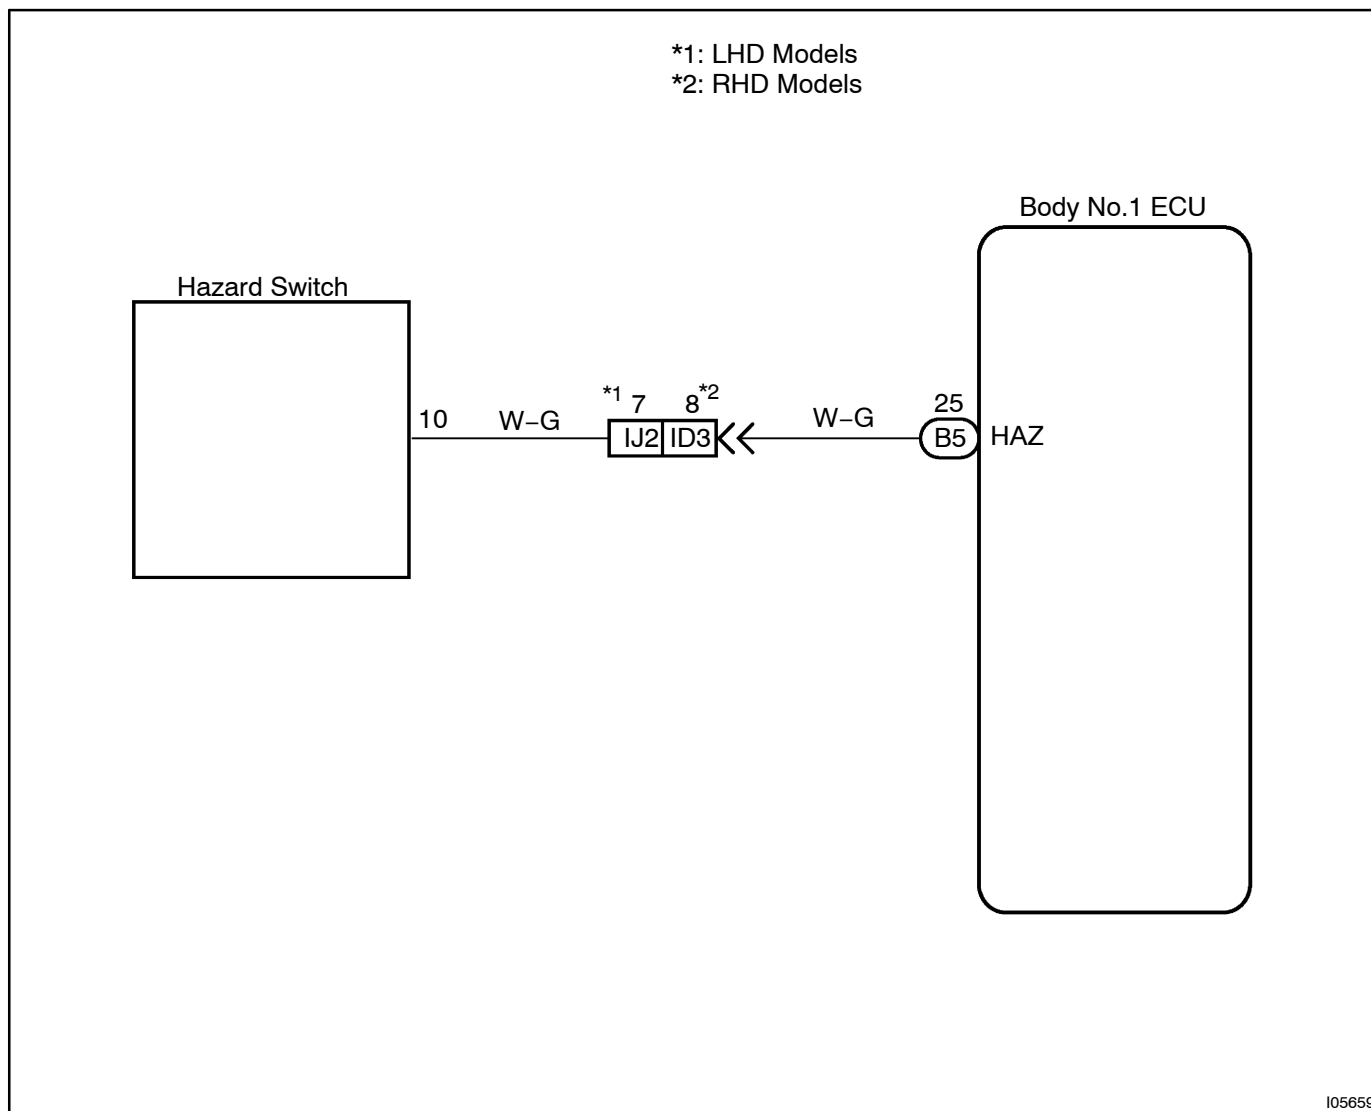

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check hazard operation using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check that the hazard can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)

NG

2 Check hazard switch. (See page BE-61)

NG

Replace the hazard switch.

OK

3 Check wireharness and connector between hazard switch and body No.1 ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)