


Position of Parts in Seat

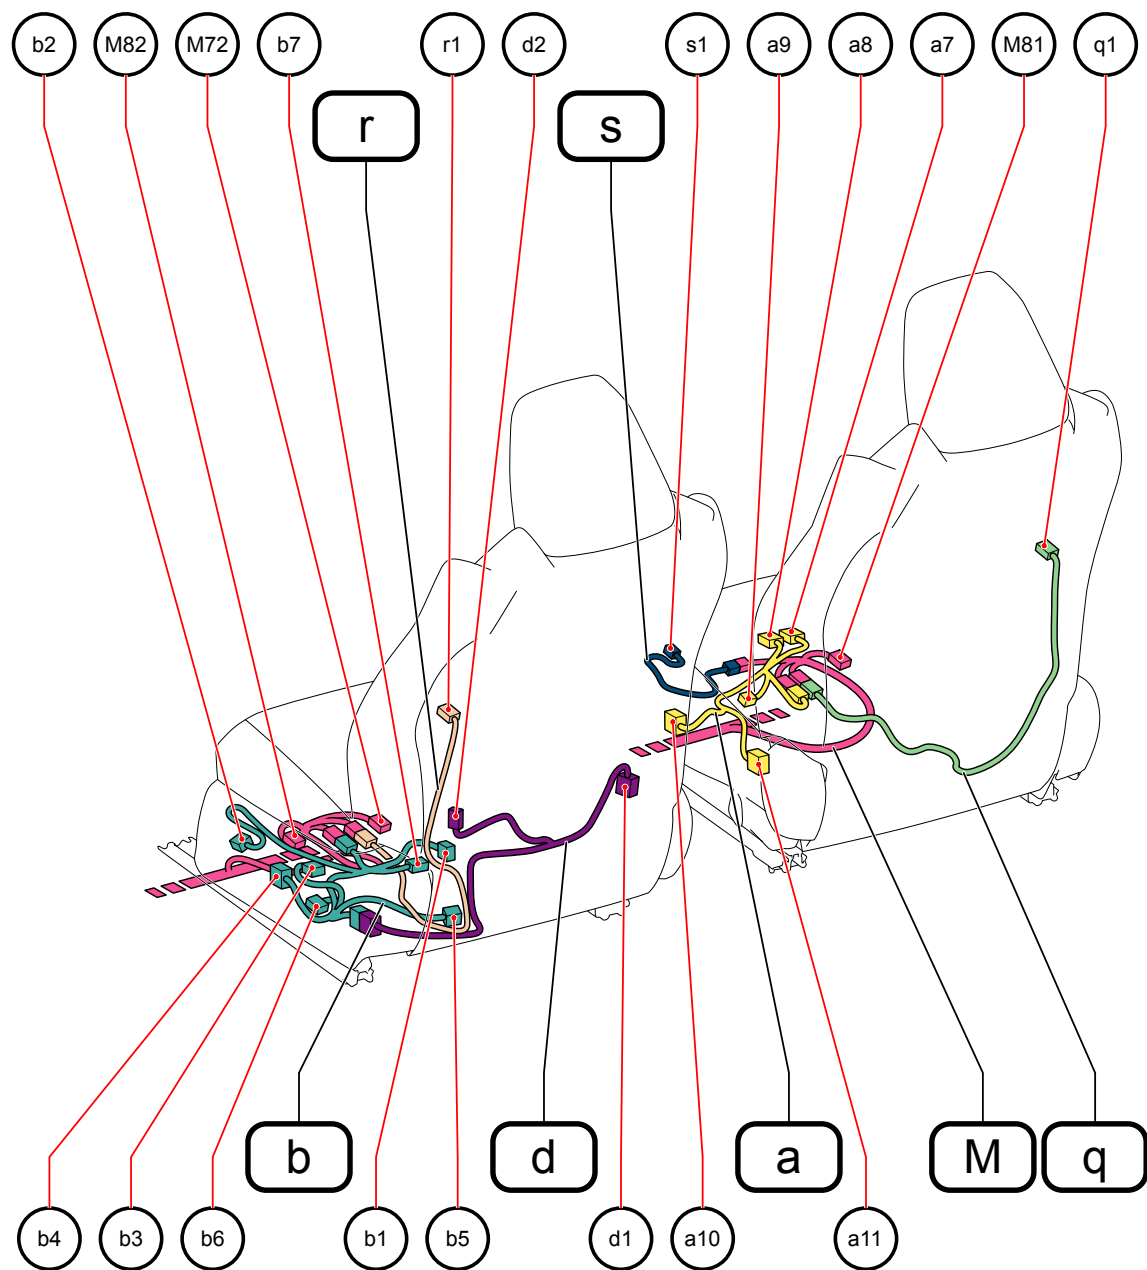

## Position of Parts in Seat

---

M72	Front Seat Inner Belt Assembly LH
M81	Front Seat Cushion Heater Assembly RH
M82	Front Seat Cushion Heater Assembly LH
a7	Occupant Detection ECU
a8	Occupant Detection ECU
a9	Front Seat Inner Belt Assembly RH
a10	Front in Weight Detection Sensor Sub-Assembly
a11	Rear in Weight Detection Sensor Sub-Assembly
b1	Front Power Seat Slide Position Motor LH (Front Seat Adjuster Assembly LH)
b2	Front Power Seat Tilt Position Motor LH (Front Seat Adjuster Assembly LH)
b3	Front Power Seat Lift Position Motor LH (Front Seat Adjuster Assembly LH)
b4	Front Power Seat Switch LH
b5	Front Seat Cushion Heater Assembly LH
b6	No. 19 Junction Connector
b7	Condenser
d1	Front Power Seat Reclining Position Motor LH (Front Seat Back Frame Sub-Assembly LH)
d2	Front Power Seat Lumbar Support Motor LH (Lumbar Support Adjuster Assembly LH)
q1	Front Seat Airbag Assembly RH
r1	Front Seat Airbag Assembly LH
s1	Front Seat Cushion Airbag Assembly RH

## Position of Parts in Seat

