



# Door lock motor circuit

## WIRING DIAGRAM

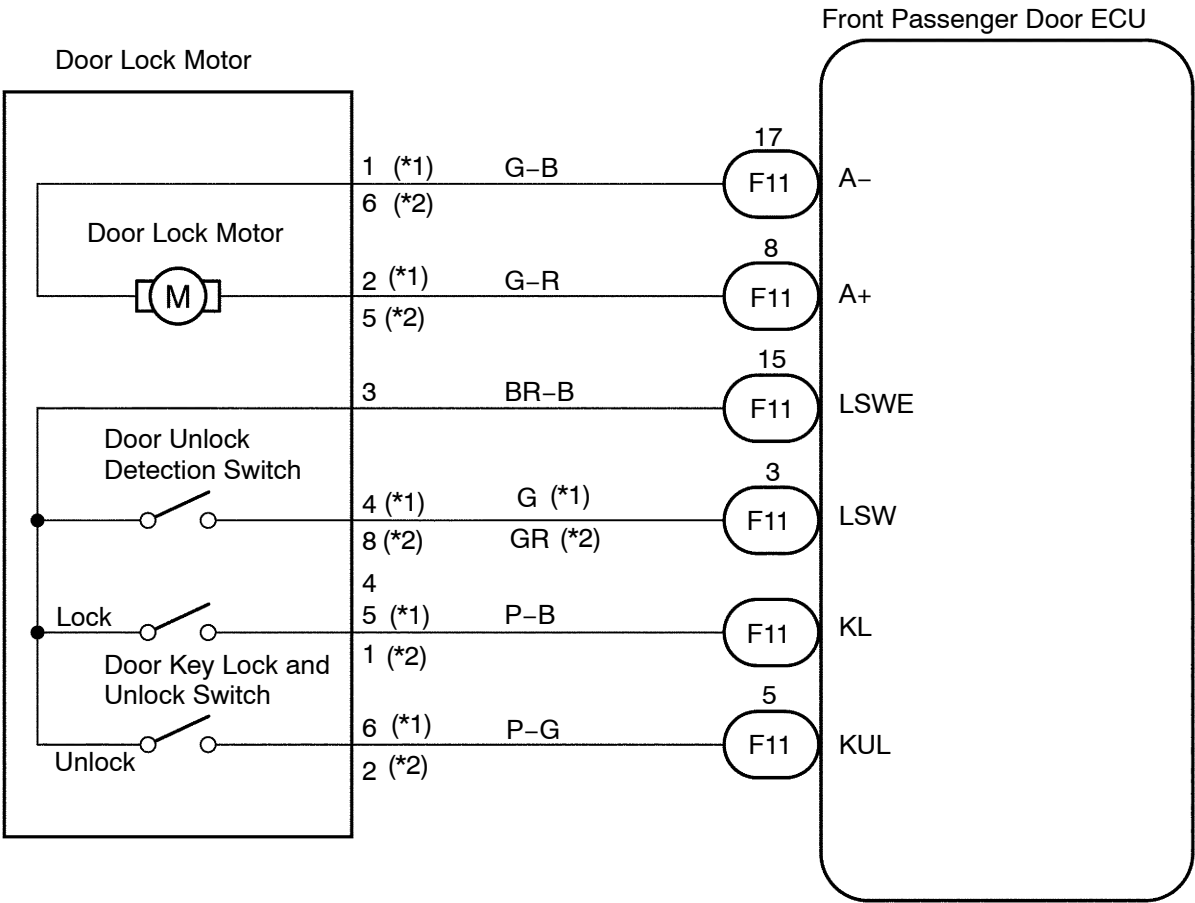

(\*1) : w/o Double locking system  
(\*2): w/ Double locking system

RHD models:

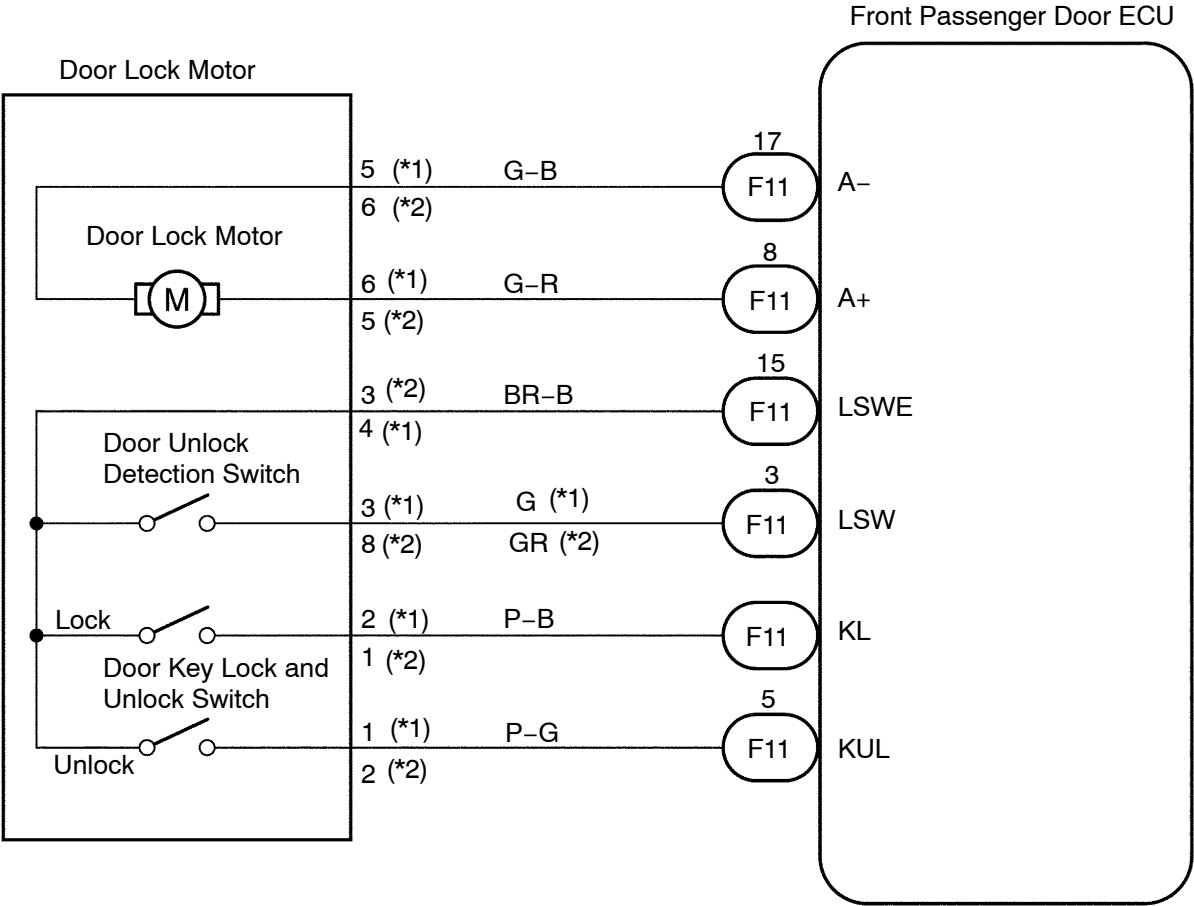

(\*1) : w/o Double locking system  
(\*2): w/ Double locking system

INSPECTION PROCEDURE

HINT:  
In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1

Check door lock motor using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check that the door lock motor can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptom table. (See Pub. No. RM588E on page DI-616)

NG

2

Check door lock motor  
(w/o double locking system: See Pub. No. RM588E on page BE-148  
w/~~double locking system~~: [See page BE-12](#))

NG

Replace the door lock motor.

OK

3

Check wireharness and connector between door lock motor and Front Passenger Door ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptom table (See Pub.No. RM588E on page DI-616).