


POWER SOURCE LOCATION

BE2AT-01

● Engine Room No. 1 Junction Block

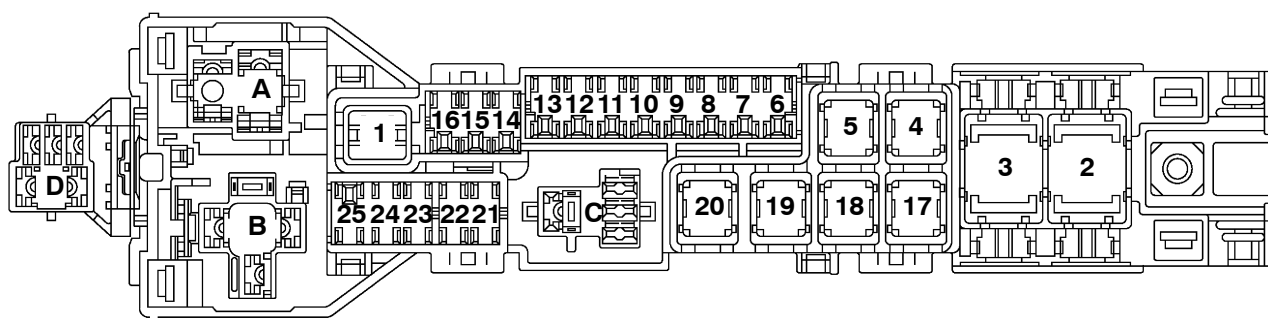

Fuses

1. MAIN H-Fuse
2. FL ABS NO. 1 H-Fuse
3. ALT H-Fuse
4. ABS NO. 2 H-Fuse
5. H-LP CLN H-Fuse
6. RAD NO. 1 Fuse
7. ALT-S Fuse
8. EFI Fuse
9. TURN HAZ Fuse
10. TEL Fuse
11. AM2 Fuse
12. ETCS Fuse
13. HORN Fuse
14. D FR DOOR Fuse
15. P FR DOOR Fuse
16. ECU-B1 Fuse
17. HTR Fuse
18. FAN MAIN H-Fuse
19. CDS FAN H-Fuse
20. RDI FAN H-Fuse
21. H-LP R LWR Fuse
22. H-LP L LWR Fuse
23. H-LP R UPR Fuse (w/o D.R.L.)
DRL NO. 1 Fuse (w/ D.R.L.)
24. H-LP L UPR Fuse (w/o D.R.L.)
25. DRL NO. 2 Fuse (w/ D.R.L.)

Relays


- A. Headlight Control Relay
- B. Starter Relay
- C. EFI Relay
- D. ENG Main Relay

D.R.L.: Daytime Running Light

C


I23720

● Driver Side Instrument Panel Junction Block

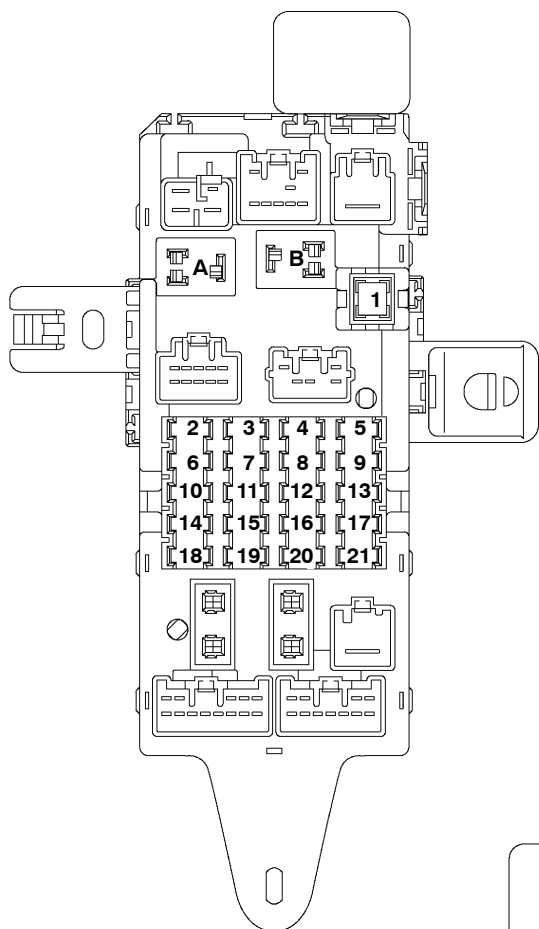

Fuses


1. AM1 H-Fuse
2. WASHER Fuse
3. FOG Fuse
4. TAIL Fuse
5. -
6. GAUGE Fuse
7. FUEL OPN Fuse
8. -
9. PANEL Fuse
10. HTR Fuse
11. SRS-B Fuse
12. P/SEAT (D) Fuse
13. RAD NO. 2 Fuse
14. WIP Fuse
15. OBD Fuse
16. STOP Fuse
17. CIG Fuse
18. ECU-IG Fuse
19. STARTER Fuse
20. IGN Fuse
21. D RR DOOR Fuse

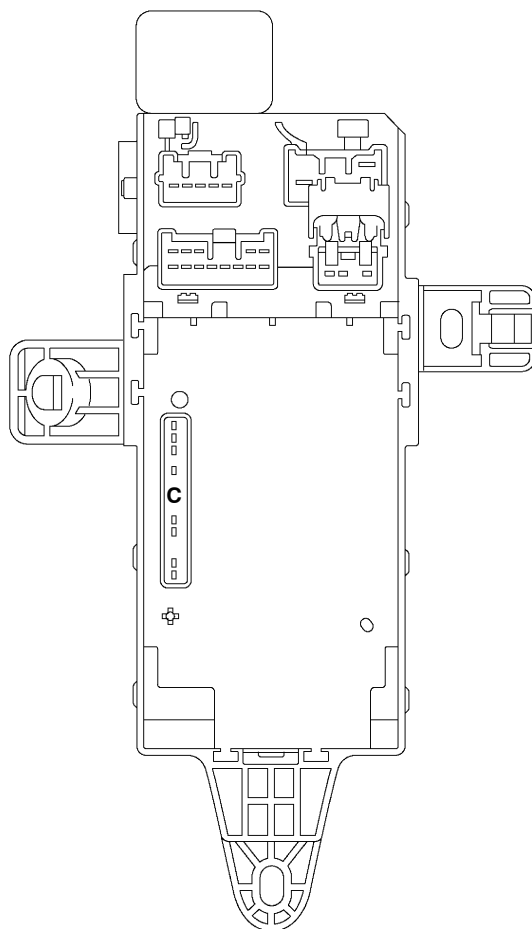

Relays


- A. Fog Light Relay
- B. Taillight Control Relay
- C. Body ECU No. 2

• Passenger Side Instrument Panel Junction Block

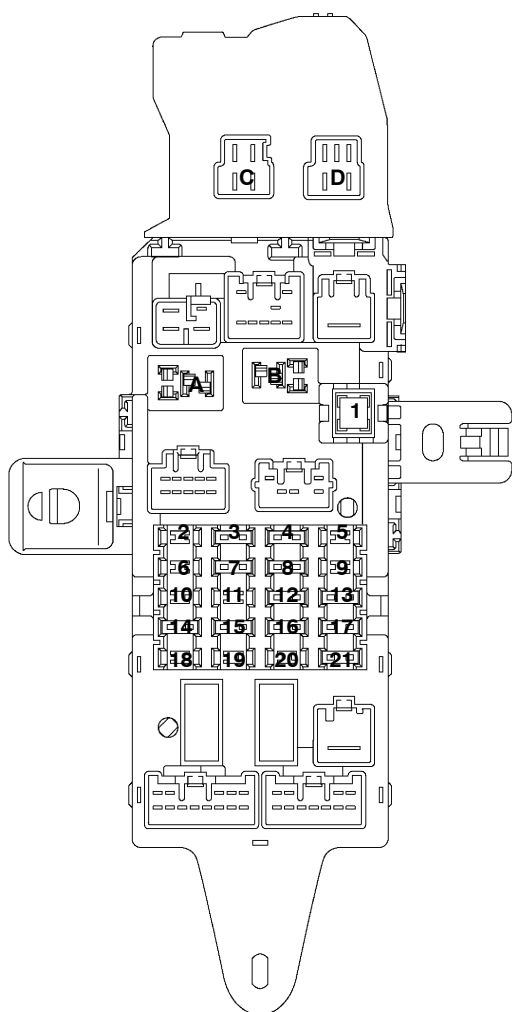

Fuses

1. DEF H-Fuse
2. -
3. RR Fog Fuse
4. MIR HTR Fuse
5. -
6. -
7. S/ROOF Fuse
8. ECU-B3 Fuse
9. -
10. -
11. -
12. P/SEAT (P) Fuse
13. DOME Fuse
14. SEAT HTR Fuse
15. -
16. TV Fuse
17. ECU-B2 Fuse
18. -
19. -
20. -
21. P RR DOOR Fuse

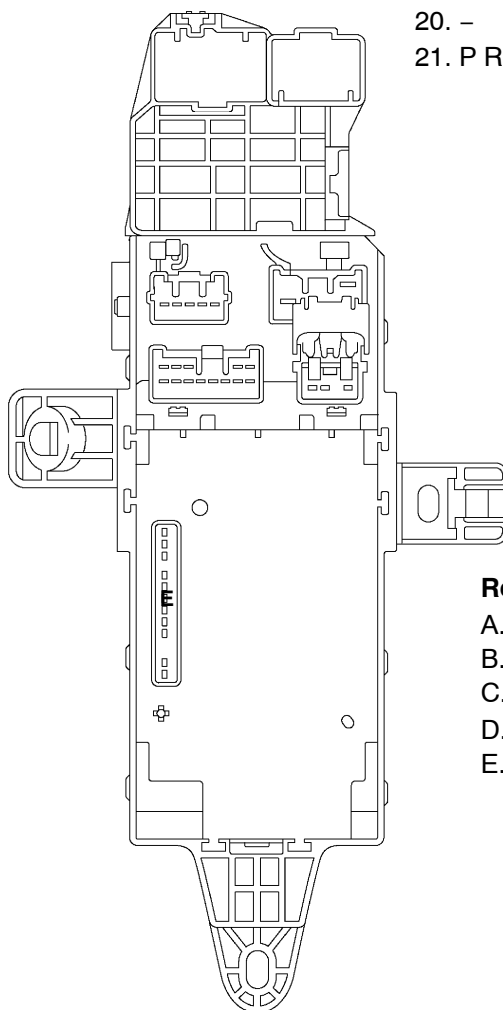

Relays

- A. Ignition Main Relay
- B. Mirror Heater Relay
- C. Defogger Relay
- D. Heater Relay
- E. Body ECU No. 1