


H02824

INSTALLATION

1. INSTALL No.3 FUEL TANK FILLER PIPE SHIELD

2. INSTALL FUEL FILLER OPENING LID

- Install the lock retainer with the nut to the opening lid.
Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)
- Using a riveter, install the fuel filler opening lid with the 2 rivets to the body.

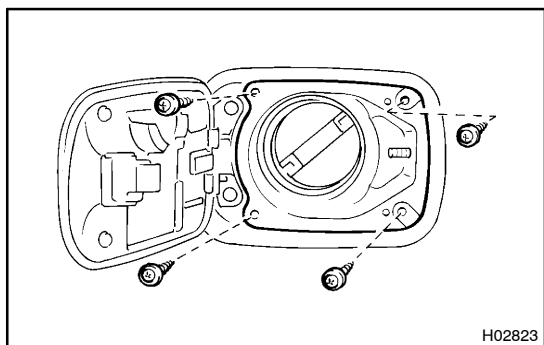

H02823


3. INSTALL FUEL TANK FILLER PIPE SHIELD

- Remove the fuel tank cap.
- Install the fuel inlet pipe shield to the body.
- Install the fuel tank cap quickly.

CAUTION:

Always keep the tank cap closed when it is not required to be open. Keep all fire away during the operation.


- Tighten the 4 screws.

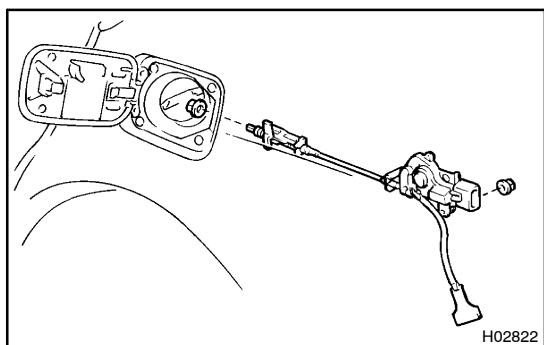

H02822

4. INSTALL FUEL LID LOCK ASSEMBLY

- Connect the connector, then install the lock assembly with the nut.
Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)
- Torque the nut from the fuel lid side.
Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

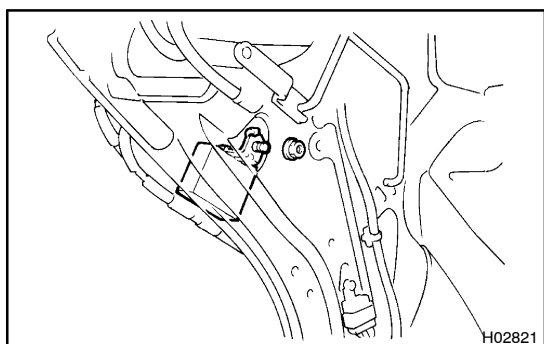

H02821

- Connect the connector, then install the lamp failure relay with the nut.

5. INSTALL THESE PARTS:

- Luggage compartment trim side cover LH
- Luggage compartment trim front cover
- Rear floor finish plate
- Luggage compartment floor mat