


# Position of Parts in Seat (RHD)

- \* 1:Europe
- \* 2:Australia
- \* 3:Lumbar Support Only Type
- \* 4:Except Lumbar Support Only Type

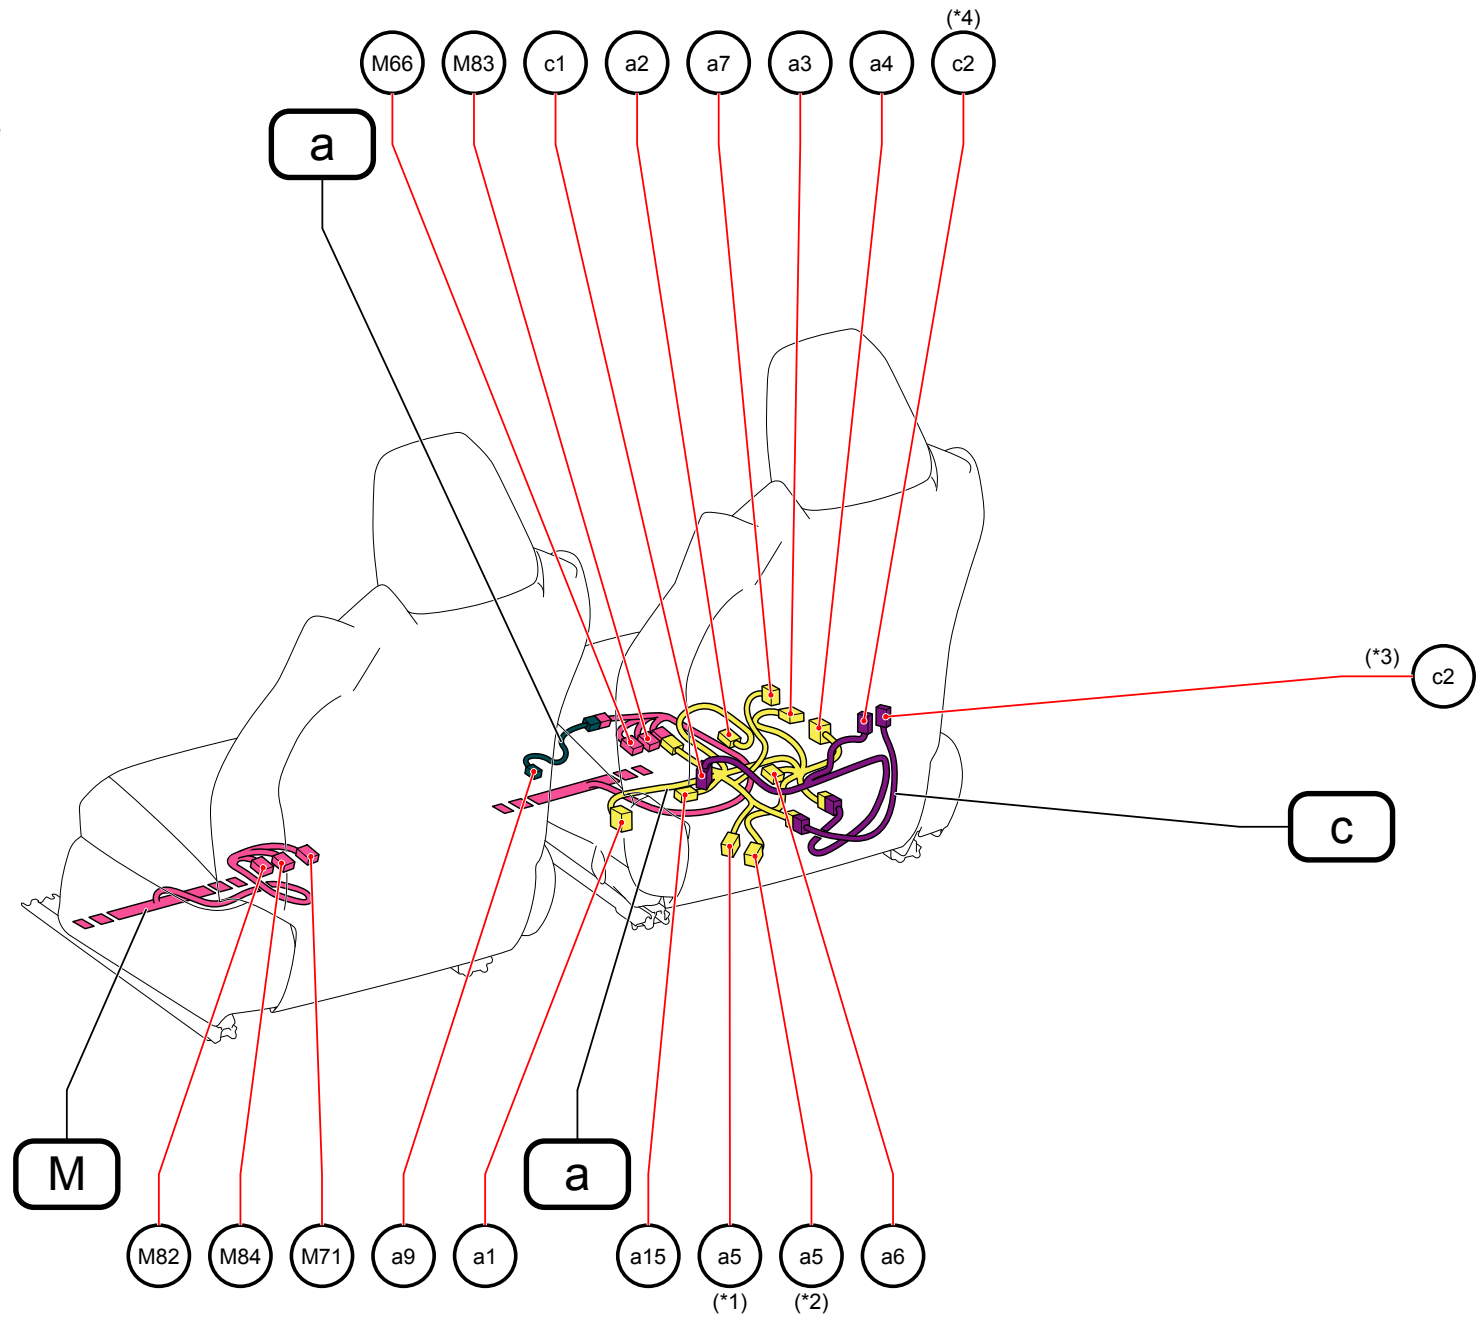


## Position of Parts in Seat (RHD)


---

M66	Front Seat Inner Belt Assembly RH
M71	Front Seat Inner Belt Assembly LH
M82	Front Seat Cushion Heater Assembly LH
M83	Front Seat Airbag Assembly RH
M84	Front Seat Airbag Assembly LH
a1	Front Power Seat Slide Position Motor RH (Front Seat Adjuster Assembly RH)
a2	Front Power Seat Slide Position Motor RH (Front Seat Adjuster Assembly RH)
a3	Front Power Seat Slide Position Motor RH (Front Seat Adjuster Assembly RH)
a4	Front Power Seat Switch RH
a5	Front Seat Cushion Heater Assembly RH
a6	No. 27 Junction Connector
a7	Front Lumbar Power Seat Switch RH
a9	Seat Position Airbag Sensor
a15	Condenser
c1	Front Power Seat Reclining Position Motor RH (Front Seat Back Frame Sub-Assembly RH)
c2	Front Power Seat Lumbar Support Motor RH (Lumbar Support Adjuster Assembly RH)


## Position of Parts in Seat (RHD)

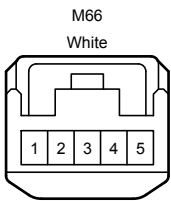


90980-12366

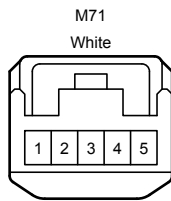


90980-12366

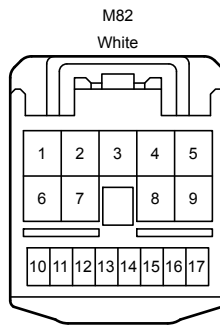


90980-12374

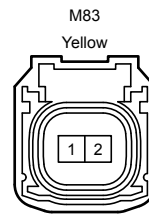


90980-12698

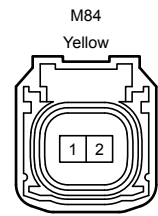


90980-12698




90980-12341




90980-12341




90980-12341

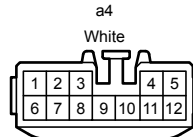


90980-10803

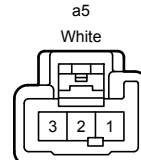


90980-11763

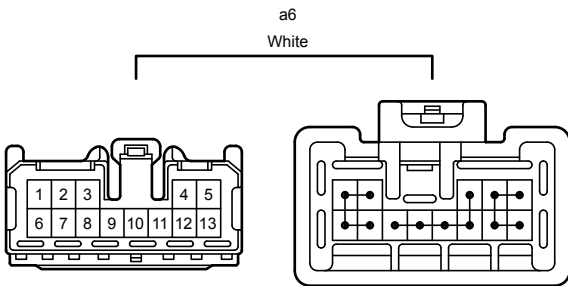


90980-12346

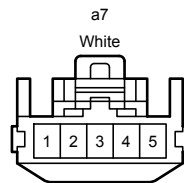


90980-12348

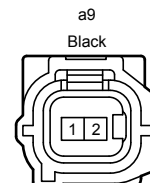


90980-12416

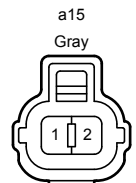

90980-10843

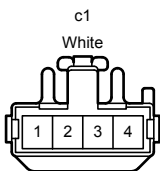

90980-12335



90980-12341