

REMOTE CONTROL MIRROR (RHD)

SYSTEM OUTLINE

REMOTE CONTROL MIRROR OPERATION

When the ignition SW is turned to the **ACC** or **ON** position, the outer mirrors can be operated. When the remote control mirror SW is operated, the signal is input to body ECU No.2 and the outer mirror is adjusted to the desired position through communication control of the body ECU and door ECU etc.

In the remote control mirror system, the position sensor detects the number of rotations of each motor (Movement amount of each mirror) and inputs it to the ECU. This makes it possible to store and recall the outer mirror position using the position memory SW. The outer mirror position is stored and recalled through communication control of the body ECU and door ECU etc.

SERVICE HINTS

R7 REMOTE CONTROL MIRROR SW

- 8-9 : Continuity with select SW at right side
 - : Approx. **100** Ω with select SW at left side
- 7-9 : Approx. **100** Ω with operation SW at up side
 - : Approx. **250** Ω with operation SW at right side
 - : Approx. **470** Ω with operation SW at down side
 - : Approx. **800** Ω with operation SW at left side

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A16	86 (RHD)	E5	82 (RHD)	J41	88 (RHD)
B5	A 86 (RHD)	F11	A 90 (RHD)	J42	88 (RHD)
B6	A 86 (RHD)	F12	B 90 (RHD)	M2	88 (RHD)
C12	86 (RHD)	F13	C 90 (RHD)	R7	88 (RHD)
D18	A 90 (RHD)	J31	88 (RHD)	R17	92 (RHD)
D19	B 90 (RHD)	J32	88 (RHD)	R18	92 (RHD)
D20	C 90 (RHD)	J37	88 (RHD)	T5	88 (RHD)
D21	90 (RHD)	J38	88 (RHD)		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	54 (RHD)	Engine Room No.1 R/B (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	58 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)
1G	59 (RHD)	
1H		
2B	60 (RHD)	Engine Room Main Wire and Passenger Side J/B (Left Kick Panel)
2F	60 (RHD)	Cowl Wire and Passenger Side J/B (Left Kick Panel)
2G	61 (RHD)	
2H		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	108 (RHD)	Front Door LH Wire and Cowl Wire (Left Kick Panel)
ID1	108 (RHD)	Instrument Panel Wire and Cowl Wire (Right Side of the Blower Unit)
IJ1	110 (RHD)	Instrument Panel Wire and Cowl Wire (Right Side of the Steering Column)
IL1	110 (RHD)	Front Door RH Wire and Cowl Wire (Right Kick Panel)




: GROUND POINTS

Code	See Page	Ground Points Location
IF	108 (RHD)	Left Kick Panel
IG	108 (RHD)	Behind the Combination Meter
II	108 (RHD)	Cowl Side Panel RH


A16

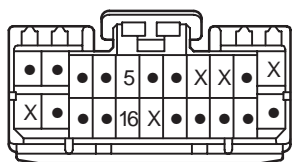


B5 (A)

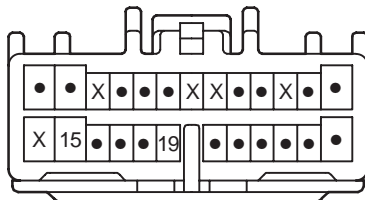


B6 (A)

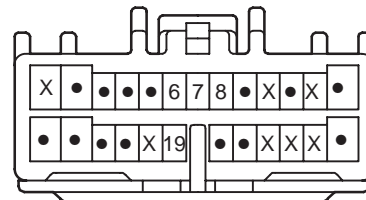


C12

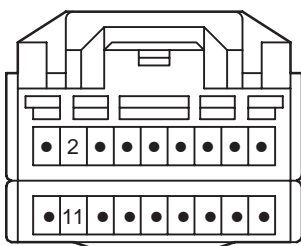


D18 (A) GRAY

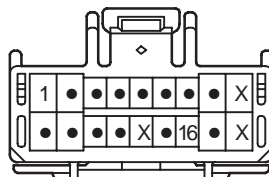


D19 (B) GRAY

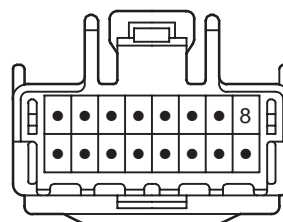


D20 (C) GRAY

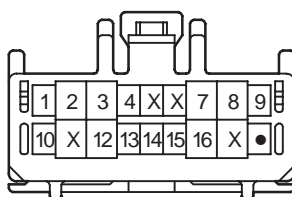


D21 BLUE

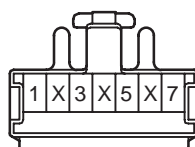


E5

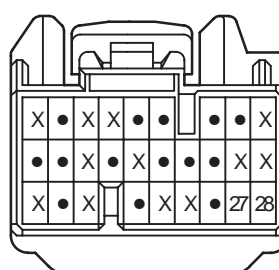


F11 (A) GRAY

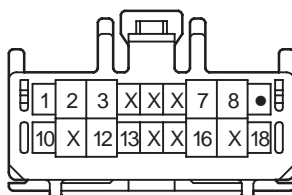


F12 (B) GRAY

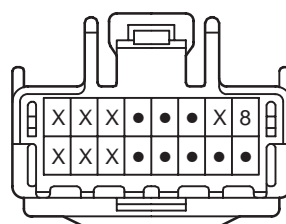

F13 (C) GRAY

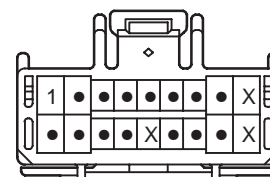


J31

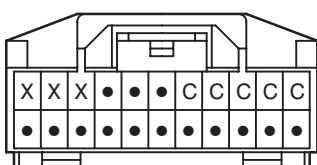

(Hint : See Page 7, 23, 39)

J32

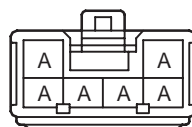


(Hint : See Page 7, 23, 39)

J37



(Hint : See Page 7, 23, 39)


J38

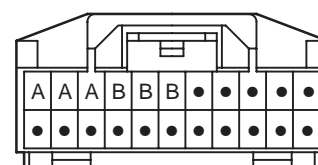

(Hint : See Page 7, 23, 39)


REMOTE CONTROL MIRROR (RHD)

J41

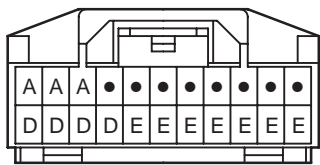


(Hint : See Page 7, 23, 39)

J42

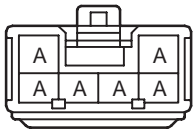


(Hint : See Page 7, 23, 39)


M2 BLUE

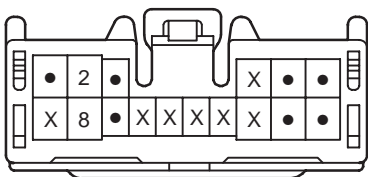


R7 BLACK

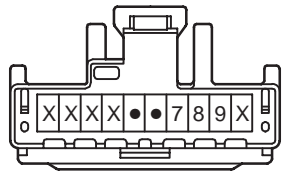

R17

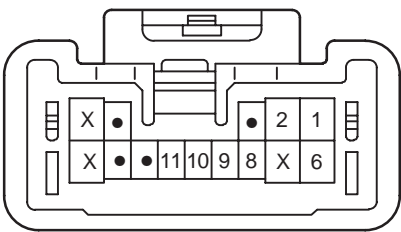

R18

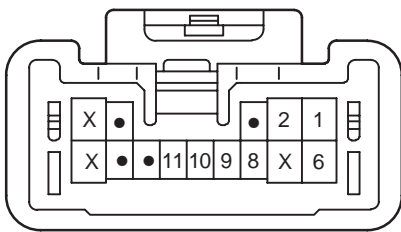

T5 GRAY

