

SEAT HEATER

SERVICE HINTS

S4 SEAT HEATER SW

6-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

4-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J7	A	74 (LHD)	J32	88 (RHD)	S16
J8		74 (LHD)	J37	88 (RHD)	
J10		74 (LHD)	J41	B	S17
J14		74 (LHD)	J42	88 (RHD)	
J16	A	74 (LHD)	J46	94 (RHD)	S18
J23		80 (LHD)	J47	B	
J24	A	80 (LHD)	S4	74 (LHD)	S19
J31	B	88 (RHD)		88 (RHD)	

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	54 (LHD)	Engine Room No.1 R/B (Engine Compartment Right)
	54 (RHD)	Engine Room No.1 R/B (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	58 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	58 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)
1G	59 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	59 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)
1H	59 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	59 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)
2A	60 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
	60 (RHD)	Engine Room Main Wire and Passenger Side J/B (Left Kick Panel)
2F	60 (LHD)	Cowl Wire and Passenger Side J/B (Right Kick Panel)
	60 (RHD)	Cowl Wire and Passenger Side J/B (Left Kick Panel)
2G	61 (LHD)	Cowl Wire and Passenger Side J/B (Right Kick Panel)
	61 (RHD)	Cowl Wire and Passenger Side J/B (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	98 (LHD)	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
	108 (RHD)	
IL2	100 (LHD)	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IM2	110 (RHD)	
BC1	104 (LHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
	114 (RHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Front Passenger's Seat)
BD1	104 (LHD)	Floor No.1 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)
	114 (RHD)	Floor No.1 Wire and Front Seat RH Wire (Under the Driver's Seat)



: GROUND POINTS


Code	See Page	Ground Points Location
EB	96 (LHD)	Left Fender
IF	98 (LHD)	Left Kick Panel
	108 (RHD)	
II	98 (LHD)	Right Side of the Cowl Panel
	108 (RHD)	Cowl Side Panel RH
BJ	102 (LHD)	Rear Floor Partition Panel LH
	112 (RHD)	
BL	102 (LHD)	Rear Floor Partition Panel RH
	112 (RHD)	

J7 (A) GRAY

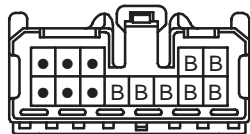


(Hint : See Page 7, 23, 39)

J8

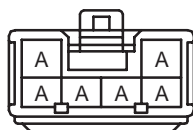


(Hint : See Page 7, 23, 39)

J10 ORANGE

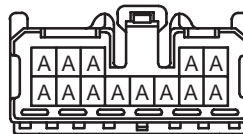


(Hint : See Page 7, 23, 39)

J14 GRAY

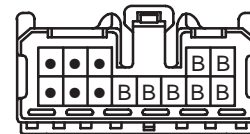

(Hint : See Page 7, 23, 39)

J16 (A)

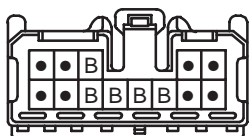


(Hint : See Page 7, 23, 39)

J23




(Hint : See Page 7, 23, 39)

J24 (A)




(Hint : See Page 7, 23, 39)

J31 (B)

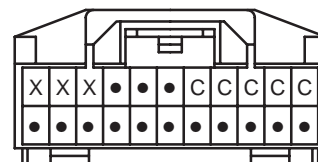

(Hint : See Page 7, 23, 39)

J32

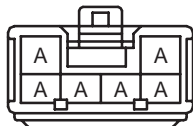


(Hint : See Page 7, 23, 39)

J37




(Hint : See Page 7, 23, 39)

J41 (B)

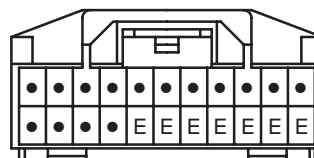

(Hint : See Page 7, 23, 39)

J42

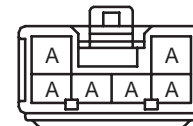

(Hint : See Page 7, 23, 39)

J46




(Hint : See Page 7, 23, 39)

J47 (B)




(Hint : See Page 7, 23, 39)


S4

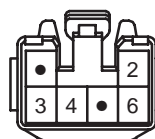

S16 GRAY



S17 GRAY



S18 GRAY



S19 GRAY

