


## Pattern select switch circuit

### CIRCUIT DESCRIPTION

Body No.1 ECU detect the state of pattern select switch.

### WIRING DIAGRAM

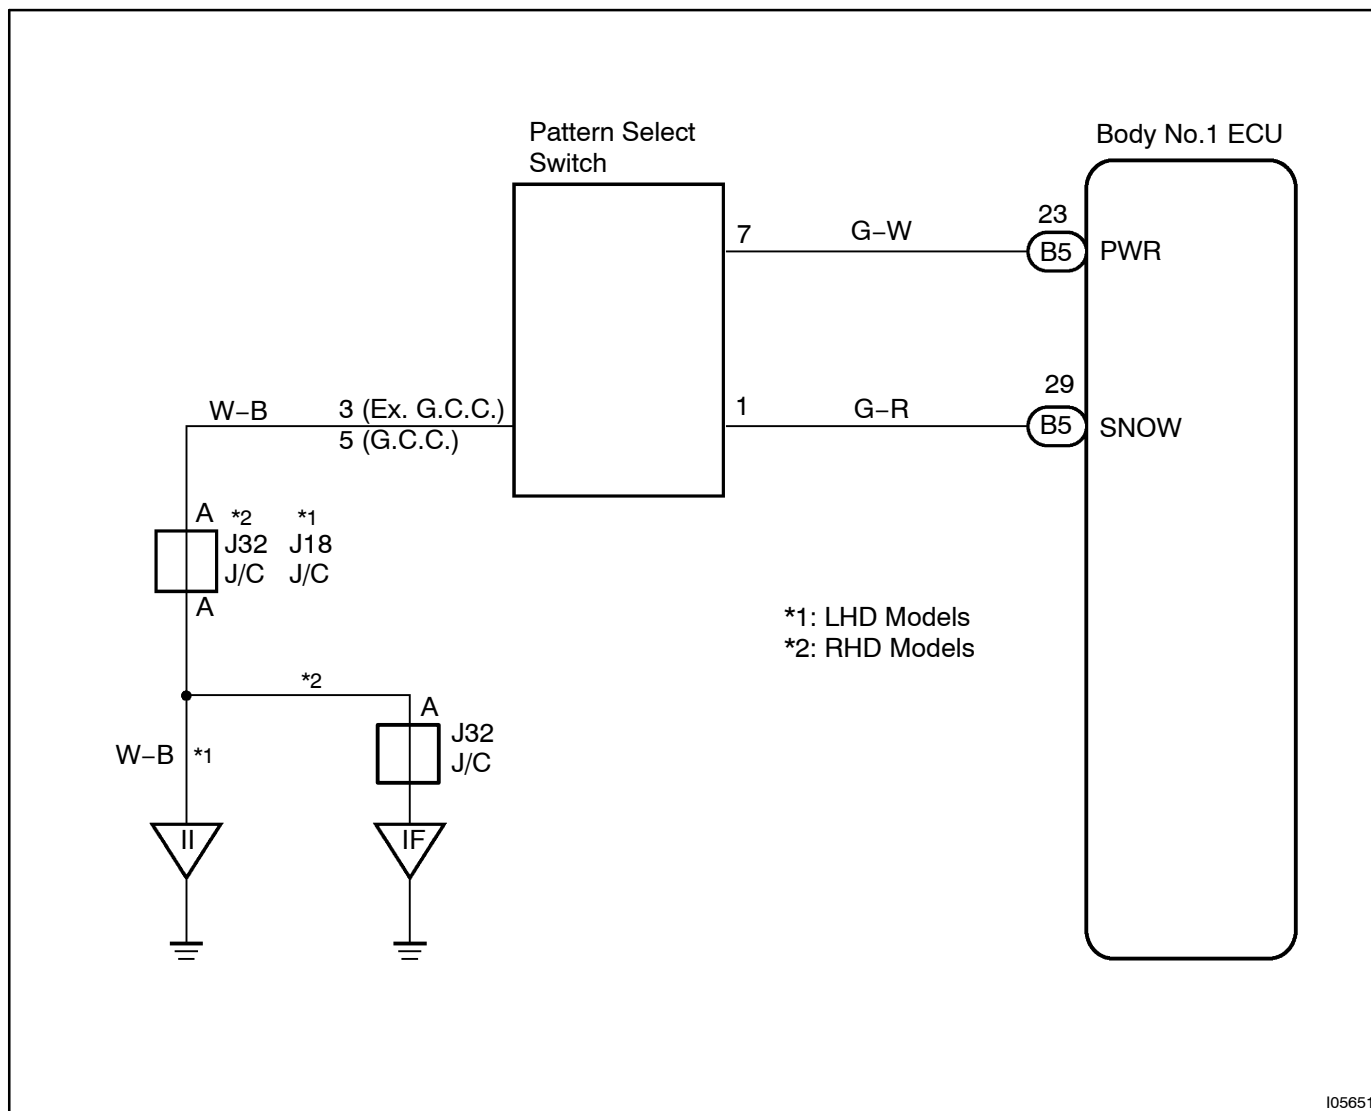

## INSPECTION PROCEDURE

### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

**1** Check pattern select switch using LEXUS hand-held tester.

### PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

### CHECK:

Check the pattern select switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-151)

NG

**2** Check pattern select switch. (See page DI-201)

NG

Replace the pattern select switch.

OK

**3** Check wireharness and connector between pattern select switch and body No.1 ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-151)