

## REMOVAL


### 1. REMOVE LUGGAGE COMPARTMENT DOOR

- (a) Disconnect the connector.
- (b) Using a clip remover, disconnect the clamps.
- (c) Remove the 4 bolts and door.

**Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)**


### 2. REMOVE THESE PARTS:

- (a) Luggage compartment floor mat
- (b) Rear floor finish plate
- (c) Side luggage compartment trim cover
- (d) Front luggage compartment trim cover
- (e) No.1 luggage compartment trim cover
- (f) Room partition trim cover
- (g) Rear seat  
(See page BO-11)
- (h) Seat belt
- (i) Package tray trim
- (j) Room partition trim
- (k) Speaker grille
- (l) Rear door scuff plate
- (m) Opening trim
- (n) Rear seat side garnish

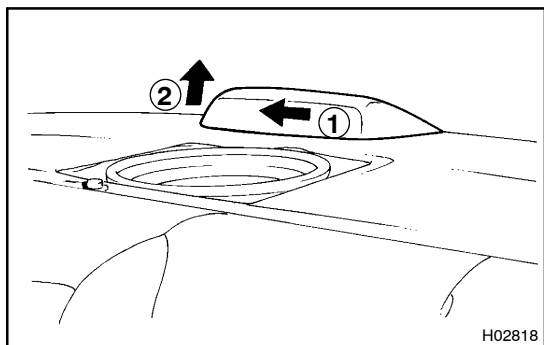

### 3. REMOVE HIGH-MOUNTED STOP LIGHT

- (a) Slide the light as shown in the illustration.
- (b) Remove the stop light, then disconnect the connector.

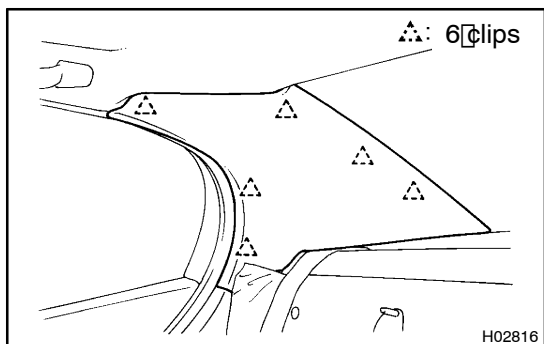


### 4. REMOVE ROOF SIDE INNER GARNISH

Remove the roof side inner garnish.

**HINT:**


Tape the screwdriver tip before use.

### 5. REMOVE PACKAGE TRAY TRIM

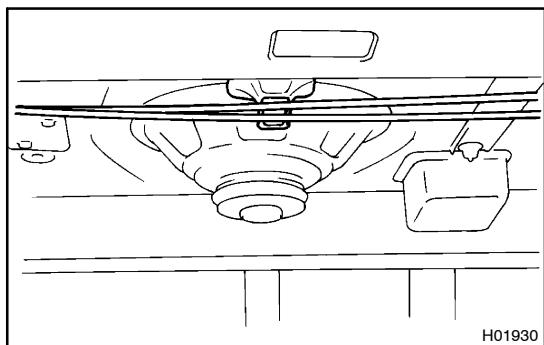


## 6. REMOVE TORSION BAR


- (a) Remove the torsion bars from the center bracket.

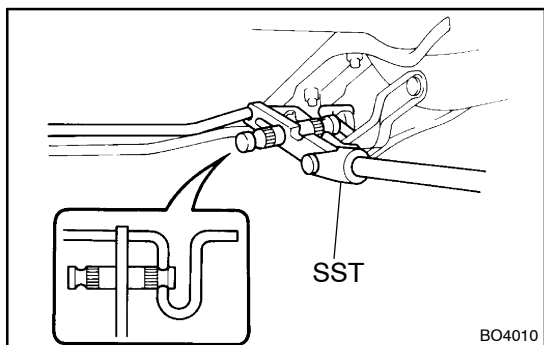


- (b) Install SST to the torsion bar on the hinge side.  
SST 09804-24010

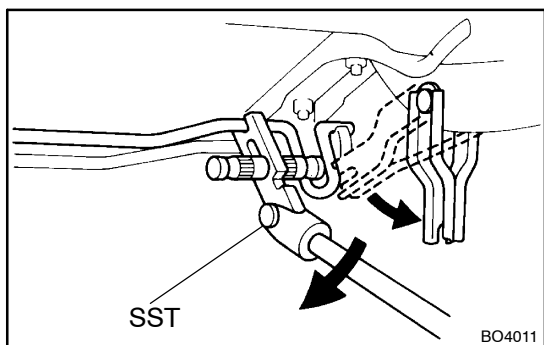


- (c) Push down on SST, and pull the luggage compartment door hinge from the torsion bar.

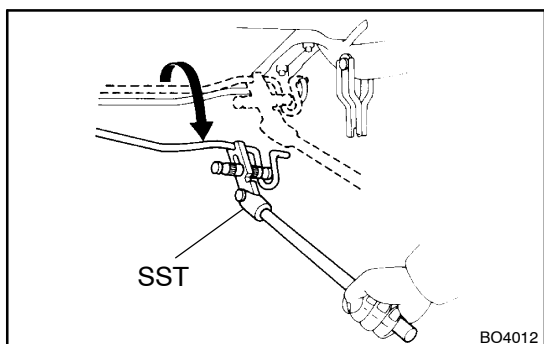

- (d) Slowly lift SST, and remove the torsion bar from the torsion bar bracket with SST.

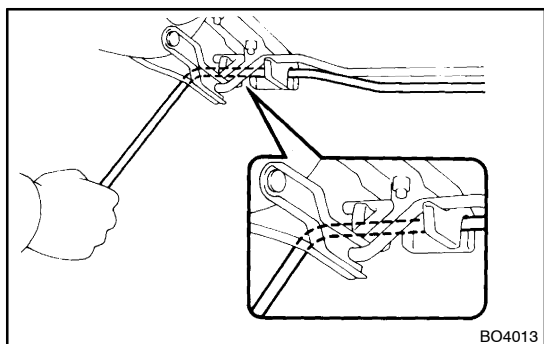

- (e) Disconnect the torsion bar from the bracket.  
(f) Do the same for the other side.

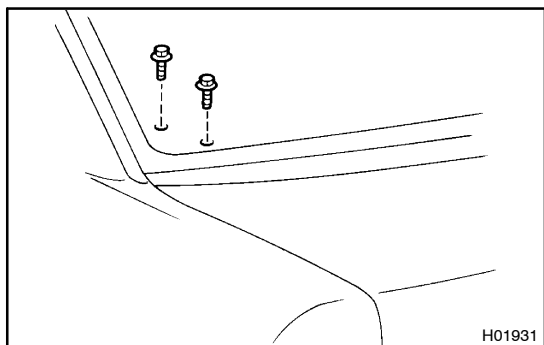**7. REMOVE LUGGAGE COMPARTMENT DOOR HINGE**

- (a) Remove the 4 bolts.
- (b) Remove the hinge.

**Torque: 12.5 N·m (127 kgf·cm, 9 ft·lbf)**