


BLOWER MOTOR REMOVAL

1. REMOVE No. 2 UNDER COVER
(See page BO-91)

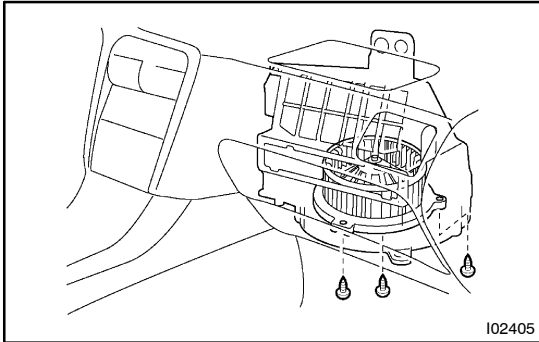

2. REMOVE BLOWER MOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and blower motor.