


## Connector Joining Wire Harness and Wire Harness

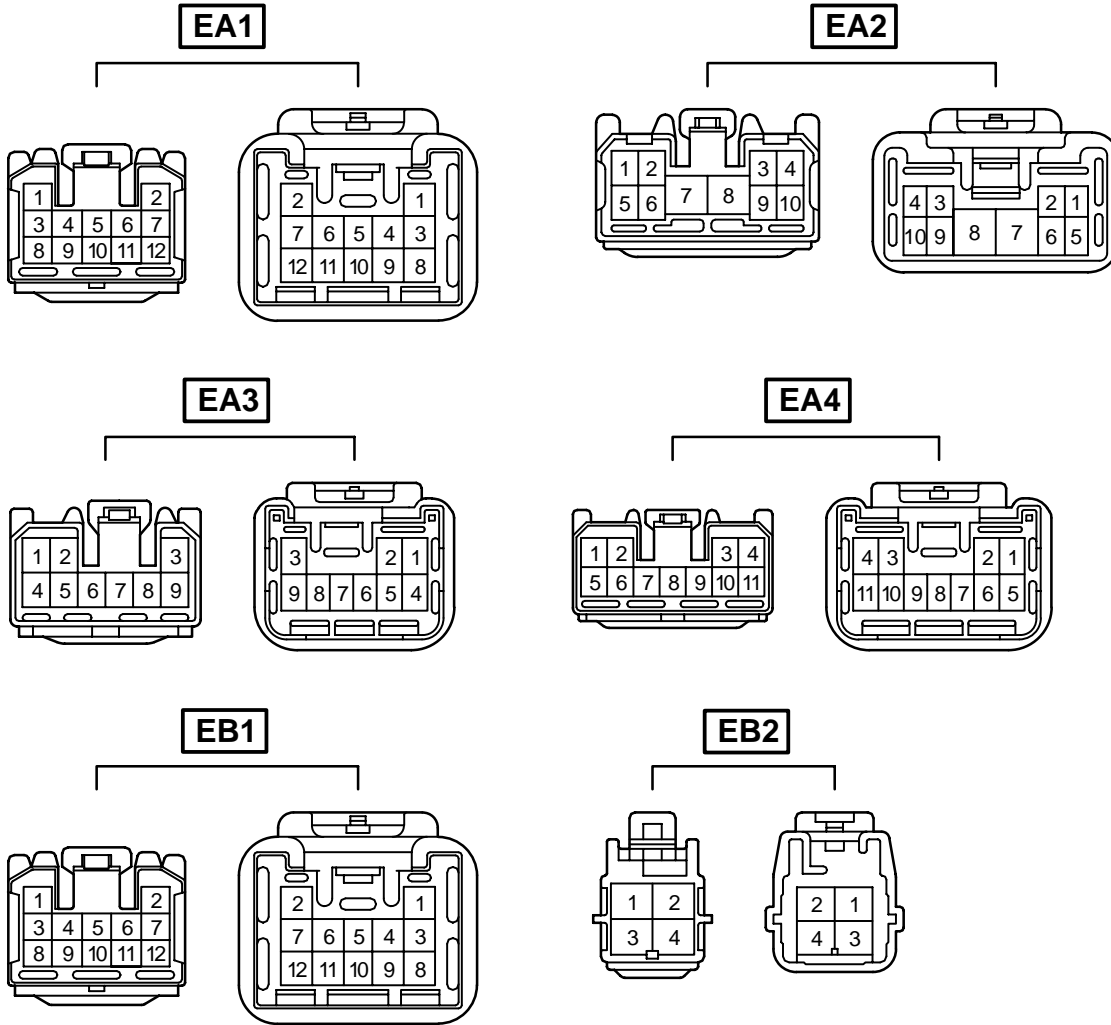

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA2	
EA3	
EA4	
EB1	Cowl Wire and Relay Block Wire (Inside of the Engine Room No.3 R/B)
EB2	