


## E ELECTRICAL WIRING ROUTING

### Position of Parts in Seat

[LHD]

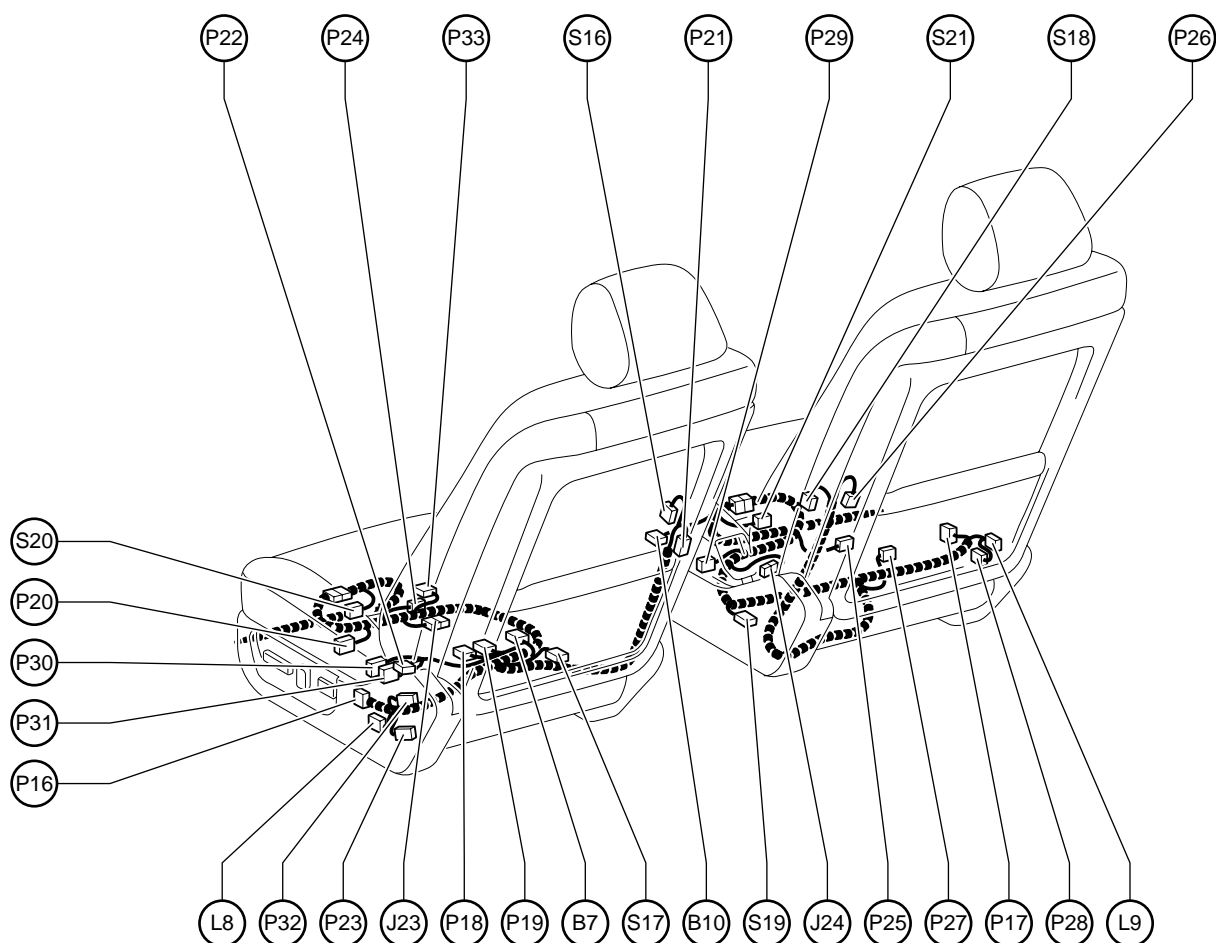

B 7 Buckle SW LH  
B 10 Buckle SW RH and  
Seat Belt Warning Occupant Detection Sensor

J 23 Junction Connector  
J 24 Junction Connector

L 8 Lumbar Support Control SW (Driver's Seat)  
L 9 Lumbar Support Control SW (Front Passenger's Seat)

P 16 Power Seat Control SW (Driver's Seat)  
P 17 Power Seat Control SW (Front Passenger's Seat)  
P 18 Power Seat ECU  
P 19 Power Seat ECU  
P 20 Power Seat Motor (Driver's Seat Front Vertical Control)  
P 21 Power Seat Motor  
(Driver's Seat Lumbar Support Control)  
P 22 Power Seat Motor (Driver's Seat Rear Vertical Control)  
P 23 Power Seat Motor (Driver's Seat Reclining Control)  
P 24 Power Seat Motor (Driver's Seat Slide Control)  
P 25 Power Seat Motor  
(Front Passenger's Seat Front Vertical Control)  
P 26 Power Seat Motor  
(Front Passenger's Seat Lumbar Support Control)

P 27 Power Seat Motor  
(Front Passenger's Seat Rear Vertical Control)  
P 28 Power Seat Motor  
(Front Passenger's Seat Reclining Control)  
P 29 Power Seat Motor  
(Front Passenger's Seat Slide Control)  
P 30 Power Seat Position Sensor  
(Driver's Seat Front Vertical Control)  
P 31 Power Seat Position Sensor  
(Driver's Seat Rear Vertical Control)  
P 32 Power Seat Position Sensor  
(Driver's Seat Reclining Control)  
P 33 Power Seat Position Sensor  
(Driver's Seat Slide Control)

S 16 Seat Heater (Driver's Seat Back)  
S 17 Seat Heater (Driver's Seat Cushion)  
S 18 Seat Heater (Front Passenger's Seat Back)  
S 19 Seat Heater (Front Passenger's Seat Cushion)  
S 20 Side Airbag Squib LH  
S 21 Side Airbag Squib RH