


Driver buckle switch circuit

WIRING DIAGRAM

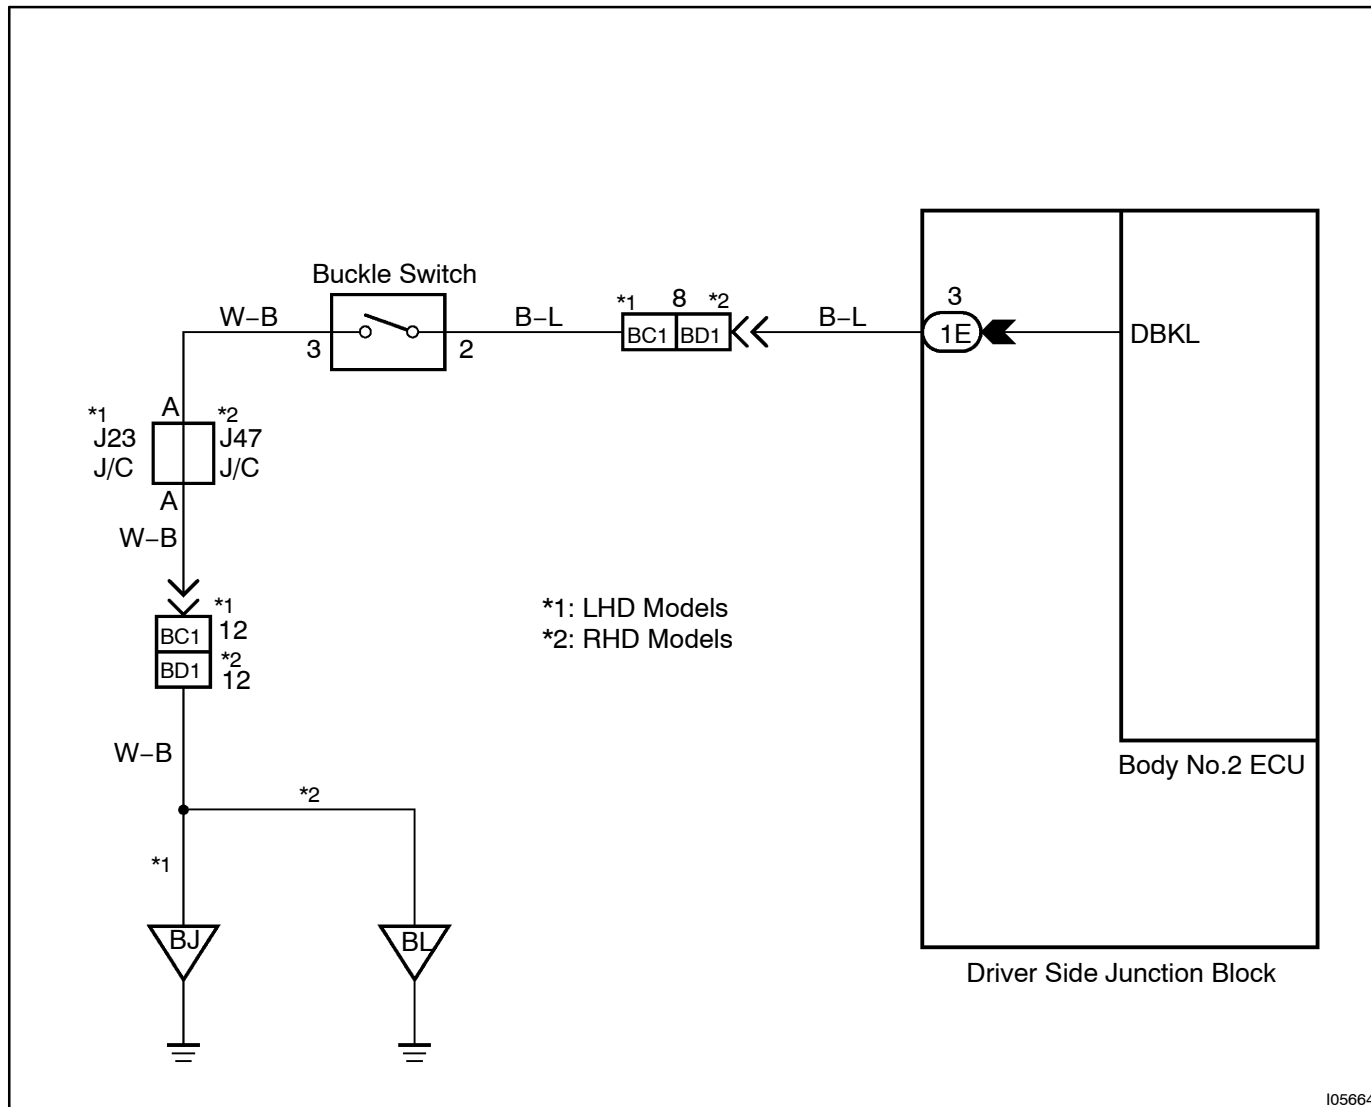

I05664

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check driver buckle switch using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the driver buckle switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-660)

NG

2 Check driver buckle switch (See page BE-105)

NG

Replace the driver buckle switch.

OK

3 Check wireharness and connector between driver buckle switch and body No.2 ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-660)