


O/D DIRECT CLUTCH SPEED SENSOR

ATOXW-02

ON-VEHICLE REPAIR

1. **3UZ-FE Engine only:**
REMOVE FRONT EXHAUST PIPE ([See page EM-119](#))

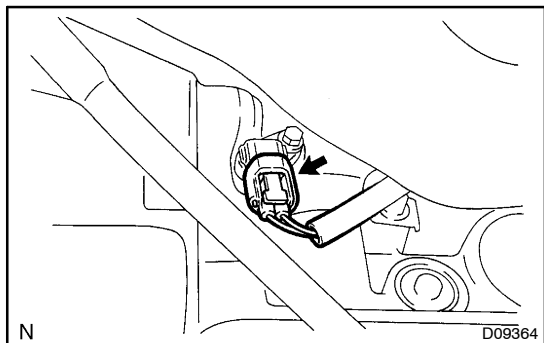

2. **DISCONNECT O/D DIRECT CLUTCH SPEED SENSOR CONNECTOR**
3. **REMOVE O/D DIRECT CLUTCH SPEED SENSOR**
 - (a) Remove the bolt and O/D direct clutch speed sensor.
 - (b) Remove the O-ring from the O/D direct clutch speed sensor.
4. **INSTALL O/D DIRECT CLUTCH SPEED SENSOR**
 - (a) Coat a new O-ring with ATF and install it to the O/D direct clutch speed sensor.
 - (b) Install the O/D direct clutch speed sensor to the transmission case and torque the bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
5. **CONNECT O/D DIRECT CLUTCH SPEED SENSOR CONNECTOR**
6. **3UZ-FE Engine only:**
INSTALL FRONT EXHAUST PIPE ([See page EM-119](#))