

INSPECTION


1. INSPECT THEFT/DETERRENT INDICATOR LIGHT OPERATION

Connect the positive (+) lead from the battery terminal 2 and negative (-) lead to terminal 5, and check that the warning light lights up.

If operation is not as specified, replace the light control rheostat.

2. INSPECT THEFT/DETERRENT INDICATOR LIGHT CIRCUIT

(See page DI-644)

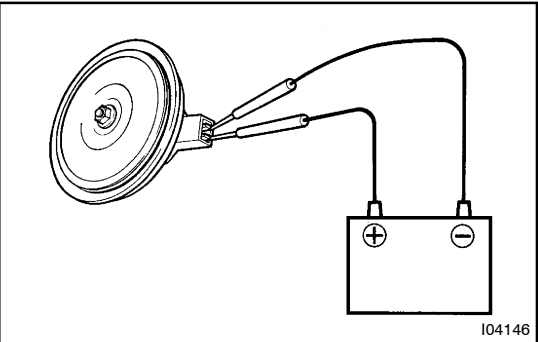


3. INSPECT THEFT/DETERRENT HORN OPERATION

Connect the positive (+) lead from the battery to the terminal 1 and negative (-) lead to the theft deterrent horn body, and check that the theft deterrent horn blows.

If operation is not as specified, replace the horn.

4. INSPECT THEFT/DETERRENT HORN CIRCUIT

(See page DI-640)

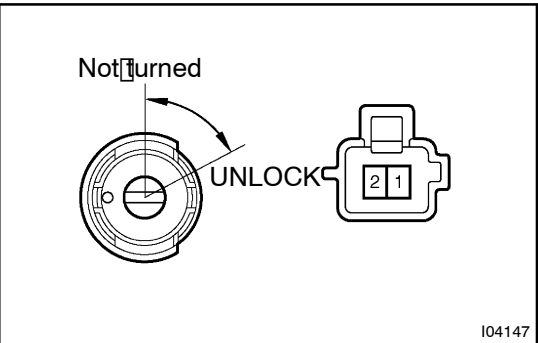


5. INSPECT LUGGAGE COMPARTMENT DOOR KEY UNLOCK SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Not turned	-	No continuity
UNLOCK	1 - 2	Continuity

If continuity is not as specified, replace the switch.

6. INSPECT LUGGAGE COMPARTMENT DOOR KEY UNLOCK SWITCH CIRCUIT

(See page DI-630)

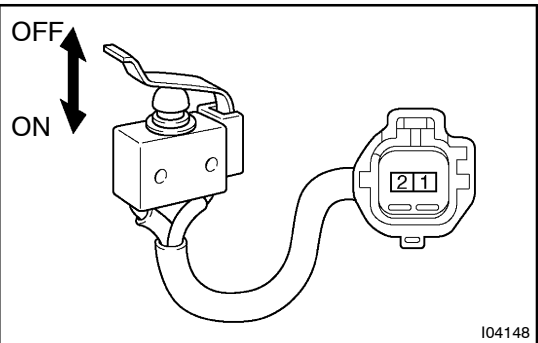

7. INSPECT ENGINE HOOD COURTESY SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	-	No continuity
UNLOCK	1 - 2	Continuity

If continuity is not as specified, replace the switch.

8. INSPECT ENGINE HOOD COURTESY SWITCH CIRCUIT

(See page DI-626)