


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 2JZ-GE]

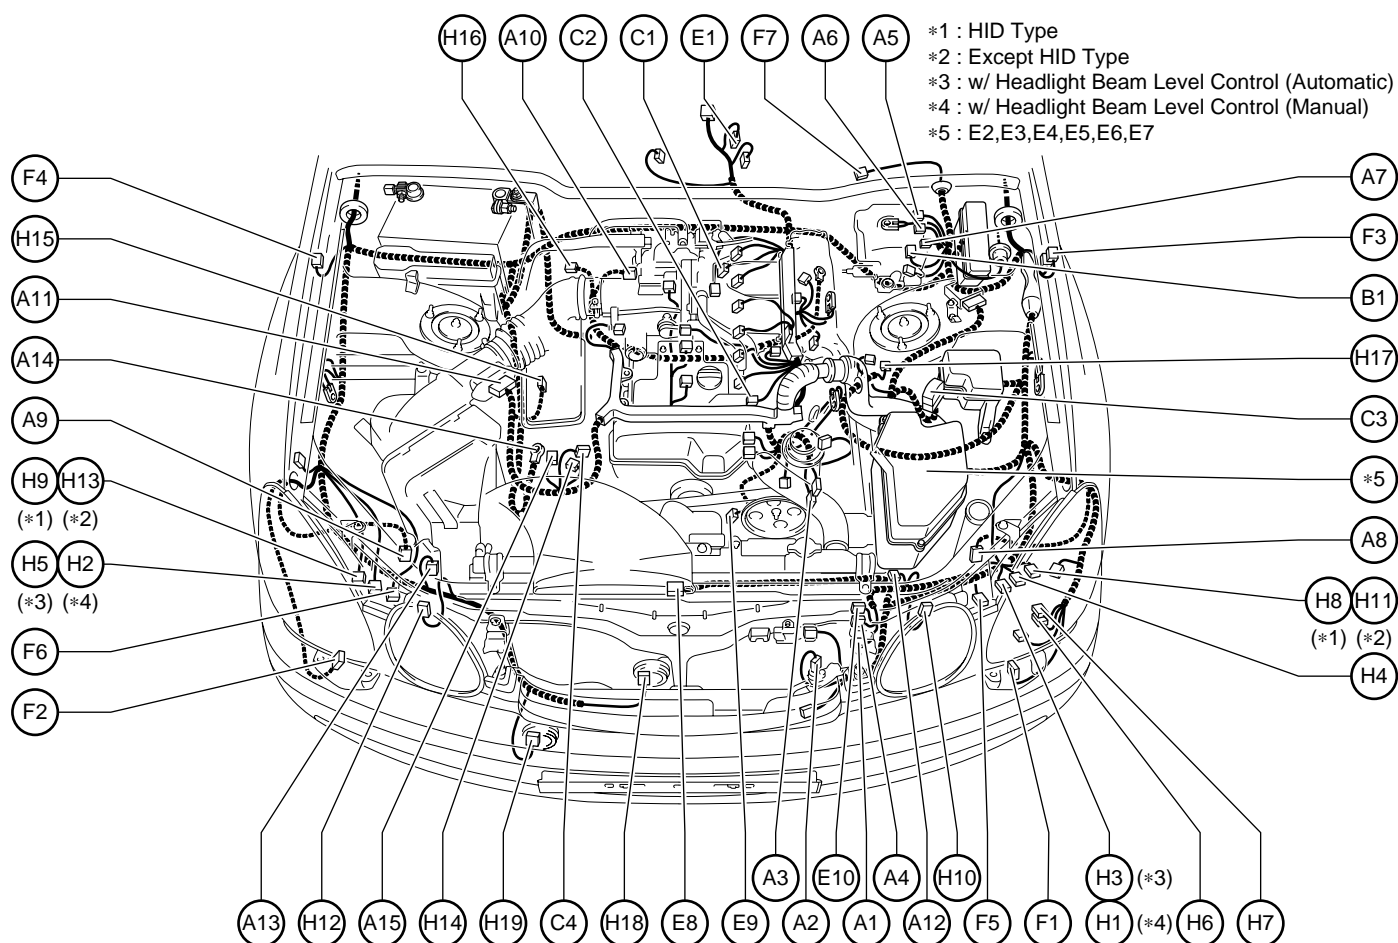

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 3 A/C Magnetic Clutch and Lock Sensor
 A 4 A/C Triple Pressure SW
 (A/C Dual and Single Pressure SW)
 A 5 ABS & TRC & VSC Actuator
 A 6 ABS & TRC & VSC Actuator
 A 7 ABS & TRC & VSC Actuator
 A 8 ABS Speed Sensor Front LH
 A 9 ABS Speed Sensor Front RH
 A10 Accel Position Sensor
 A11 Air Flow Meter
 A12 Airbag Sensor Front LH
 A13 Airbag Sensor Front RH
 A14 Alternator
 A15 Alternator

B 1 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
 C 2 Camshaft Timing Oil Control Valve
 C 3 Check Connector
 C 4 Crankshaft Position Sensor

E 1 ECT Solenoid
 E 2 Engine and ECT ECU
 E 3 Engine and ECT ECU
 E 4 Engine and ECT ECU
 E 5 Engine and ECT ECU
 E 6 Engine and ECT ECU
 E 7 Engine and ECT ECU

E 8 Engine Hood Courtesy SW
 E 9 Engine Oil Level Sensor
 E10 Exhaust Gas Sensor

F 1 Front Fog Light LH
 F 2 Front Fog Light RH
 F 3 Front Side Turn Signal Light LH
 F 4 Front Side Turn Signal Light RH
 F 5 Front Turn Signal and Clearance Light LH
 F 6 Front Turn Signal and Clearance Light RH
 F 7 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight Beam Level Control ECU
 H 4 Headlight Beam Level Control ECU
 H 5 Headlight Beam Level Control Motor
 H 6 Headlight Cleaner Control Relay
 H 7 Headlight Cleaner Motor
 H 8 Headlight Control ECU LH
 H 9 Headlight Control ECU RH
 H10 Headlight LH (High)
 H11 Headlight LH (Low)
 H12 Headlight RH (High)
 H13 Headlight RH (Low)
 H14 Heated Oxygen Sensor (Bank 1 Sensor 1)
 H15 Heated Oxygen Sensor (Bank 1 Sensor 2)
 H16 Heated Oxygen Sensor (Bank 2 Sensor 1)
 H17 Height Control Sensor (Front)
 H18 Horn LH
 H19 Horn RH