


BACK DOOR OPENING SIDE REINFORCE (CUT)

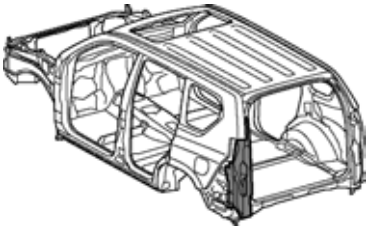

F43881A

With the quarter panel removed.

Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location
INSTALLATION	: Plug Weld	: Butt Weld

F43294B

REMOVAL-INSTALLATION

[LH]

70 (2.76)

: Cut and Join Location

-4  
 -4

-7  
 -7

-4  
 -4



-2  
 -2

mm (in.)

F43294

- INSTALLATION POINT
- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
  - 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

[LH]

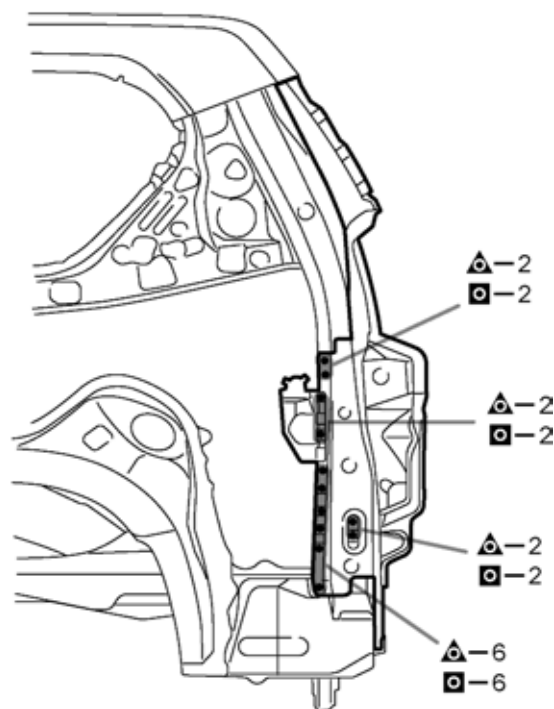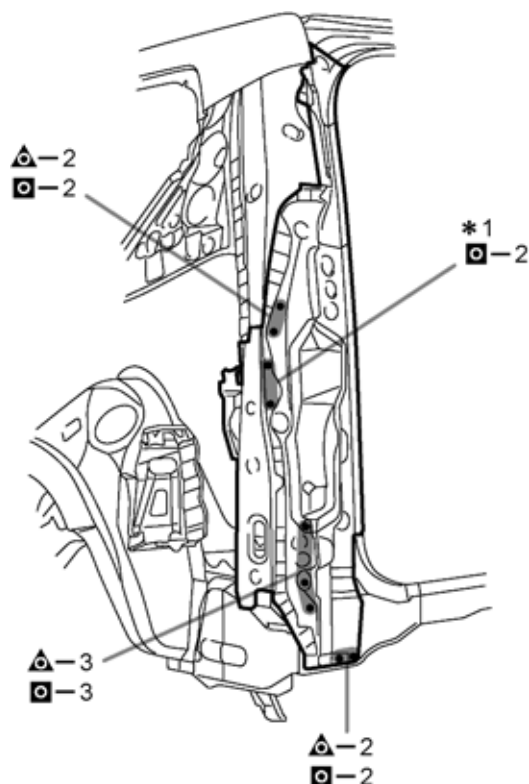




F43295

**INSTALLATION POINT**


- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 \*1 is only for installation.
- 4 After welding, apply body sealer to the corresponding parts. (See the paint-coating)
- 5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

## Symbol meaning

REMOVAL       : Remove Weld Points       : Cut and Join LocationINSTALLATION        : Plug Weld       : Butt Weld

F43294B

[RH]

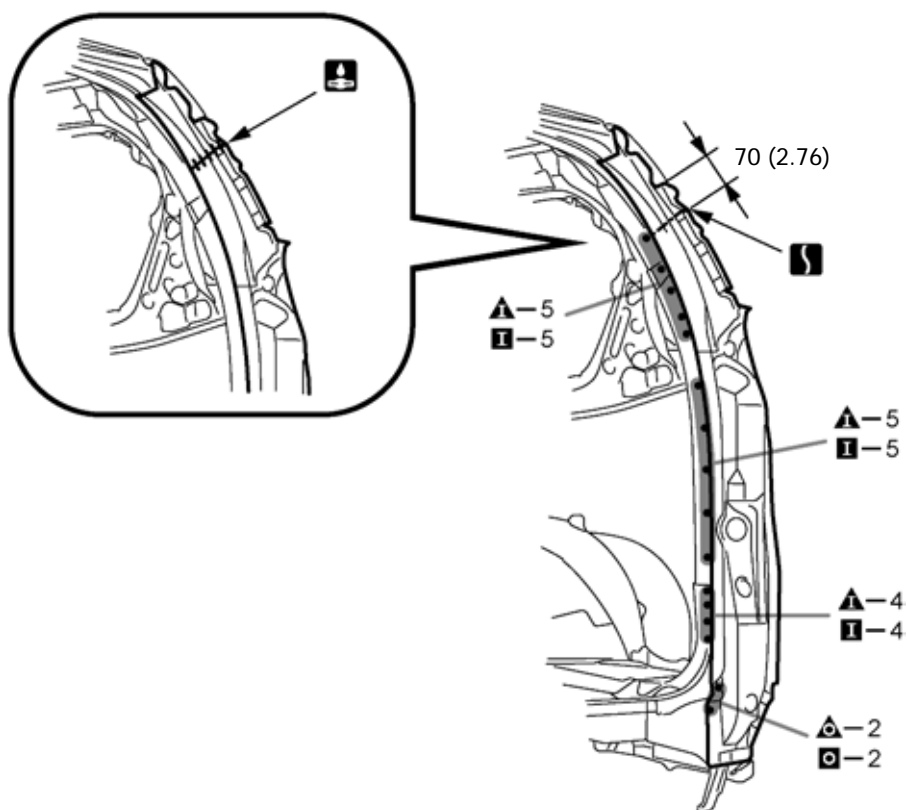


mm (in.)

F43296

**INSTALLATION POINT**

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

[RH]

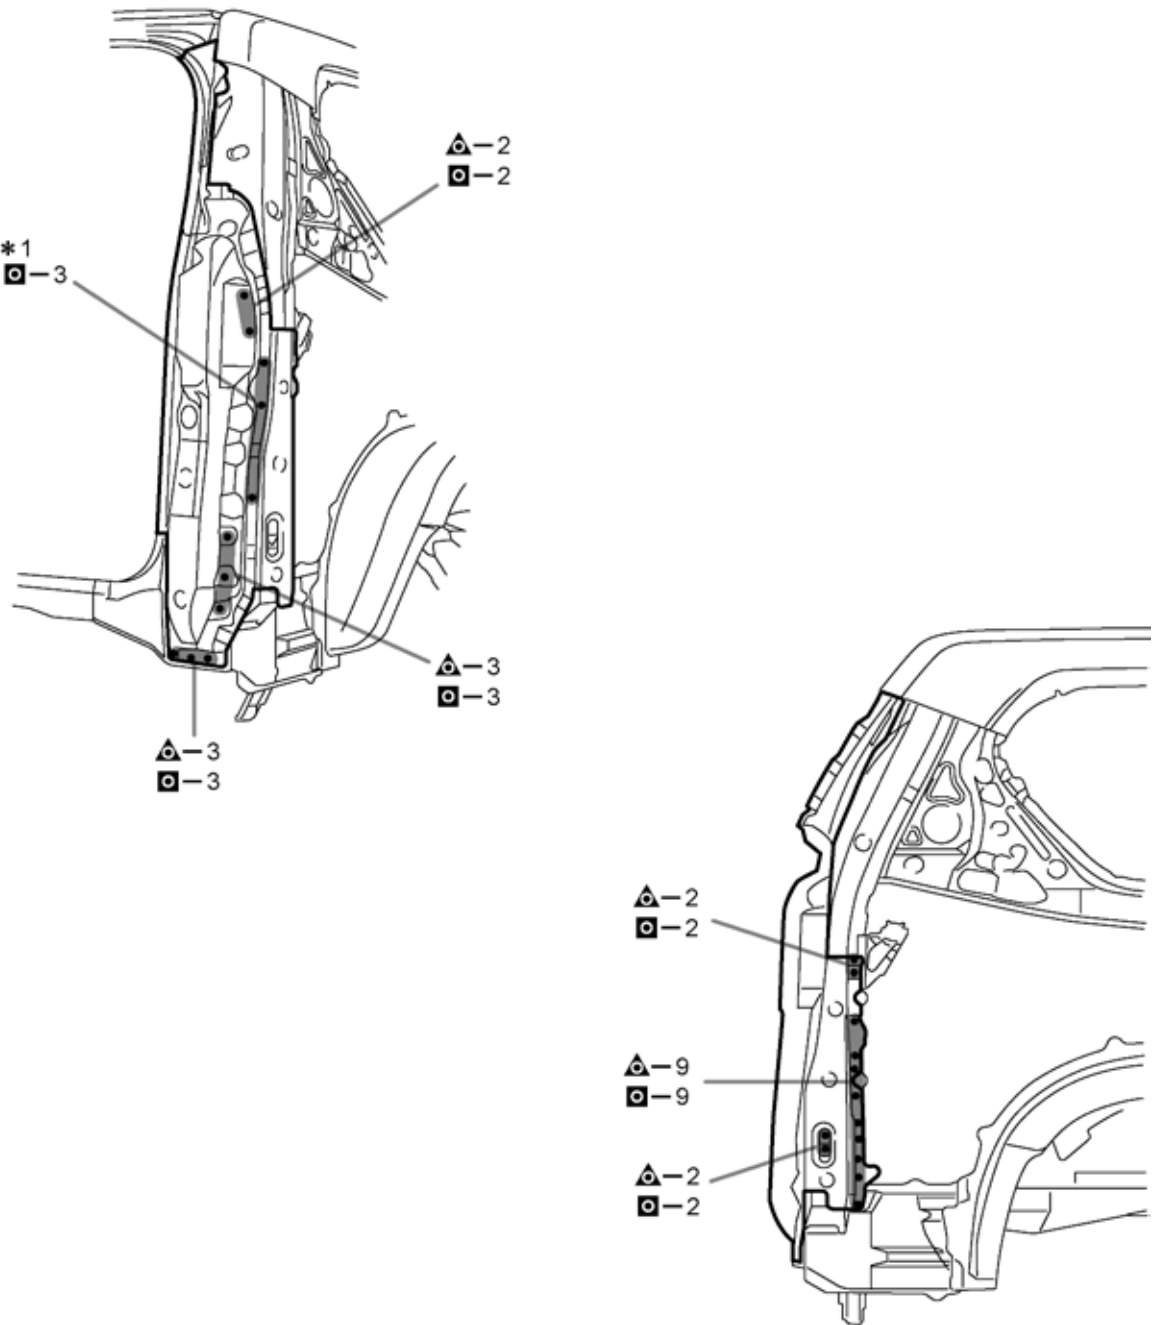

F43297

**INSTALLATION POINT**

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 \*1 is only for installation.
- 4 After welding, apply body sealer to the corresponding parts. (See the paint-coating)
- 5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.