


FRONT BODY PILLAR LOWER GUSSET (ASSY)

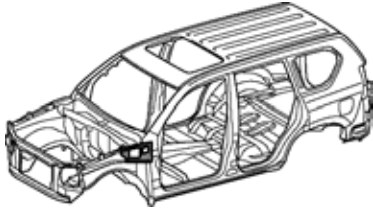

F43872A

Symbol meaning

REMOVAL



▲ ▲ : Remove Weld Points

INSTALLATION

◻ ■ : Plug Weld

F43231B

REMOVAL-INSTALLATION

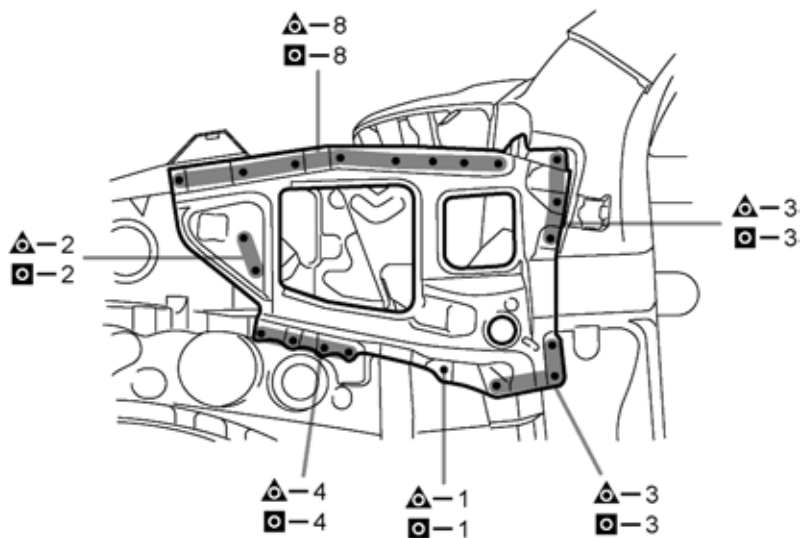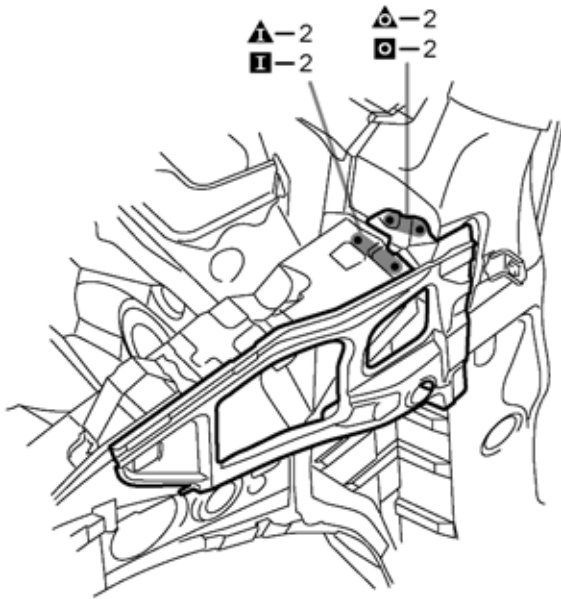

F43231

INSTALLATION POINT

- 1 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.