


# RADIATOR SUPPORT (ASSY)

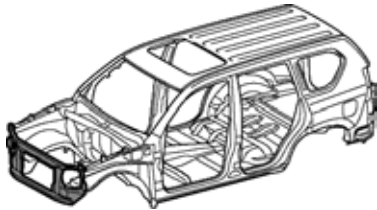

F43867A



## Symbol meaning

REMOVAL	△ : Remove Weld Points
INSTALLATION	◻ : Plug Weld

F43867B

## REMOVAL-INSTALLATION

[LH Side]

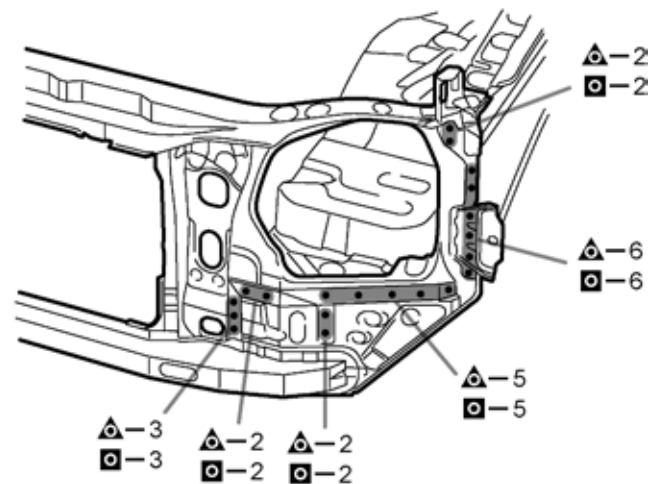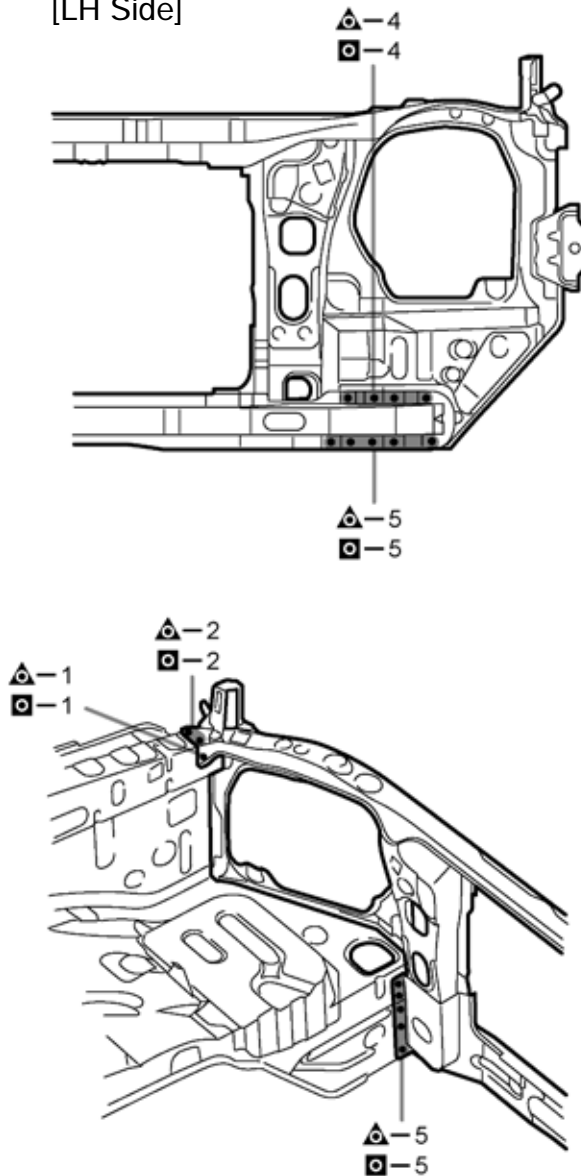


F43867

## INSTALLATION POINT


- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

## Symbol meaning

REMOVAL       : Remove Weld PointsINSTALLATION       : Plug Weld

F43867B


[RH Side]

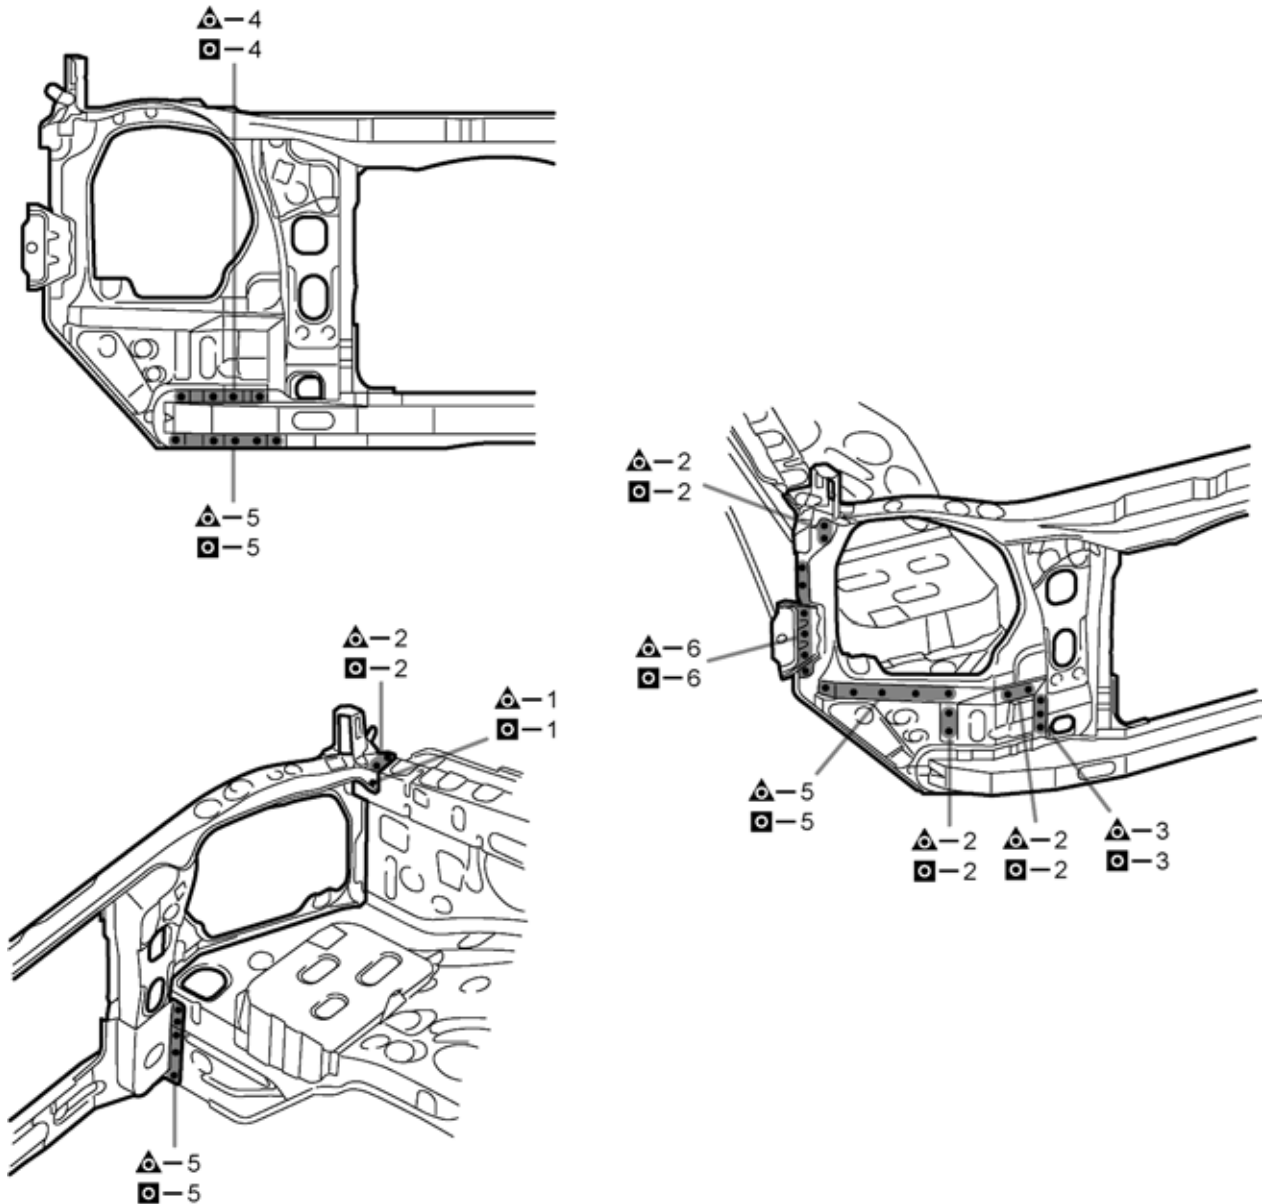

F43868

**INSTALLATION POINT**

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 After welding, apply body sealer to the corresponding parts. (See the paint-coating)
- 4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

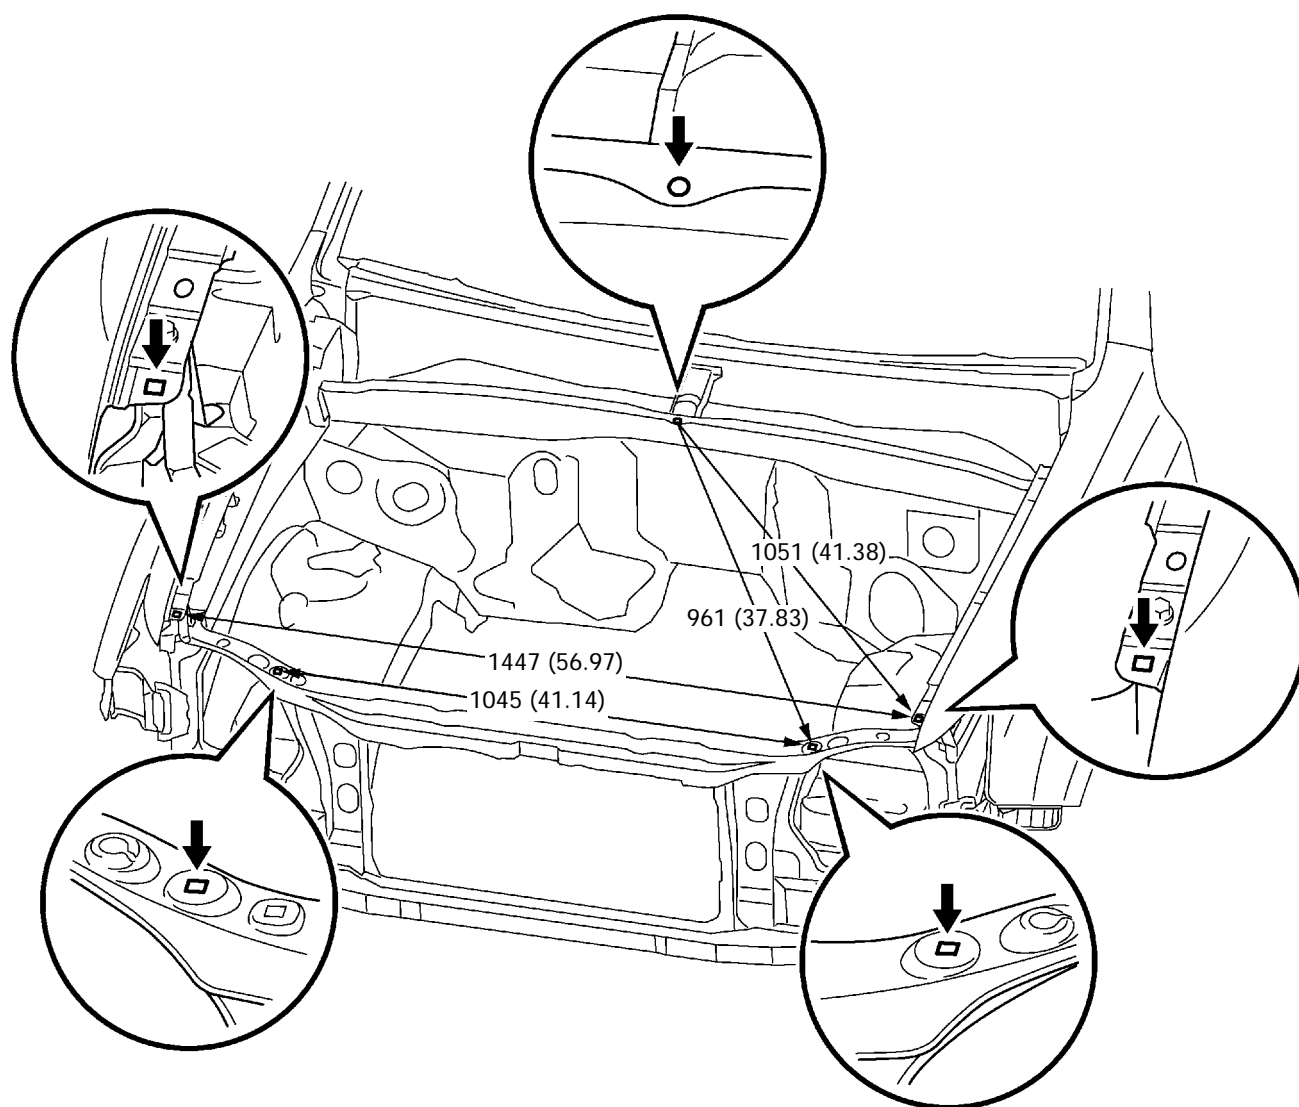

mm (in.)

F43869

**INSTALLATION POINT**

- 1 Measure the dimensions before installing the headlights.
- 2 These values are reference values.